


DENON

Hi-Fi AV Surround Receiver

SERVICE MANUAL

MODEL AVR-750/760/ 770/780

AV SURROUND RECEIVER

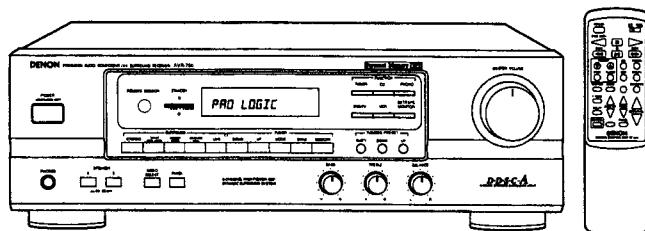

(Model: AVR-750)

The AVR-770/780 with gold panel and side wood boards.


— TABLE OF CONTENTS —

| | |
|---|-------|
| OPERATING INSTRUCTIONS | 2-8 |
| WIRE ARRANGEMENT | 9 |
| DISASSEMBLY | 10 |
| CONNECTION DIAGRAM OF MEASURING INSTRUMENTS | 11 |
| SEMICONDUCTORS | 12-19 |
| NOTE FOR PARTS LIST | 20 |
| PRINTED WIRING BOARD PARTS LIST | 21-31 |
| PRINTED WIRING BOARD PATTERNS | 32,33 |
| EXPLODED VIEW | 34 |
| PARTS LIST OF EXPLODED VIEW | 35 |
| ADDENDUM PARTS LIST | 35 |
| BLOCK DIAGRAM | 36 |
| WIRING DIAGRAM | 37 |
| REMOTE CONTROL UNIT (RC-840) | 38 |
| SCHEMATIC DIAGRAM | 39-43 |


● Some illustrations using in this service manual are slightly different from the actual set.

NIPPON COLUMBIA CO., LTD.

SAFETY PRECAUTIONS



CAUTION
 RISK OF ELECTRIC SHOCK
 DO NOT OPEN




CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

安全注意事項



CAUTION
 RISK OF ELECTRIC SHOCK
 DO NOT OPEN



注意：為減少觸電危險，切勿拆下機殼（或機背）。機身內並無用戶修理用零件。請交由專業修理人員修理本機。


三角形內有箭頭的閃電符號旨在提醒用戶，本產品機殼內有未經絕緣的危險電壓，其幅度足以使人觸電而發生危險。

三角形內加感嘆號旨在提醒用戶，有重要的操作與維修說明書配合本機。

警告：為減少著火或觸電危險，切勿讓本機受雨淋濕或受潮。

Make the following settings before connecting the components.
連接各設備之前請先進行下列設定。

- Setting the line voltage (AVR-750/770)
- 設定電源電壓 (AVR-750/770)

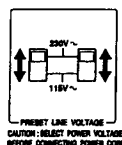









- The customer can set the VOLTAGE SELECTORS on the back panel for appropriate line voltage by using a screwdriver.
- Do not use excessive force in setting the VOLTAGE SELECTOR KNOB — you may damage it.
- If the VOLTAGE SELECTOR KNOB does not move smoothly, contact your store of purchase.
- 用戶可利用螺絲起子將機背的VOLTAGE SELECTORS (電壓選擇器) 設定到適當的電壓電壓。
- 旋轉電壓選擇器時請勿太用力，以免損壞。
- 如果電壓選擇器旋轉時不順，請向你們購入本機的商號查詢。



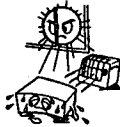



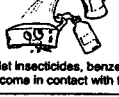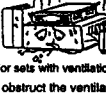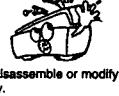


CAUTION:

- Be sure to set both voltage selectors to same position.
- 各電壓選擇器均須設定到同樣的位置。

NOTE ON USE

| | | |
|--|---|--|
|  <p>• Avoid high temperatures. Allow for sufficient heat dispersion when installed on a rack.</p> |  <p>• Keep the set free from moisture, water, and dust.</p> |  <p>• Do not let foreign objects in the set.</p> |
|  <p>• Handle the power cord carefully. Hold the plug when unplugging the cord.</p> |  <p>• Unplug the power cord when not using the set for long periods of time.</p> |  <p>• Do not let insecticides, benzene, and thinner come in contact with the set.</p> |
|  <p>• (For sets with ventilation holes) • Do not obstruct the ventilation holes.</p> |  <p>• Never disassemble or modify the set in any way.</p> | |

使用注意事項

| | | |
|--|---|---|
|  <p>防止高溫</p> <ul style="list-style-type: none"> 勿將本機放置於烈日曝曬或靠近發熱器材的位置。 |  <p>注意濕氣、水和塵</p> <ul style="list-style-type: none"> 勿將本機放置於溫度很高或多塵的位置。花籃或具有水的物件均不宜置在本機上方。 |  <p>勿讓雜物掉入機內</p> <ul style="list-style-type: none"> 特別要留意勿鋼針、髮夾、硬幣等進入本機。 |
|  <p>機架/機箱安裝注意</p> <ul style="list-style-type: none"> 避免將本機裝於密封的機架內。 裝於機架或機箱時，要配備足夠大的通風孔，以加強散熱。 |  <p>當你外出時</p> <ul style="list-style-type: none"> 長時間不用本機時，例如外出旅行時，請將插頭拔離電源插座。 |  <p>保護機殼</p> <ul style="list-style-type: none"> 避免在本機附近噴灑殺蟲劑，也勿用汽油、天拿水或其它溶劑抹機殼，因這噴液易引起品質或顏色改變。抹機殼要用軟布，在用化學處理過的布指抹時請小心遵守說明書規定。 |
|  <p>留意電源線</p> <ul style="list-style-type: none"> 從插頭拔出插頭時切勿拉電源線，應抓握住插頭將其拔出。 |  <p>勿堵塞機殼的通風孔</p> <ul style="list-style-type: none"> 堵塞通風孔會損壞本機。 各通風孔對本機內部散熱異常重要，必須特別留意，若通風孔有物件阻塞，就會使機內溫度升高而損壞。 |  <p>勿打開機殼</p> <ul style="list-style-type: none"> 打開機殼頂蓋或底蓋，及伸手入機殼內部是危險的。切勿打開機殼。如果本機表現有不妥當時，宜立刻拔下電源插頭，再向購入本機之商店或鄰近經銷商聯絡。 |

- We greatly appreciate your purchase of the AVR-750/760/770/780.
 ■ To be sure you take maximum advantage of all the features the AVR-750/760/770/780 has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference should any questions or problems arise.

"SERIAL NO. _____"
 PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE
 CABINET FOR FUTURE REFERENCE"


TABLE OF CONTENTS

| | | | |
|---|------|--|-------|
| 1 Introduction | 4 | 4-6 Recording the program source | 10 |
| 2 Connections | 5 | 4-7 Front panel display | 10 |
| 2-1 Connecting the audio components | 5 | 4-8 Using the surround function | 10-12 |
| 2-2 Speaker system connections | 6 | 5 Listening to the radio | 12 |
| 2-3 Connecting the video components | 6 | 5-1 Setting the frequency step | 12 |
| 2-4 Connecting the antenna terminals | 7 | 5-2 Auto preset memory | 12 |
| 3 Remote Control Unit | 7, 8 | 5-3 Auto tuning | 12 |
| 4 Operations | 8 | 5-4 Manual tuning | 13 |
| 4-1 Preparations for playback | 8 | 5-5 Preset memory | 13 |
| 4-2 Playing the program source (Stereo playback) | 9 | 5-6 Recalling preset stations | 13 |
| 4-3 Simulcast playback | 9 | 6 Initialization of the Microprocessor | 13 |
| 4-4 Using the muting function | 9 | 7 Last function memory | 14 |
| 4-5 Listen with headphones | 9 | 8 Troubleshooting | 14 |
| | | 9 Specifications | 15 |

ACCESSORIES

Check that the following parts are included in addition to the main unit:

| | | | |
|--------------------------------------|---|---------------------------|---|
| 1 Operating instructions | 1 | 4 AM loop antenna | 1 |
| 2 Remote control unit (RC-840) | 1 | 5 FM indoor antenna | 1 |
| 3 R6P/AA batteries | 2 | 6 Plug adaptor | 1 |
| | | (AVR-750/770) | |

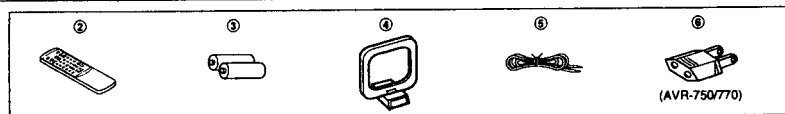


1 INTRODUCTION

INSTALLATION PRECAUTIONS

Using this receiver or other electronic equipment containing microprocessors simultaneously with a tuner or TV may result in noise in the sound or picture.

If this should happen, take the following steps:

- Install this unit as far as possible from the tuner or TV set.
- Keep the antenna lines of the tuner or TV as far as possible from the receiver's power cord and connection cables.
- This problem is especially frequent when using indoor antennas. We recommend using outdoor antennas and 75 Ω ohms coaxial cables.

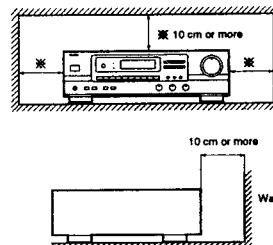

For heat dispersal, leave at least 10 cm of space between the top, back and sides of this unit and the wall or other components.

CAUTION:

Whenever the POWER operation switch is in the OFF position, the unit is still connected on AC line voltage. Please be sure to unplug the cord when you leave home for, say, a vacation.

2 CONNECTIONS

- Do not plug in the power cord until all connections have been completed.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Insert the plugs securely. Incomplete connections will result in the generation of noise.
- Note that binding pin plug cords together with power cords or placing them near a power transformer will result in the introduction of hum or other noise.
- Noise or humming may be generated if a connected component is used independently without turning the power of the AVR-750/760/770/780 on. If this happens, turn on the power of the AVR-750/760/770/780.


2-1 Connecting the audio components

NOTE:

This unit cannot be used with MC cartridges directly. Use a separate head amplifier or step-up transformer.


Precautions when connecting speakers

If a speaker is placed near a TV or video monitor, the colors on the screen may be disturbed by the speaker's magnetism. If this should happen, move the speaker away to a position where it does not have this effect.

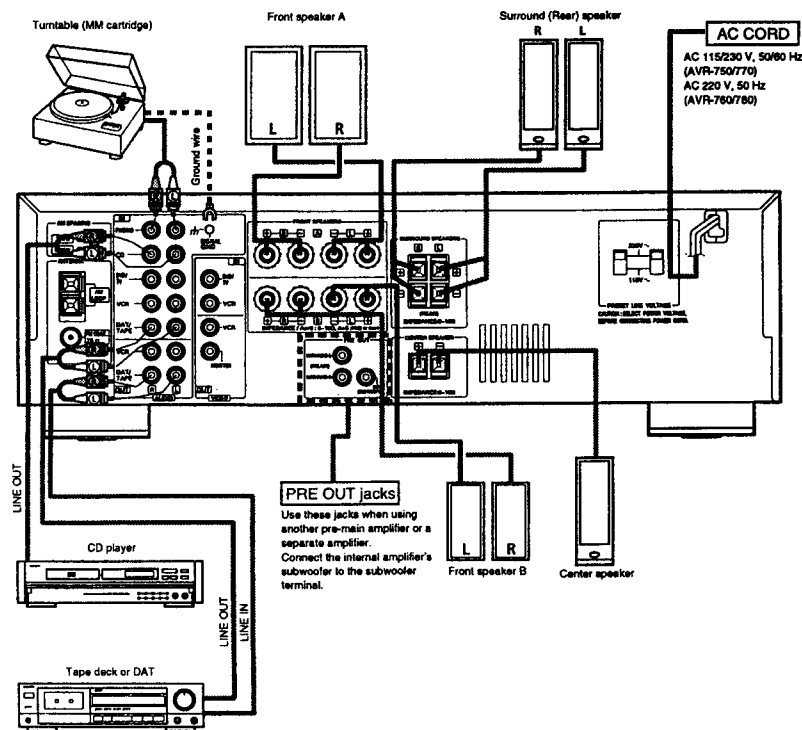


2-2 Speaker System Connections

- This unit can accommodate connections of a total of seven speakers including two sets of front speakers (A and B), one set of SURROUND (REAR) speakers, and one center speaker.
- Connect the speaker terminals with the speakers making sure that like polarities are matched (⊕ with ⊕, ⊖ with ⊖). Mismatching of polarities will result in weak central sound, unclear orientation of the various instruments, and the sense of direction of the stereo being impaired.
- When making connections, take care that none of the individual conductors of the speaker cord come in contact with adjacent terminals, with other speaker cord conductors, or with the rear panel.
- Speaker Impedance**
 - When speaker systems A and B are used separately, speakers with an impedance of from 8 to 16 Ω/ohms can be connected.
 - When using with two pairs of speakers (A + B), use speakers with an impedance of 16 Ω/ohms or greater.
 - Speakers with an impedance of 8 to 16 Ω/ohms can be connected for use as center and SURROUND (REAR) speakers.
 - The protection circuit may operate or damage may occur when speakers with an impedance outside of the above range are used.


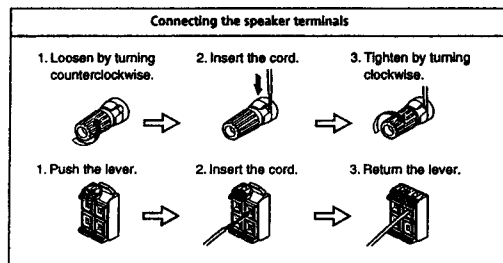


2-3 Connecting the video components

To connect the video signal, connect using a 75 Ω/ohms video signal cable cord. Using an improper cable can result in a drop in sound quality.

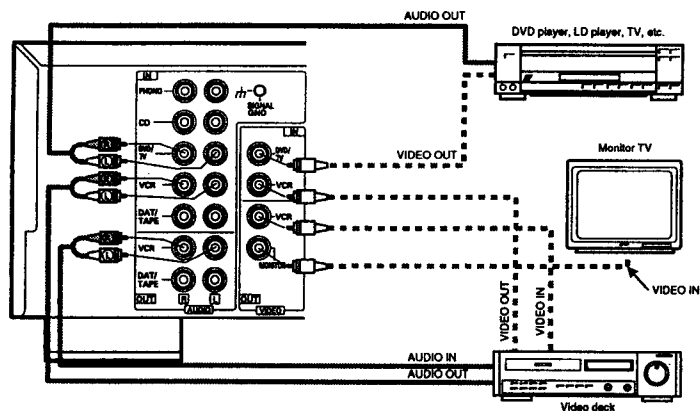

2-4 Connecting the antenna terminals

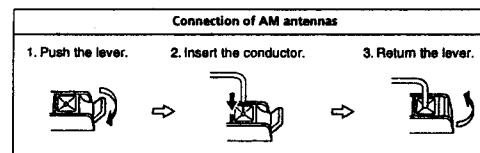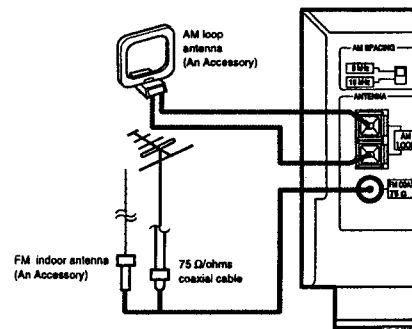

ANTENNA INSTALLATION

- FM ANTENNA**
The supplied FM antenna can be used inside wooden houses for receiving local FM stations and other strong FM signals. Stretch out the ends of the antenna and mount the antenna on the wall or ceiling where optimum reception is achieved. A indoor FM antenna may not consistently ensure stable reception, due to environment changes. In such cases, the indoor FM antenna should only be used temporarily until an outdoor FM antenna has been installed. When connecting an outdoor FM antenna, the use of 75 Ω/ohms coaxial cable (3C - 2V, 5C - 2V) is strongly recommended.

- AM ANTENNA**
Tune in an AM station (refer to page 12, 13) listen to the sound, then install the antenna in a position as far from the set as possible in which distortion and noise are minimum. Good reception of AM stations is not possible if the loop antenna is not connected or if it is touching metal objects.


- NOTES**
- This receiver has a full back-up system. When the power is turned on, the INPUT SELECTOR buttons are set to the last mode set before the power was turned off.
 - When using this receiver in close proximity to video equipment (TV, VCR, DVD, etc.), noise may be generated in AM broadcasts. To avoid this, keep the receiver as far away from other video components as possible, or place the AM loop antenna where noise is reduced. If the noise is not reduced, turn off the power of the video components when listening to AM broadcasts.

Note to CATV system installer:
This reminder is provided to call the CATV system installer's attention to Article 820 - 40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

3 REMOTE CONTROL UNIT

Following the procedure outlined below, insert the batteries before using the remote control unit.

Range of operation of the remote control unit

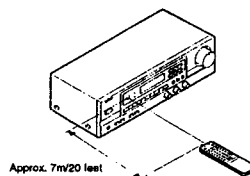


Point the remote control unit at the remote control sensor as shown on the diagram at the left.

NOTES:

- The remote control unit can be used from a straight distance of approximately 7 meters/20 feet, but this distance will shorten or operation will become difficult if there are obstacles between the remote control unit and the remote control sensor, if the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

Inserting the batteries


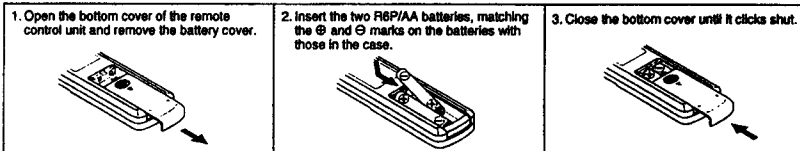


NOTES:

- Use only AA, R6P, UM-3 batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
- Have replacement batteries on hand so that the old batteries can be replaced as quickly as possible when the time comes.

■ System code buttons


DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, cannot be operated with this remote control unit.

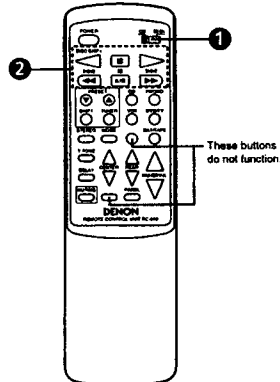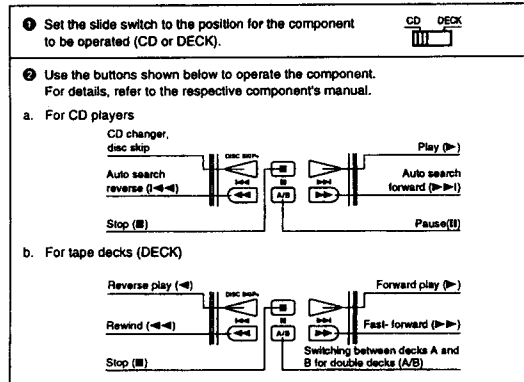

4 OPERATIONS

4-1 Preparations for playback


- Check that all connections are proper.
- Set to the minimum position.

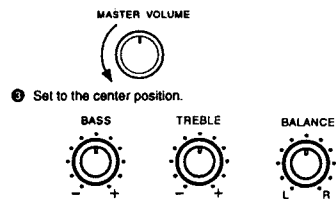


- Turn on the power.
Press the POWER operation switch (button).



- ON/STANDBY**
The power turns on and "STANDBY" indicator is lit. Several seconds are required from the time the POWER operation switch is set to the "ON/STANDBY" position until sound is output. This is due to the built-in muting circuit that prevents noise when the POWER operation switch is turned on and off. Set the POWER operation switch to this position to turn the power on and off from the included remote control unit (RC-840).
- OFF**
The power turns off and "STANDBY" indicator is off. In this position, the power cannot be turned on and off from the remote control unit.

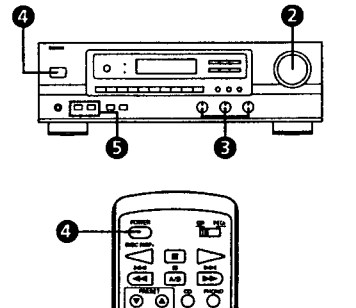


- Select the front speakers.
Press the speaker A or B switch to turn the speaker on.

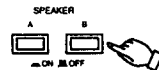

NOTE:
In the standby mode
If you lose the remote control unit, the power can be turned on by initializing the microprocessor.
For the operating procedure, see: [5] INITIALIZATION OF THE MICROPROCESSOR on page 13
Note that this operation will clear the last function memory.

4-2 Playing the program source (Stereo playback)


- Select the source to be played.

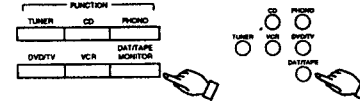


- Select the STEREO mode.




- Adjust the MASTER VOLUME control.

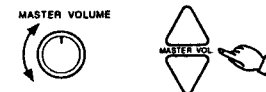

- Adjust the front left/right BALANCE.
Turn the control counterclockwise to reduce the volume of the right channel, clockwise to reduce the volume of the left channel.

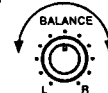

- Adjust the BASS and TREBLE.

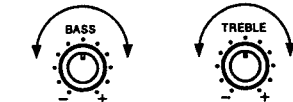

Turn the control clockwise to increase the bass, counterclockwise to decrease it.
Turn the control clockwise to increase the treble, counterclockwise to decrease it.


4-3 Simulcast playback

Use this switch to monitor a video source other than the audio source.

- Press and hold the VIDEO SELECT button until the desired source appears on the display.




- Cancelling simulcast playback
- Press the VIDEO SELECT button once more.
- Select the VIDEO function.

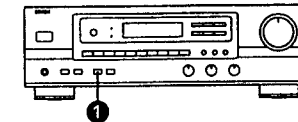

4-4 Using the muting function

Use this to turn off the audio output temporarily.

- Press the MUTING button.
- Cancelling MUTING mode.
Press the MUTING button again.

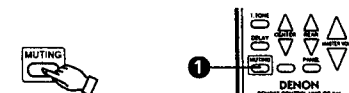


This function can only be set from the remote control unit.
The STANDBY LED flashes when the muting function is set.

4-5 Listen with headphones

Connect the headphones to the PHONES jack.
When listening with headphones privately, set A, B SPEAKER switches and the superwoofer's power switch to the OFF position and set the stereo surround mode.

NOTE:

To prevent hearing loss, do not raise the volume level excessively when using headphones.

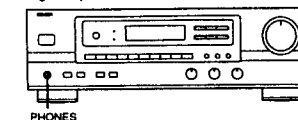

4-6 Recording the program source

(recording the source currently being monitored)


- Follow steps ① to ④ under "Playing the program source". (refer to page 9)
- Start recording on the tape or video deck. For instructions, refer to the component's operating instructions.

Simultaneous recording

The signals of the source selected with the function selector button are output simultaneously to the DAT/TAPE and VCR REC OUT jacks. If a total of two tape and/or video decks are connected and set to the recording mode, the same source can be recorded simultaneously on both decks. In addition, if the TAPE MONITOR (DAT/TAPE) button is pressed, the audio signals from the tape deck are output to the VCR AUDIO REC OUT jacks.

4-7 Front panel display

Descriptions of the unit's operations are also displayed on the front panel display. In addition, the display can be switched to check the unit's operating status while playing a source by pressing the PANEL button.

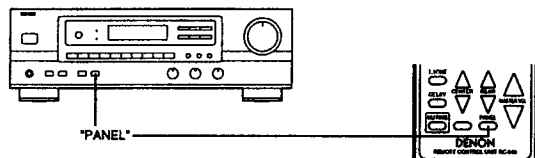

4-8 Using the surround function


Types of surround modes and their characteristics

| | | |
|---|-----------------|--|
| 1 | DOLBY PRO LOGIC | Use this when playing program sources recorded in Dolby Surround or Dolby Stereo. |
| 2 | CONCERT HALL | Use this setting to create the atmosphere of a concert hall. There will be no output from the center speaker. |
| 3 | LIVE | Use this setting to create the atmosphere of watching a live performance. There will be no output from the center speaker. |

• Before using the surround function


Make the following adjustments before using the surround function.

- Set the Dolby Pro Logic mode.

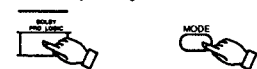

- Select the center mode (refer to page 11).

Select the center mode according to the center speaker.

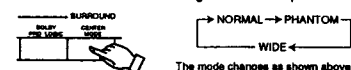


The mode changes as shown above.

- Emit the test tone.



Test tones are produced from the speakers in the order shown below, at 4 second intervals for the first two cycles, 2 second intervals after that.

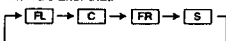


- Adjust the center and surround (rear) levels to set the volume of the speakers to the same level.




- Turn the test tone off.



- Adjust the delay time and seating position as necessary (refer to page 11).

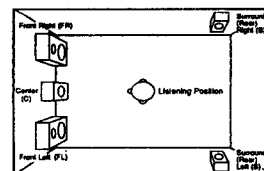

Dolby Surround systems with Pro Logic decoding most closely replicate the Dolby Stereo theatrical experience. Only two surround speakers are necessary in the home listening environment to provide the same enveloping soundfield as multiple surround speakers in the theater.

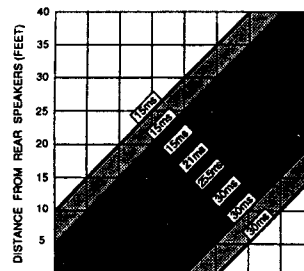

■ PREFERRED
■ ACCEPTABLE
□ NOT RECOMMENDED


USABLE SPEAKER PLACEMENT RANGE WITH
[XX ms] DELAY TIME

Personal Memory Plus function for EASY TO USE

The AVR-750/760/770/780 automatically stores the surround mode adding effects for all input sources. The corresponding surround mode is recalled automatically each time an input source is selected.

• Using the surround function


- Select the surround mode according to the input source.

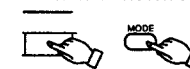

- If necessary, adjust the levels.



- Adjust the parameters to the desired settings.

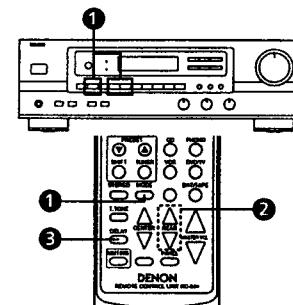

Manufactured under license from Dolby Laboratories Licensing Corporation. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Copyright 1992 Dolby Laboratories, Inc. All rights reserved.

Operating Possible in the Various Surround Modes

The following is a list of the buttons and functions which can be operated during the different surround modes. Figures in parentheses indicate adjustment ranges.

| | | OUTPUT | CENTER LEVEL | SURROUND (REAR) LEVEL | CENTER MODE | TEST TONE | DELAY TIME |
|-----------------|---------|--------|---------------|-----------------------|-------------|-----------|----------------|
| DOLBY PRO LOGIC | NORMAL | ○ | ○ (0 -- 24dB) | ○ (0 -- 24dB) | ○ | ○ | ○ (15 -- 30ms) |
| | PHANTOM | ○ | X | ○ (0 -- 24dB) | ○ | ○ | ○ (15 -- 30ms) |
| | WIDE | ○ | ○ (0 -- 24dB) | ○ (0 -- 24dB) | ○ | ○ | ○ (15 -- 30ms) |
| CONCERT HALL | | ○ | X | ○ (0 -- 24dB) | Δ* | X | ○ (0 -- 33ms) |
| LIVE | | ○ | X | ○ (0 -- 24dB) | Δ* | X | ○ (0 -- 33ms) |


*1 Switches to the Dolby Pro Logic from any modes other than Dolby Pro Logic.
The level of the center and surround (rear) channels can be adjusted by 2 dB step.
The delay time can be set by 1.5 ms step.

○: Operation possible X: Operation not possible

- The sound may be distorted for some sources if the surround (rear) level is raised during surround playback. If this happens, lower the surround (rear) level.

5 LISTENING TO THE RADIO

5-1 Setting the frequency step (AVR-750/770)

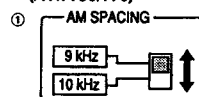

To know the tuning frequency steps, see the Table of Tuning Frequency Steps.

| TABLE OF TUNING FREQUENCY STEPS | | |
|---------------------------------|----------|--------|
| BAND | FM | AM |
| STEP AM SPACING: 9 kHz | 0.05 MHz | 9 kHz |
| STEP AM SPACING: 10 kHz | 0.2 MHz | 10 kHz |


The tuning frequency steps are switchable between 9 kHz and 10 kHz for AM, between 0.05 MHz and 0.2 MHz for FM. To switch the tuning frequency steps, disconnect the power plug and set the AM SPACING switch (1) on the rear panel to the desired position. Then plug in the AC mains again.

5-2 Auto preset memory

This unit is equipped with a function for automatically searching for FM broadcast stations and storing them in the preset memory.

- Turn on the unit while holding in the MEMORY button. The unit automatically begins searching for FM broadcast stations.


ON / STANDBY ▲ OFF

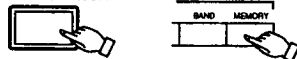


- When the first FM broadcast station is found, that station is stored in the preset memory at channel A1. Subsequent stations are automatically stored in order at preset channels A2 to A8, B1 to B8, C1 to C8, D1 to D8 and E1 to E8, for a maximum of 40 stations.

5-3 Auto tuning


- Set the input function to "TUNER".

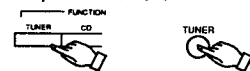


- Watching the display, press the BAND button to select the desired band (AM or FM).

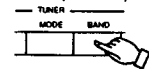

- Press the MODE button to set the auto tuning mode.

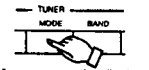


"AUTO" appears on the display.

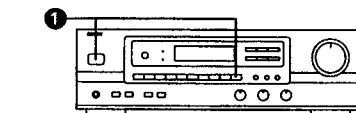


- Channel A1 is tuned in after the auto preset memory operation is completed.

NOTES:

- If an FM station cannot be preset automatically due to poor reception, use the "Manual tuning" operation to tune in the station, then preset it using the manual "Preset memory" operation.
- To interrupt this function, press the POWER operation button.

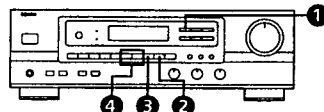

- Press the TUNING UP or DOWN button.

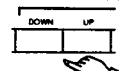

Automatic searching begins, then stops when a station is tuned in. If tuning does not stop at the desired station, use the "Manual tuning" operation.

5-4 Manual tuning

- Set the input function to "TUNER".
- Watching the display, press the BAND button to select the desired band (AM or FM).
- Press the MODE button to set the manual-tuning mode. Check that the display's "AUTO" indicator turns off.


NOTES:

- When in the auto tuning mode on the FM band, the "STEREO" indicator lights on the display when a stereo broadcasts tuned in. At open frequencies, the noise is muted and the "TUNED" and "STEREO" indicators turn off.
- When the manual tuning mode is set, FM stereo broadcasts are received in monaural and the "STEREO" indicator turns off.

5-5 Preset memory

- Use the "Auto tuning" or "Manual tuning" operation to tune in the station to be preset in the memory.



- Press the MEMORY button.

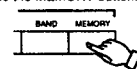


- Press the SHIFT button and select the desired memory block (A to E).



- Press the PRESET UP or DOWN button to select the desired preset channel (1 to 8).

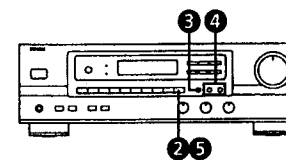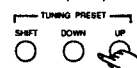


- Press the MEMORY button again to store the station in the preset memory.

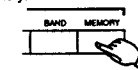


To preset other channels, repeat steps 2 to 3. A total of 40 broadcast stations can be preset - 8 stations (channels 1 to 8) in each of blocks A to E.

5-6 Recalling preset stations

- Watching the display, press the SHIFT button to select the preset memory block.

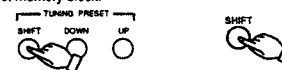

- Watching the display, press the PRESET UP or DOWN button to select the desired preset channel.

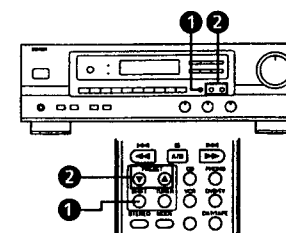


6 INITIALIZATION OF THE MICROPROCESSOR

When the indication of the display is not normal or when the operation of the unit does not show the reasonable result, the initialization of the microprocessor is required by the following procedure.

- Switch off the unit using the main unit's POWER operation switch.
- Hold the following TUNER button and VIDEO SELECT button, and turn the main unit's POWER operation switch on.
- Check that the entire display is flashing with an interval of about 1 second, and release your fingers from the 2 buttons.
- Switch on the unit and the microprocessor will be initialized.

NOTE:

- When the microprocessor is reset, all the settings you have made are reset to the values set upon shipment from the factory.

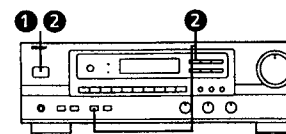

7 LAST FUNCTION MEMORY

- This unit is equipped with a last function memory which stores the input and output setting conditions as they were immediately before the power is switched off. This function eliminates the need to perform complicated resettlings when the power is switched on.
- This unit is also equipped with a back-up memory. This function provides approximately one week of memory storage with the power cord disconnected.

8 TROUBLESHOOTING

If a problem should arise, first check the following:

- Are the connections correct?
 - Have you followed all operational instructions correctly?
 - Are the speakers, turntable, and other components operating properly?
- If the receiver is not operating properly, check the items listed in the table below. Should the problem persist, there may be a malfunction. Disconnect the power immediately and contact your store of purchase.

| | Symptom | Cause | Measures | Page |
|---|---|---|---|--------------------------|
| Common problems arising when listening to the CD, records, tapes, and FM broadcasts, etc. | DISPLAY not lit and sound not produced when power operation switch set to on. | • Power cord not plugged in securely. | • Check the insertion of the power cord plug. | 5 |
| | DISPLAY lit but sound not produced. | • Speaker cords not securely connected. • Speaker switch is off. • Improper position of the audio function button. • Volume control set to minimum. • MUTING is on. | • Connect securely. • Turn on speaker switch. • Set to a suitable position. • Turn volume up to suitable level. • Switch off MUTING. | 5, 6 8 9 9 |
| | —PROTECT— display appears. | • Speaker terminals are short-circuited. • Block the ventilation holes of the set. | • Switch power off, connect speakers properly, then switch power back on. • Turn off the set's power, then ventilate it well to cool it down. Once the set is cooled down, turn the power back on. | 5, 6 3, 4 |
| | | • The unit is operating at continuous high power conditions and/or inadequate ventilation. | • Turn off the set's power, then ventilate it well to cool it down. Once the set is cooled down, turn the power back on. | 3, 4 |
| | Sound produced only from one channel. | • Incomplete connection of speaker cords. • Incomplete connection of input/output cords. • Left/right balance is off. | • Connect securely. • Connect securely. • Adjust balance knob properly. | 5, 6 5, 6 8 |
| | Positions of instruments reversed during stereo playback. | • Reverse connections of left and right speakers or left and right input/output cords. | • Check left and right connections. | 5, 6 |
| | Sound seems distorted. | • Surround (rear) level is too high. | • Set the Surround (rear) level to lower level. | 10, 11 |
| | Humming noise produced when record is playing. | • Ground wire of turntable not connected properly. • Incomplete PHONO jack connection. • TV or radio transmission antenna nearby. | • Connect securely. • Connect securely. • Contact your store of purchase. | 5 5 — |
| | Howling noise produced when volume is high. | • Turntable and speaker systems too close together. • Floor is unstable and vibrates easily. | • Separate as much as possible. • Use cushions to absorb speaker vibrations transmitted by floor. If turntable is not equipped with insulators, use audio insulators (commonly available). | — — |
| | Sound is distorted. | • Stylus pressure too weak. • Dust or dirt on stylus. • Cartridge defective. | • Apply proper stylus pressure. • Check stylus. • Replace cartridge. | — — — |
| When playing records | Volume is weak. | • MC cartridge being used. | • Replace with MM cartridge or use a head amplifier or step-up transformer. | 5 |
| | Receiver does not operate properly when remote control unit is used. | • Batteries dead. • Remote control unit too far from receiver. • Obstacle between receiver and remote control unit. • Different button is being pressed. • Ⓟ and Ⓞ ends of battery inserted in reverse. | • Replace with new batteries. • Move closer. • Remove obstacle. • Press the proper button. • Insert batteries properly. | 7 7 7 7, 8 7 |
| | | | | |
| | | | | |
| Remote control unit | | | | |

9 SPECIFICATIONS

• Audio Section

(Power amplifier)

Rated output:

FRONT
55 W + 55 W (8 Ω/ohms, 20 Hz – 20 kHz with 0.08 % THD)
80 W + 80 W (8 Ω/ohms, EIAJ)

(All properties shown are only for the power amplifier stage.)

CENTER
55 W (8 Ω/ohms, 20 Hz – 20 kHz with 0.08 % THD)
80 W (8 Ω/ohms, EIAJ)

SURROUND (REAR)
25 W + 25 W (8 Ω/ohms, 1 kHz with 0.9 % THD)
35 W + 35 W (8 Ω/ohms, EIAJ)

Output terminals:

Front: 8 to 16 Ω/ohms
Center: 8 to 16 Ω/ohms
Surround (Rear): 8 to 16 Ω/ohms

(Pre-amplifier)

Line input (Each line input – FRONT SP OUT)

Input sensitivity/impedance: 200 mV/47 kΩ/kohms PHONO (MM): 2.5 mV/47kΩ/kohms

Frequency response: 10 Hz to 50 kHz: ± 3 dB

BASS: ± 10 dB at 100 Hz

TREBLE: ± 10 dB at 10 kHz

Signal-to-noise ratio: 92dB (STEREO)

Rated output (Pre out): 1.2 V

Phono equalizer (PHONO input – REC OUT)

RIAA deviation: ± 1 dB (20 Hz to 20 kHz)

Signal-to-noise ratio: 74 dB (A weighting, with 5 mV input)

Rated output/Maximum output: 200 mV/8 V

Distortion factor: 0.03 % (1 kHz, 1 V)

• Tuner Section

Receiving Range:

[FM] (note: μV at 75 Ω/ohms, 0 dBf = 1 × 10⁻¹⁸ W)

(AM SPACING: 9 kHz)

87.50 to 108.00 MHz (50 kHz step)

(AM SPACING: 10 kHz)

87.50 to 107.90 MHz (200 kHz step)

1.0 μV (11.2 dBf)

Usable Sensitivity: MONO 1.6 μV (15.3 dBf)

50 dB Quieting Sensitivity: STEREO 23 μV (38.5 dBf)

Signal to Noise Ratio (HF-A): MONO 80 dB

STEREO 75 dB

Total Harmonic Distortion MONO 0.15 %

(at 1 kHz) STEREO 0.3 %

• Video Section

Standard video jacks

Input and output level/Impedance: 1 Vp-p/75 Ω/ohms

Frequency response: 2 Hz to 8 MHz + 0, – 3 dB

• General

Power supply:

AC 115/230V, 50/60 Hz (AVR-750/770)

AC 220V, 50 Hz (AVR-760/780)

180 W

Power consumption:

Maximum external dimensions: 434 (W) x 142 (H) x 315 (D) mm (17-3/32" x 5-19/32" x 12-25/64") (AVR-750/760)

471 (W) x 143 (H) x 315 (D) mm (18-35/64" x 5-41/64" x 12-25/64") (AVR-770/780)

Weight: 7.8 kg (17 lbs 7 oz) (AVR-750/760)

8.8 kg (19 lbs 7 oz) (AVR-770/780)

• Remote control unit

System remote control

RC-840:

Total buttons: 28

DENON system code

CD player: 6 buttons } (SWITCHED)

Cassette deck: 6 buttons }

AVR-750/760/770/780 fixed codes:

22 buttons

Batteries: R6P/AA Type (two batteries)


External dimensions: 51 (W) x 175 (H) x 18.5 (D) mm (2" x 6-57/64" x 47/64")

Weight: 100 g (Approx. 3.5 oz) (including batteries)

* For purposes of improvement, specifications and design are subject to change without notice.

WIRE ARRANGEMENT

In case of wires require unclasping or loosening to move the location to perform adjustment or part replacement, be sure to rearrange them neatly to restore properly in the same location as they were originally placed, or causing to produce a noise may occasionally occur.

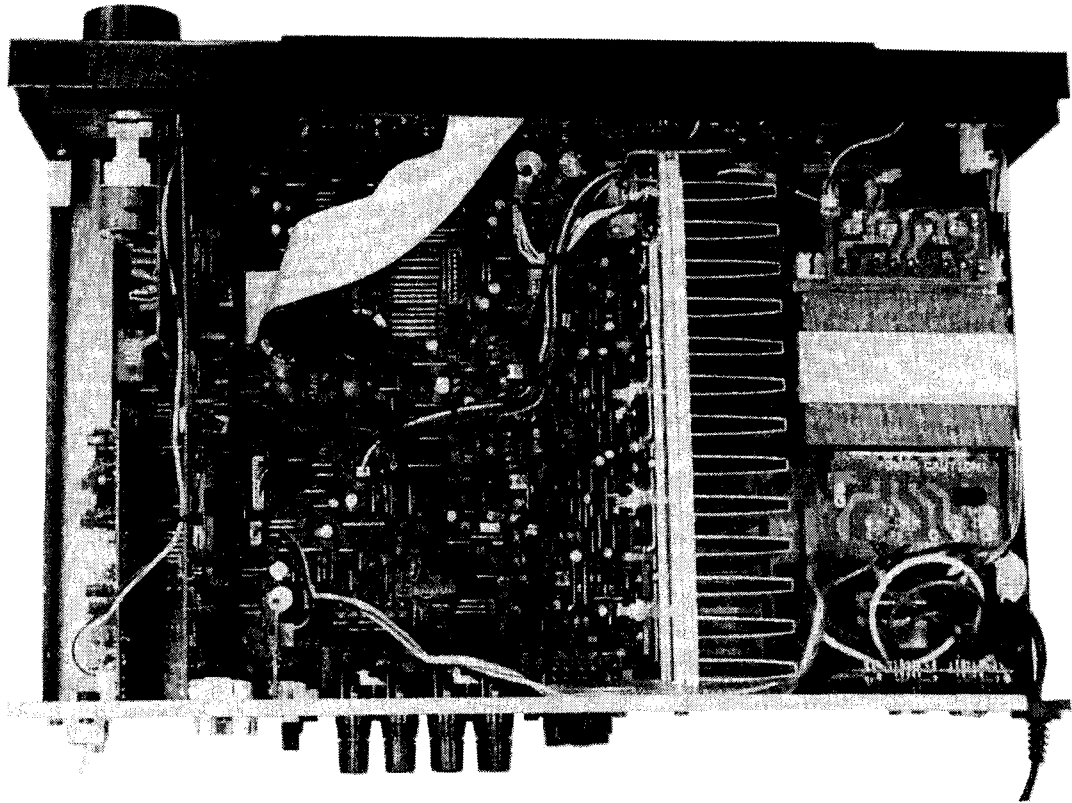


DISASSEMBLY

(To reassemble reverse disassembly)


1. Top Cover

Remove 4 screws ① and 4 screws ②.

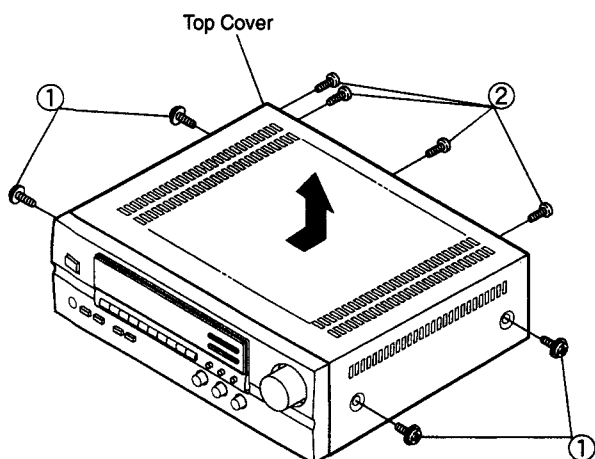


3. Inner Panel

- (1) Pull out Volume knob ④ and 3 round knobs ⑤.
- (2) Remove 5 nuts ⑥.
- (3) Remove 2 screws ⑨.

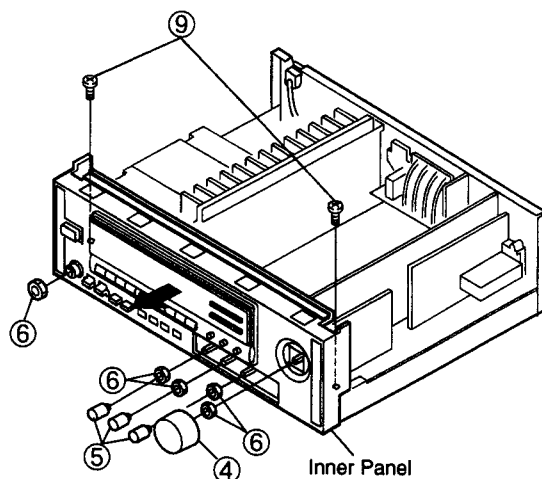


2. Front Panel

Remove 5 screws ③.

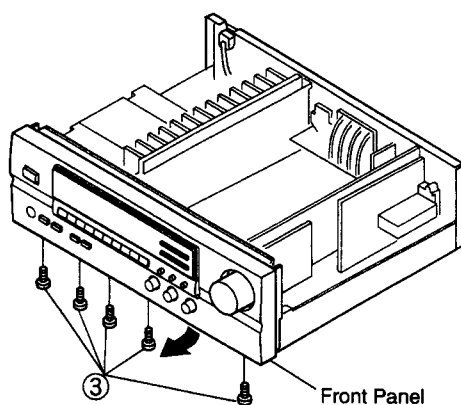


4. Rear Panel

- (1) Disconnect cord bush ⑩.
- (2) Remove 5 screws ⑪, and 22 screws ⑫.
- * Screws ⑫ are tighten.
- (3) Remove 1 screw ⑬.

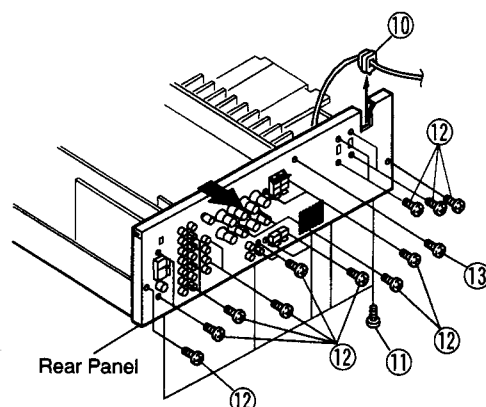

CONNECTION DIAGRAM OF MEASURING INSTRUMENTS

● FM SECTION

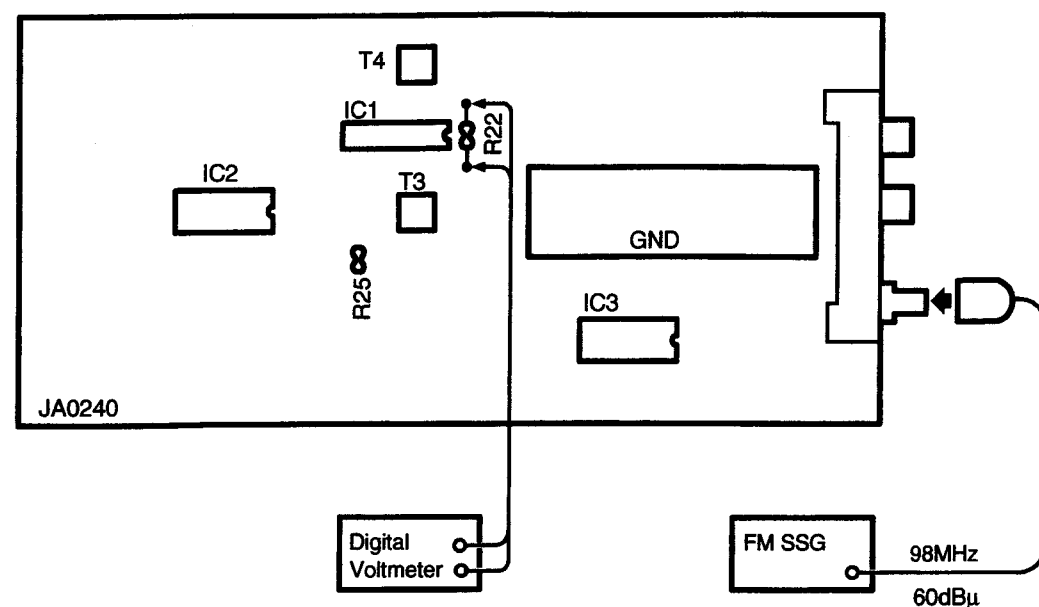

Adjust T4 potential difference across R22 to be within 30mV.

● Initiating (Memory clearing) Method

To clear memory contents of microcomputer and restore to the initial state, take the following steps;

1. Press power switch, turn off power of the unit, and set to standby mode.
2. Pull out power cord from wall outlet temporarily.
3. Insert power cord into outlet while simultaneously pressing two keys of VIDEO SELECT and TUNER.
4. Press power switch to confirm that memory contents are cleared.

By completion of the above, the initial state is restored. In case the memory can not be cleared due to some reasons, repeat steps 1 through 3.

Note:

When in the Standby mode, the unit is in the Power OFF state when turn Power SW ON with remote control.

● AUDIO SECTION

Idling Current (JA0241)

Required measurement equipment: DC Voltmeter

Arrangement

- (1) Avoid direct blow from an air conditioner or an electric fan, and adjust the unit at normal room temperature 15°C ~ 30°C. (59°F ~ 86°F).


(2) Presetting

- | | | |
|-------------------------------|---|--|
| ● POWER (Power source switch) | → | ON |
| ● MODE (Mode button) | → | STEREO |
| ● FUNCTION (Function button) | → | CD |
| ● VOLUME (Volume control) | → | 0: fully counterclockwise (⌚ min.) |
| ● BASS, TREBLE (Tone control) | → | 0: (Controls to center) |
| ● SPEAKERS (Speaker terminal) | → | No load (Do not connect speaker, dummy resistor, etc.) |

Adjustment

- (1) Remove top cover and set VR401, VR301 and VR302 of JA0241 (Main Unit) at counterclockwise fully.
- (2) Connect DC Voltmeter to test points (Lch TPL, Rch TPR, CENTER ch TPC).
- (3) Connect power cord to AC Line, and turn power switch "ON".
- (4) Allow 15 minutes, and turn VR301, VR302 and VR401 clockwise (⌚) and adjust the TEST POINTS voltage to 1.5 mV \pm 0.5 mV DC.
- (5) After 2 minutes from preset, turn VR301, VR302 and VR401 to set the voltage to 3 mV \pm 0.5mV DC.


JA0241 Main Unit (Component Side)

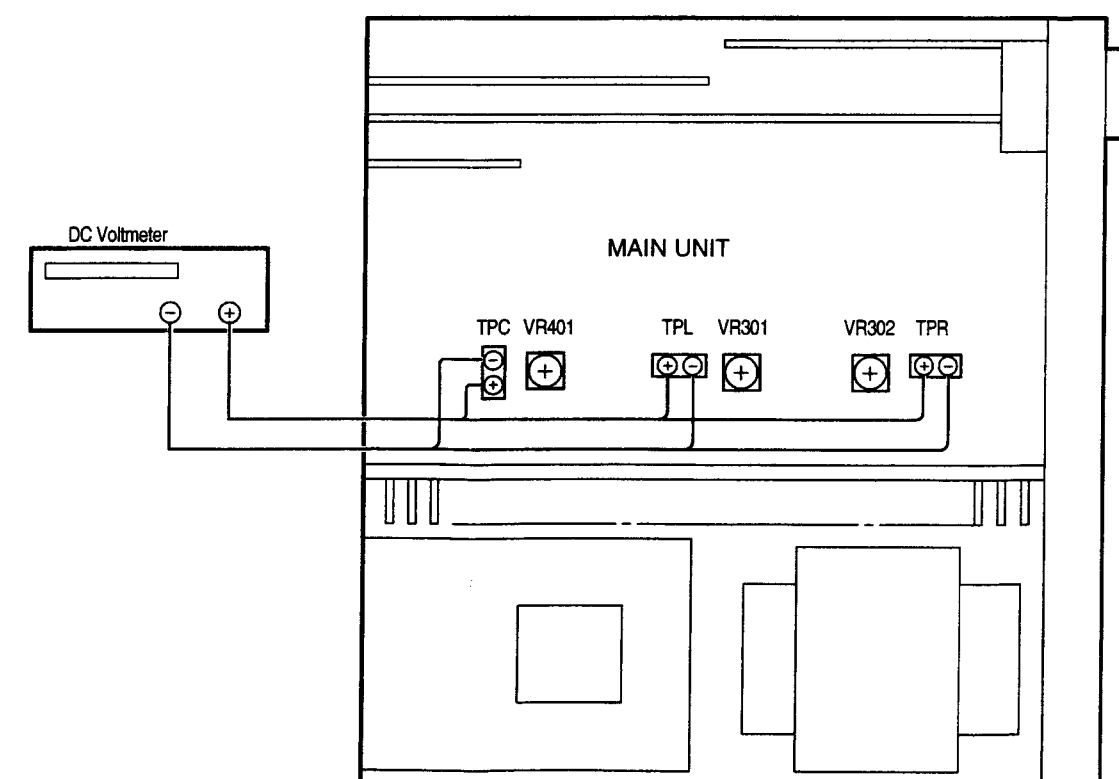

SEMICONDUCTORS

● IC's

TMP87CM71F-6668 (IC701)

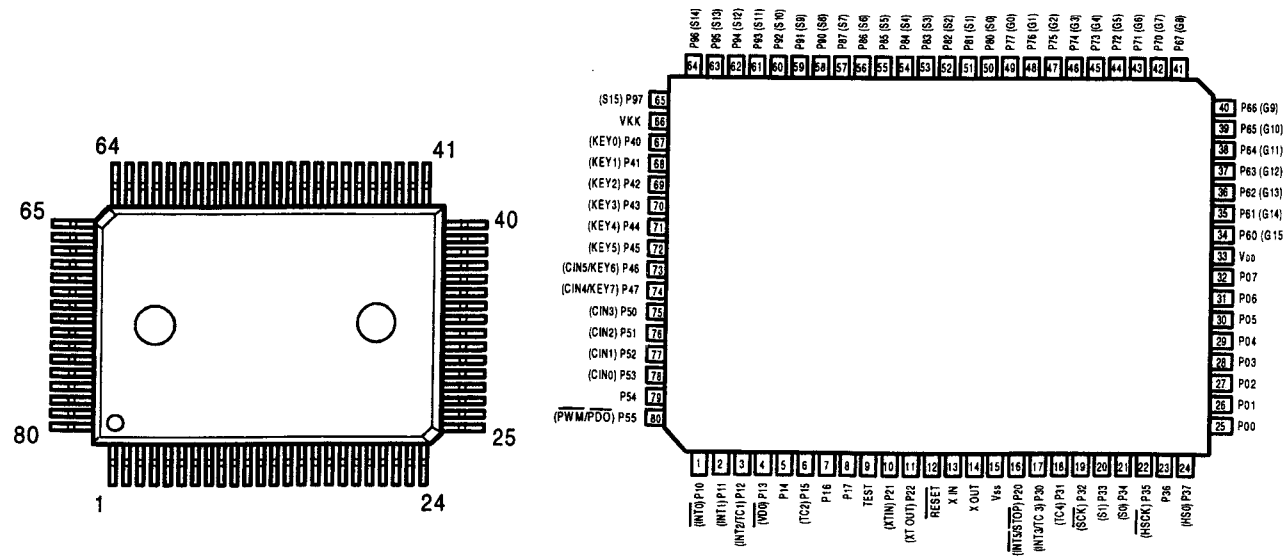

TMP87CM71F-6668 Terminal Function



| Pin No. | Symbol | I/O | Type | Op | Det | Res | Init | Function |
|---------|------------|-----|------|-----|-----|-----|------|--|
| 1 | STOP | I | — | Eu | Lv | Z | — | Detect power stop ("L" at power stop) |
| 2 | PROTECTION | I | — | Eu | E&L | Z | — | Protection input ("H" at protection) |
| 3 | EXP. DATA | O | C | — | — | Z | L | Port expand data output |
| 4 | EXP. CK | O | C | — | — | Z | L | Port expand clock output |
| 5 | EXP. STB | O | C | — | — | Z | L | Port expand strobe output |
| 6 | VR. CK | O | C | — | S | Z | L | TC9176 (electron VR) control clock output |
| 7 | VR. DATA | O | C | — | S | Z | L | TC9176 (electron VR) control data output |
| 8 | VR. STB | O | C | — | — | Z | L | TC9176 (electron VR) control strobe output |
| 9 | TEST | I | — | GND | — | — | — | Connect to ground. |
| 10 | TUNED | I | — | Eu | Lv | Z | — | "L" at stereo receive |
| 11 | | O | — | — | — | Z | L | Fixed output on "L" |
| 12 | RESET | I | — | Eu | Lv | Z | — | Reset input |
| 13 | X IN | I | — | — | — | — | — | Oscillator circuit (4MHz) |
| 14 | X OUT | O | — | — | — | — | — | Oscillator circuit (4MHz) |
| 15 | GND | I | — | GND | — | — | — | Ground |
| 16 | RDS START | I | — | Eu | Ed | Z | — | RDS data, Start signal input (LC7074)* |
| 17 | REMOCON | I | — | Eu | E&L | Z | — | Remote control signal input |
| 18 | STEREO | I | — | Eu | — | Z | L | "L" at TUNER stereo receive |
| 19 | RDS. CK | I | — | Eu | S | Z | — | RDS clock input (LC7074) |
| 20 | RDS. DATA | I | — | Eu | S | Z | — | RDS data input (LC7074)* |
| 21 | RDS. RESET | O | N | Eu | — | Z | L | RDS reset signal output (LC7074)* |
| 22 | PLL. CK | O | N | Eu | — | Z | L | LM7001 control clock output |
| 23 | PLL. STB | O | N | Eu | — | Z | L | LM7001 control strobe output |
| 24 | PLL. DATA | O | N | Eu | — | Z | L | LM7001 control data output |
| 25 | FUNC. DATA | O | C | — | — | Z | L | LC7822 (Function IC) control data output |
| 26 | FUNC. CK | O | C | — | — | Z | L | LC7822 (Function IC) control clock output |
| 27 | FUNC. STB | O | C | — | — | Z | L | LC7822 (Function IC) control strobe output |
| 28 | ST/MONO | O | C | — | — | Z | L | TUNER STEREO/MONO control output ("L" at STEREO) |
| 29 | POWER OFF | O | C | — | — | Z | L | "L" at ON |
| 30 | VOL. DOWN | O | C | — | — | Z | L | Electrically-drive volume control output (BA6208S) |

* port is fixed "L" at RDS non-selection mode.



| Pin No. | Symbol | I/O | Type | Op | Det | Res | Init | Function |
|---------|-----------------|-----|------|----|-----|-----|------|---|
| 31 | VOL. UP | O | C | — | — | Z | L | Electrically-driven volume control output. (BA6208S) |
| 32 | SP-FRONT | O | C | — | — | Z | L | Front speaker relay control output. |
| 33 | V _{DD} | I | — | — | — | — | — | Connect to +5V. |
| 34 | LED. PRO | O | P | Id | — | Z | H | DOLBY PROLOGIC indicating LED drive output. ("H" at light) |
| 35 | LED. STBY | O | P | Id | — | Z | H | Standby indicating LED drive output. ("H" at light) |
| 36 | 1G | O | P | Id | — | L | L | FLD control output. |
| 37 | 2G | O | P | Id | — | L | L | FLD control output. |
| 38 | 3G | O | P | Id | — | L | H | FLD control output. |
| 39 | 4G | O | P | Id | — | L | H | FLD control output. |
| 40 | 5G | O | P | Id | — | L | L | FLD control output. |
| 41 | 6G | O | P | Id | — | L | L | FLD control output. |
| 42 | 7G | O | P | Id | — | L | H | FLD control output. |
| 43 | 8G | O | P | Id | — | L | L | FLD control output. |
| 44 | 9G | O | P | Id | — | L | L | FLD control output. |
| 45 | 10G | O | P | Id | — | L | L | FLD control output. |
| 46 | 11G | O | P | Id | — | L | H | FLD control output. |
| 47 | 12G | O | P | Id | — | L | L | FLD control output. |
| 48 | 13G | O | P | Id | — | L | H | FLD control output. |
| 49 | 14G | O | P | Id | — | L | H | FLD control output. |
| 50 | P (a) | O | P | Id | — | L | H | FLD control output. |
| 51 | P (b) | O | P | Id | — | L | H | FLD control output. |
| 52 | P (c) | O | P | Id | — | L | H | FLD control output. |
| 53 | P (d) | O | P | Id | — | L | H | FLD control output. |
| 54 | P (e) | O | P | Id | — | L | L | FLD control output. |
| 55 | P (f) | O | P | Id | — | L | L | FLD control output. |
| 56 | P (g) | O | P | Id | — | L | L | FLD control output. |
| 57 | P (h) | O | P | Id | — | L | L | FLD control output. |
| 58 | P (i) | O | P | Id | — | L | L | FLD control output. |
| 59 | P (k) | O | P | Id | — | L | L | FLD control output. |
| 60 | P (m) | O | P | Id | — | L | L | FLD control output. |
| 61 | P (n) | O | P | Id | — | L | L | FLD control output. |
| 62 | P (p) | O | P | Id | — | L | L | FLD control output. |
| 63 | P (q) | O | P | Id | — | L | L | FLD control output. |
| 64 | P (r) | O | P | Id | — | L | L | FLD control output. |
| 65 | P (s) | O | P | Id | — | L | L | FLD control output. |
| 66 | VKK | I | — | — | — | — | — | Connect to VKK. |
| 67 | DD. CK | O | N | Eu | — | Z | H | NJU9701G (Delay time) control clock output. |
| 68 | DD. REQ | O | N | Eu | — | Z | H | NJU9701G (Delay time) control request output. |
| 69 | DD. DATA | O | N | Eu | — | Z | H | NJU9701G (Delay time) control data output. |
| *70 | MODE2 | I | N | Eu | — | Z | — | Select occurring or no RDS function. ("H" at occurring RDS function)* |
| 71 | VIDEO A | O | N | Eu | — | Z | H | BU4066 (Video shift) control output. ("L" at selecting) |
| 72 | VIDEO B | O | N | Eu | — | Z | H | BU4066 (Video shift) control output. ("L" at selecting) |
| 73 | KEY 5 | I | — | Eu | Lv | Z | — | Button input 5. |
| 74 | KEY 4 | I | — | Eu | Lv | Z | — | Button input 4. |
| 75 | KEY 3 | I | — | Eu | Lv | Z | — | Button input 3. |
| 76 | KEY 2 | I | — | Eu | Lv | Z | — | Button input 2. |
| 77 | KEY 1 | I | — | Eu | Lv | Z | — | Button input 1. |
| 78 | MODE 1 | I | — | Eu | Lv | Z | — | Model version change input. |
| 79 | TU MUTE | O | N | Eu | — | Z | L | Tuner muting output. ("L" at muting) |
| 80 | | O | N | Eu | — | Z | H | Fixed output on "H". |

* port is fixed "L" at RDS non-selection mode.



LA1265 (S)
(IC001)

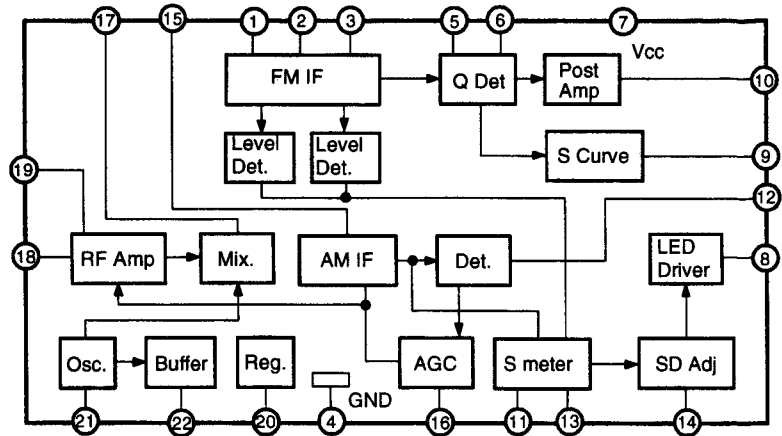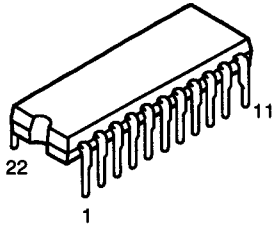




LA3401
(IC002)

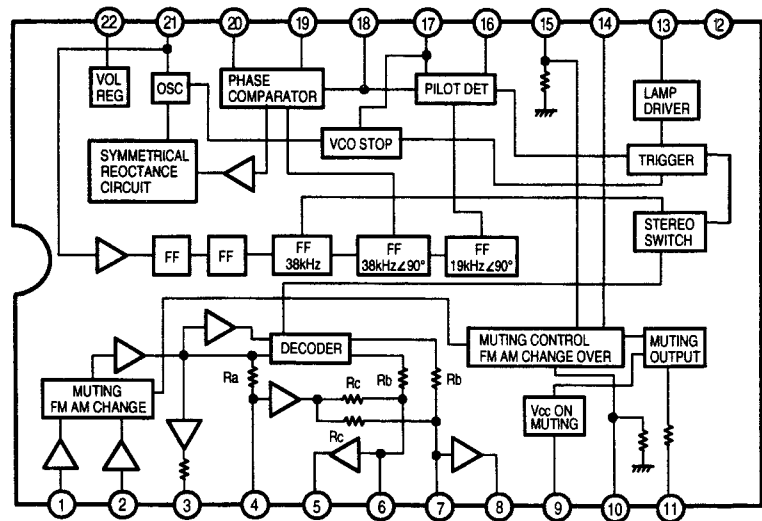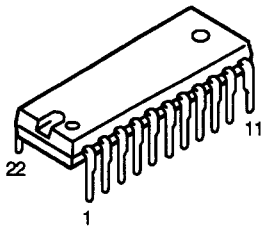

BA6208S
(IC265)

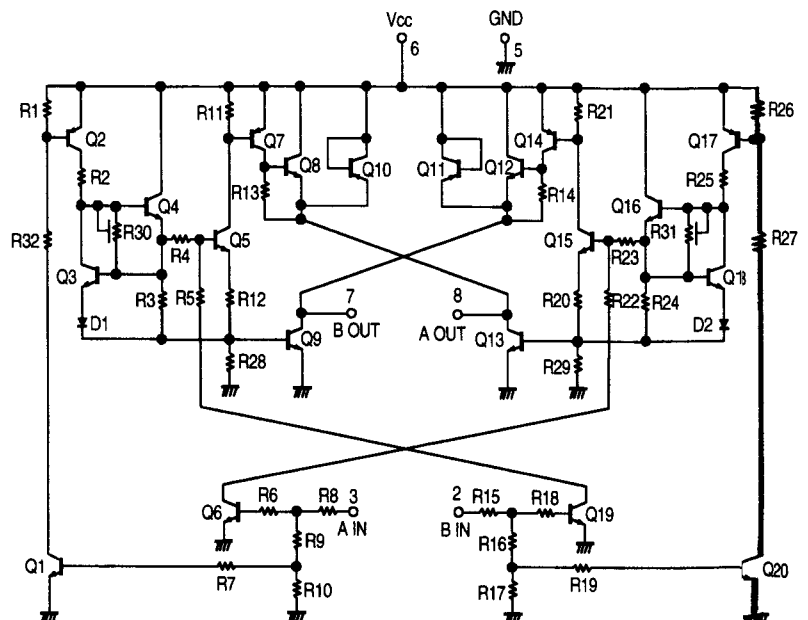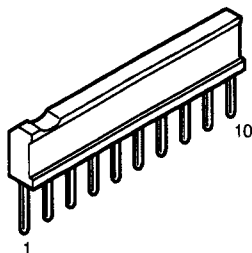


LM7001 (IC003)

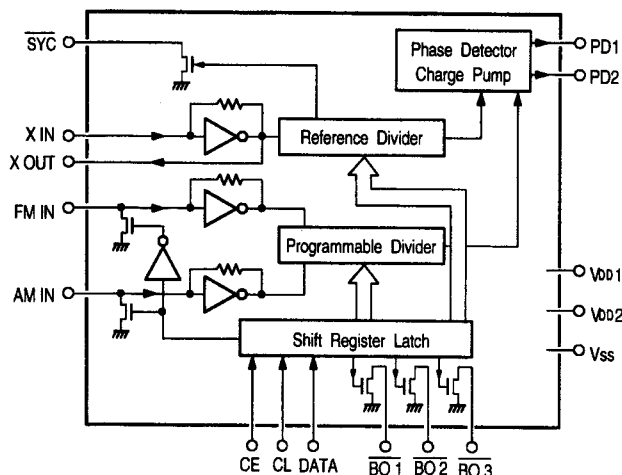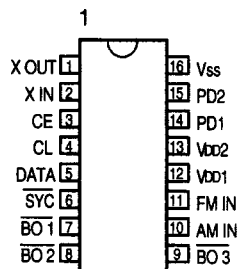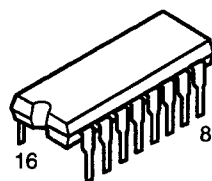

Terminal Description

| | |
|-----------------|--|
| SYC | : Clock for controller (400 kHz). |
| XIN, XOUT | : X'tal OSC (7.2 MHz). |
| FM IN, AM IN | : Station oscillation signal input. |
| CE, CL, DATA | : Data input. |
| BO1, BO2, BO3 | : Band data output. BO1 is feasible for time base output (8 Hz). |
| VDD1, VDD2, VSS | : Power supply. (VDD2 is for back-up). |
| PD1, PD2 | : Charge pump output. |

Data Input

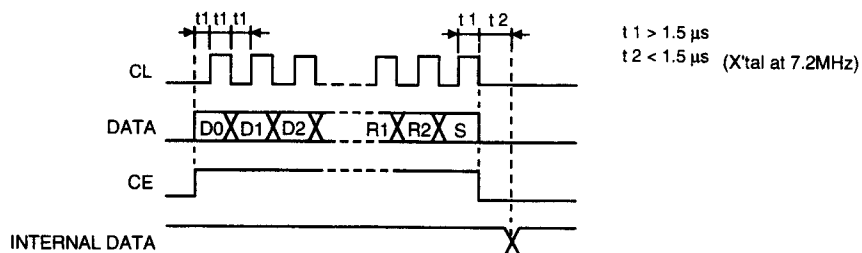

— Input from D0.

| | | | | | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|
| D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 | T0 | T1 | B0 | B1 | B2 | TB | R0 | R1 | R2 |
|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|

(1) D0(LSB)~D13(MSB) : Frequency dividend data

For FM IN, use D0~D13; for AM IN, use D4~D13.




| | | | | | | | | | | | | | |
|-----|----|----|----|-----|----|----|----|----|----|-----|-----|-----|-----|
| D0 | D1 | D2 | D3 | D4 | D5 | D6 | D7 | D8 | D9 | D10 | D11 | D12 | D13 |
| 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 |
| LSB | | | | | | | | | | | | | MSB |
| x | x | x | x | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 |
| | | | | LSB | | | | | | | | | MSB |

→ FM IN Frequency dividend nnumber = 14853




→ FM IN Frequency dividend nnumber = 928

(2) T0, T1 : For test of LSI (0,0)

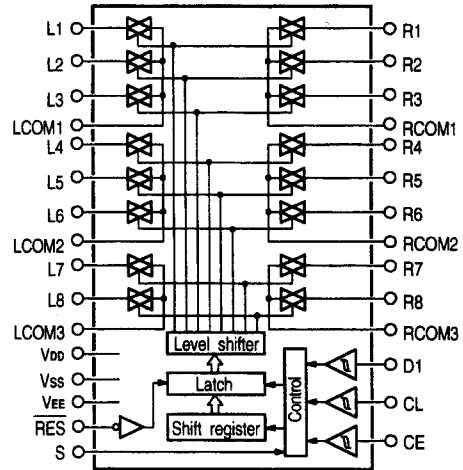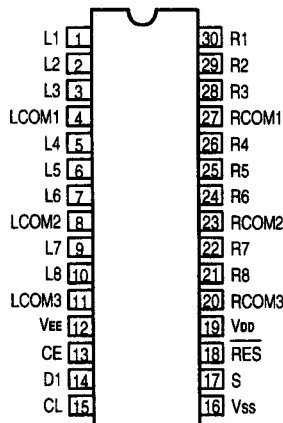
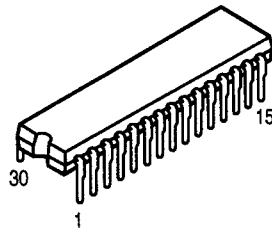
LC78212 (IC102)




LC78212 Terminal Function
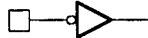
| Name of Terminal | I/O | Equivalent Internal Circuit | Function of Terminal | | | | | | | | | | | | | | | | | | | | | |
|---|------------|---|--|--------------|------------|---------|--|--|--|----|----|----|----|---------|---|---|---|---|---|---|---|---|---|---|
| VDD, VSS VEE | | | Power terminal. | | | | | | | | | | | | | | | | | | | | | |
| L1~L8, R1~R8 LCOM1~LCOM4, BCOM1~BCOM4 | | Refer to block diagram | In/Out terminal of analog switch. | | | | | | | | | | | | | | | | | | | | | |
| CL, DI, CE | I |  | Serial data input terminal (schmidt buffer). CL=Clock input terminal. DI=Data input terminal/ CE=Chip enable terminal. | | | | | | | | | | | | | | | | | | | | | |
| S | I |  | Selection terminal for using of two. Address will be shifted as per below table when switching S terminal to L or H. <table border="1" data-bbox="777 1173 1321 1292"><thead><tr><th rowspan="2">Name of Item</th><th rowspan="2">S Terminal</th><th colspan="4">Address</th></tr><tr><th>A0</th><th>A1</th><th>A2</th><th>A3</th></tr></thead><tbody><tr><td rowspan="2">LC78212</td><td>L</td><td>0</td><td>1</td><td>0</td><td>1</td></tr><tr><td>H</td><td>1</td><td>1</td><td>0</td><td>1</td></tr></tbody></table> | Name of Item | S Terminal | Address | | | | A0 | A1 | A2 | A3 | LC78212 | L | 0 | 1 | 0 | 1 | H | 1 | 1 | 0 | 1 |
| Name of Item | S Terminal | Address | | | | | | | | | | | | | | | | | | | | | | |
| | | A0 | A1 | A2 | A3 | | | | | | | | | | | | | | | | | | | |
| LC78212 | L | 0 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | |
| | H | 1 | 1 | 0 | 1 | | | | | | | | | | | | | | | | | | | |
| RES | I |  | Reset terminal. Condition of analog switch is not fixed at the time of turning on the power. When shift this terminal to L, all analog switches become OFF. | | | | | | | | | | | | | | | | | | | | | |


NJU9702 (IC202)

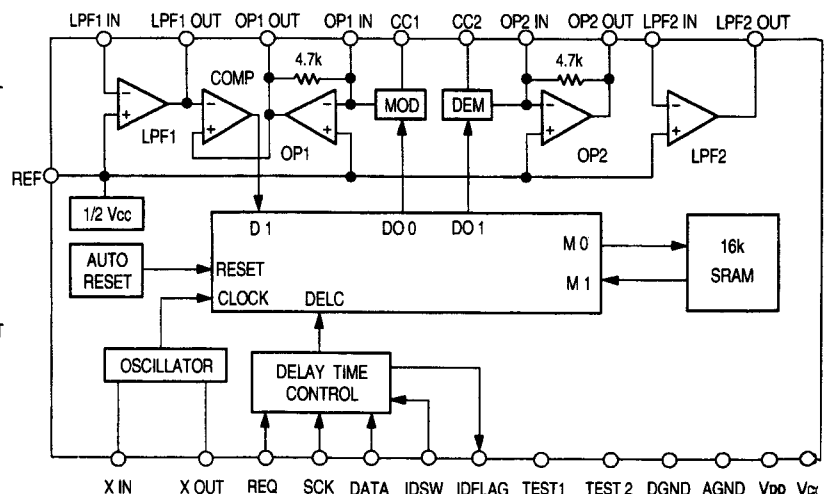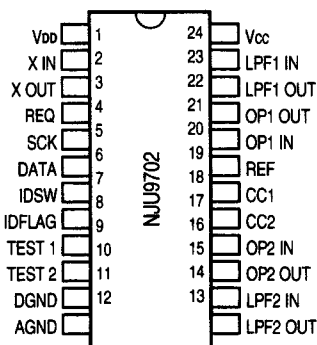

BA4558F (IC101, 103)

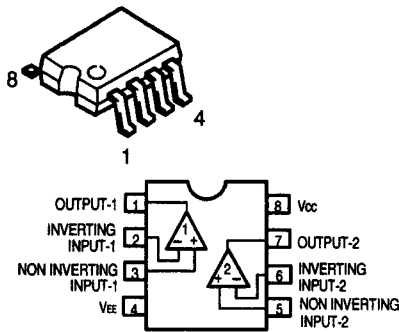


TC9176P (IC266)


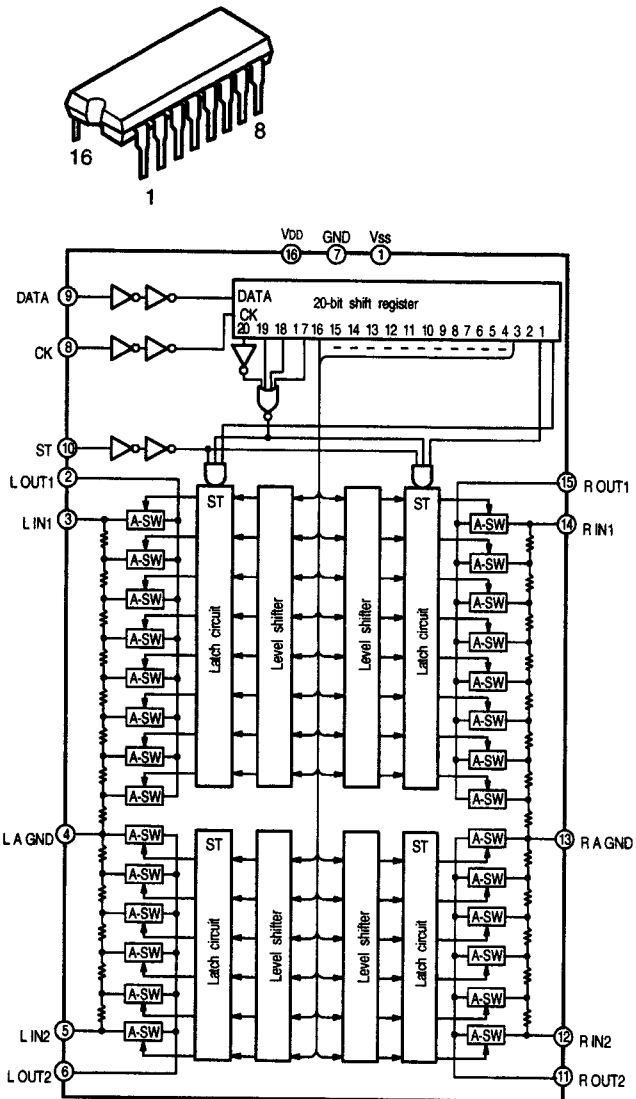


BA4558 (IC261, 263)


BA15218 (IC451)

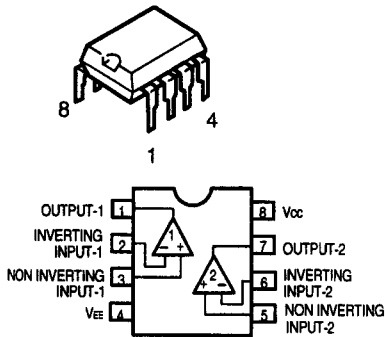

NJM2177AF (IC201)

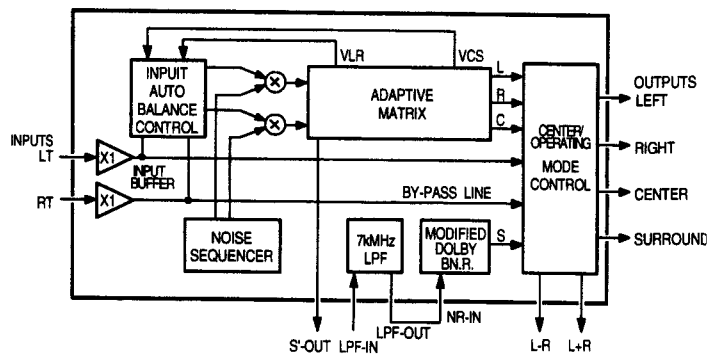
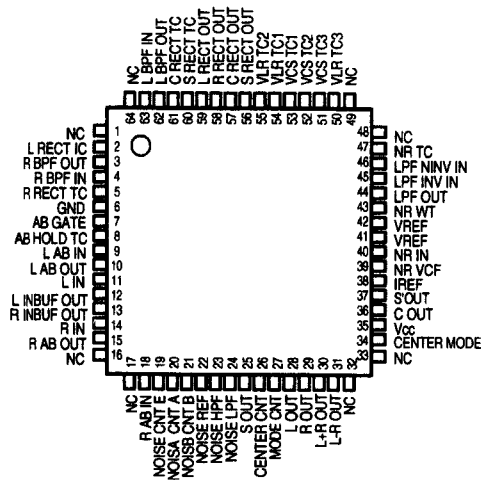


SI-18752
(IC571,572)


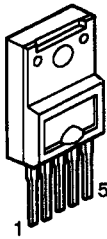


1. +IN
2. -IN
3. VEE
4. Output
5. +Vcc



BU4066BCF
(IC203, 205)

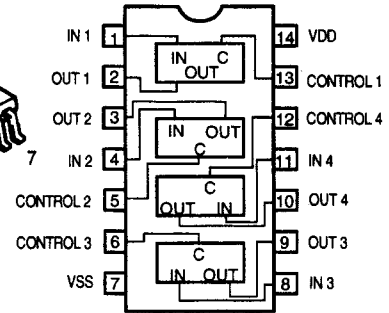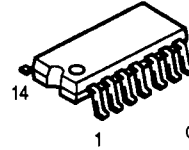


BU4066BC
(IC601)

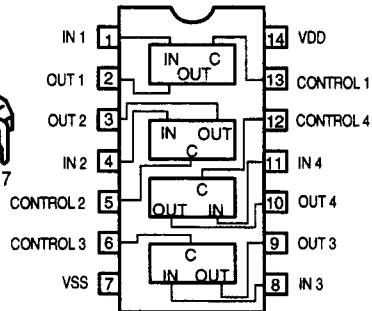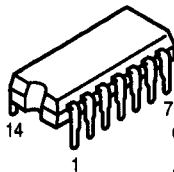

BU4094BC
(IC913, 914)

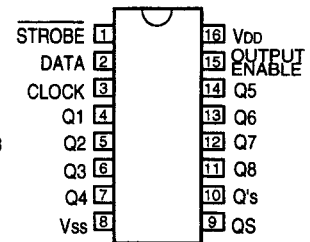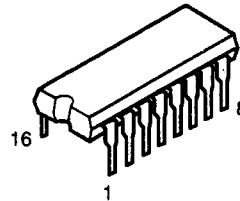

NJM7912FA
(IC574)

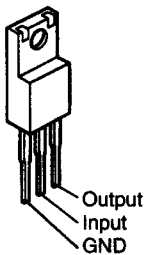


Output
Input
GND

KIA7806PI
(IC575)




Input
Common
Output

● **IC PROTECTOR**
ICP-N20 (PR505, 506)

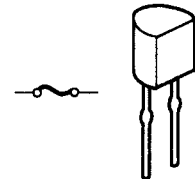


● **OTHER**

SBX1910 Remote Control Receiver)

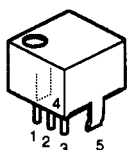


1. Vcc
2. Output
3. GND
4. Case Fin
5. Case Fin

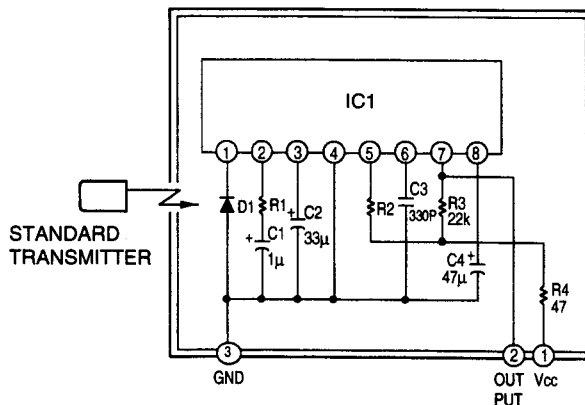


- IC1 : CX20106A Chip
D1 : PIN Photo Diode Chip
C1,C2,C4 : Aluminum Electrolytic Capacitor
C3 : SL Characteristic ±5%
R1 : Gain control resistor
R2 : for control resistor (Using±5%)
R (Other than above items) : ±5%

● TRANSISTORS


2SA970 (BL)
2SA988 (E/F)
2SA1015 (GR)
2SC1815 (Y), (GR)
2SC1841 (E/F)
2SC2058 (Q)
2SC2878 (A/B)
2SC1841 (E/F)

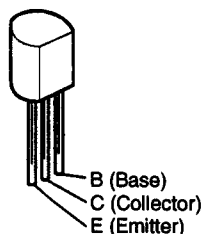


2SB647A (C)
2SD667A (C)

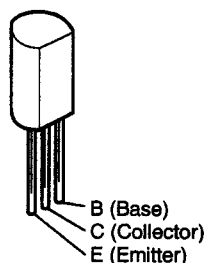


2SC2458

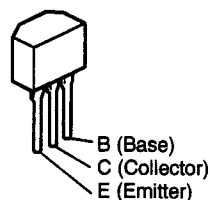


2SA1037K (S/R)
2SC2412K (S)

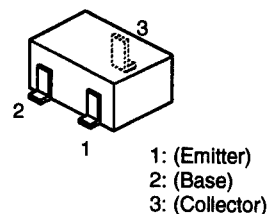


DTA114ES
DTC114TS
DTC114ES
DTC144TS
DTC323TS

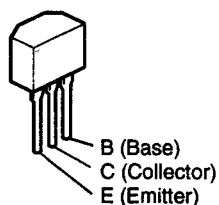


2SA933S (S)
2SC1740 (S)

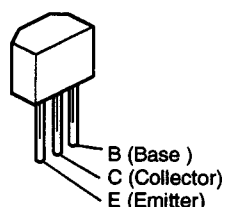


2SA1633
2SC4278

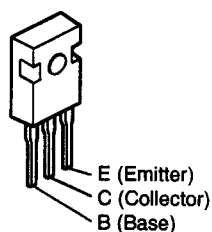

NJM7812FA (S)


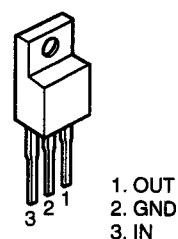


DTA114EKA
DTC143EKA
DTC144EKA


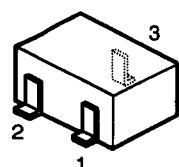


1: GND/Emitter
2: In/Base
3: Out/Collector


DTA114EKA

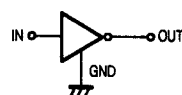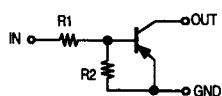

DTC143EKA
DTC144EKA

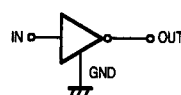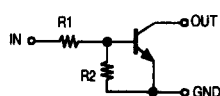



DTC143EK
DTC144EK

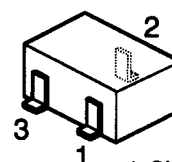


1: GND/Emitter
2: Out/Collector
3: In/Base

● DIODES (included LED)


1S2471

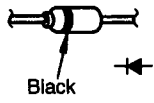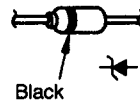
HZ9A3
HZS6C


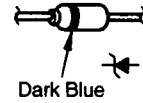
SLR54

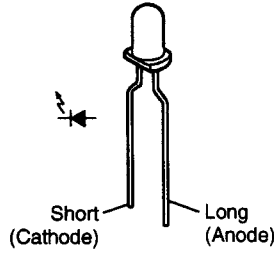




S4VB20

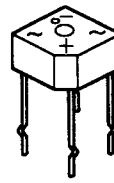

MTZJ3.3A



● FLD (FL701)

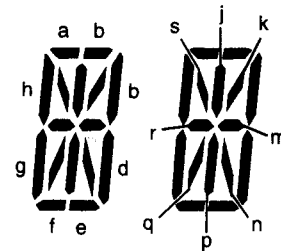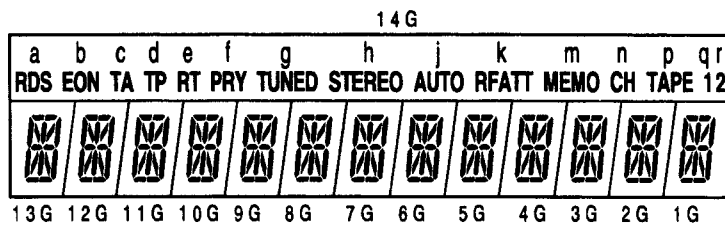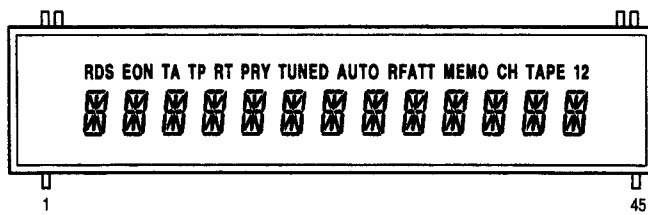

PIN CONNECTION

| Pin No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 |
|------------|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|-----|-----|-----|
| Connection | F1 | F1 | NP | NP | NC | NC | NC | NC | NC | NC | NC | P16 | P15 | P14 | P13 | P12 | P11 | P10 | P9 | P8 | P7 | P6 | P5 | P4 | P3 | P2 | P1 | 14G | 13G | 12G |

| Pin No. | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 |
|------------|-----|-----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Connection | 11G | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G | NP | NP | F2 | F2 |

Note 1) F1, F2 Filament
2) NP No pin
3) NC No connection
4) DL Datum line
5) 1G~14G Gird

ANODE CONNECTION

| | 14G | 13G | 12G | 11G | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G |
|-----|--------|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|
| P1 | RDS | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 | a1 |
| P2 | EON | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 | a2 |
| P3 | TA | b | b | b | b | b | b | b | b | b | b | b | b | b |
| P4 | TP | c | c | c | c | c | c | c | c | c | c | c | c | c |
| P5 | RT | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 | d2 |
| P6 | PTY | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 | d1 |
| P7 | TUNED | e | e | e | e | e | e | e | e | e | e | e | e | e |
| P8 | STEREO | f | f | f | f | f | f | f | f | f | f | f | f | f |
| P9 | AUTO | j | j | j | j | j | j | j | j | j | j | j | j | j |
| P10 | RFATT | k | k | k | k | k | k | k | k | k | k | k | k | k |
| P11 | MEMO | m | m | m | m | m | m | m | m | m | m | m | m | m |
| P12 | CH | n | n | n | n | n | n | n | n | n | n | n | n | n |
| P13 | TAPE | p | p | p | p | p | p | p | p | p | p | p | p | p |
| P14 | 1 | r | r | r | r | r | r | r | r | r | r | r | r | r |
| P15 | 2 | g | g | g | g | g | g | g | g | g | g | g | g | g |
| P16 | — | h | h | h | h | h | h | h | h | h | h | h | h | h |

NOTE FOR PARTS LIST

- Part indicated with the mark "◎" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film $\pm 5\%$, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

● Resistors

Ex.: RN 14K 2E 182 G FR
Type Shape Power Resist- Allowable Others
 and per-
 formance

| | | | |
|-----------------------|-----------|----------------|--------------------------|
| RD : Carbon | 2B : 1/8W | F : $\pm 1\%$ | P : Pulse-resistant type |
| RC : Composition | 2E : 1/4W | G : $\pm 2\%$ | NL : Low noise type |
| RS : Metal oxide film | 2H : 1/2W | J : $\pm 5\%$ | NB : Non-burning type |
| RW : Winding | 3A : 1W | K : $\pm 10\%$ | FR : Fuse-resistor |
| RN : Metal film | 3D : 2W | M : $\pm 20\%$ | F : Lead wire forming |
| RK : Metal mixture | 3F : 3W | | |
| | 3H : 5W | | |

* Resistance

1 8 2 \Rightarrow 1800 ohm = 1.8 kohm
Indicates number of zeros after effective number.
2-digit effective number.

• Units: ohm

1 R 2 \Rightarrow 1.2 ohm
1-digit effective number.
2-digit effective number, decimal point indicated by R.

• Units: ohm

● Capacitors

Ex.: CE 04W 1H 2R2 M BP
Type Shape Dielectric Capacity Allowable Others
 and per-
 formance

| | | | |
|----------------------------------|-----------|-------------------------|----------------------------------|
| CE : Aluminum foil electrolytic | 0J : 6.3V | F : $\pm 1\%$ | HS : High stability type |
| CA : Aluminum solid electrolytic | 1A : 10V | G : $\pm 2\%$ | BP : Non-polar type |
| CS : Tantalum electrolytic | 1C : 16V | J : $\pm 5\%$ | HR : Ripple-resistant type |
| CQ : Film | 1E : 25V | K : $\pm 10\%$ | DL : For change and discharge |
| CK : Ceramic | 1V : 35V | M : $\pm 20\%$ | HF : For assuring high frequency |
| CC : Ceramic | 1H : 50V | Z : $\pm 80\%$ | U : UL part |
| CP : Oil | 2A : 100V | P : $\pm 20\%$ | C : CSA part |
| CM : Mica | 2B : 125V | P : $\pm 100\%$ | W : UL-CSA type |
| CF : Metallized | 2C : 160V | C : $\pm 0.25\text{pF}$ | F : Lead wire forming |
| CH : Metallized | 2D : 200V | D : $\pm 0.5\text{pF}$ | |
| | 2E : 250V | = : Others | |
| | 2H : 500V | | |
| | 2J : 630V | | |

* Capacity (electrolyte only)

2 2 2 \Rightarrow 2200 μF
Indicates number of zeros after effective number.
2-digit effective number.

• Units: μF .

2 R 2 \Rightarrow 2.2 μF
1-digit effective number.
2-digit effective number, decimal point indicated by R.

• Units: μF .

* Capacity (except electrolyte)

2 2 2 \Rightarrow 2200pF=0.0022 μF
(More than 2)—Indicates number of zeros after effective number.
2-digit effective number.

• Units: μF .

2 2 1 \Rightarrow 220pF
(0 or 1) —Indicates number of zeros after effective number.
2-digit effective number.

• Units: pF.

• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

PARTS LIST OF P.W.B. UNIT ASS'Y **MAIN P.W.B. ASS'Y**

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|-----------------------------|--------------|--------------------------|---------|----------|--------------|--------------------------|---------|
| SEMICONDUCTORS GROUP | | | | TR415 | 274 0060 007 | Transistor 2SD667A(C) | |
| IC451 | 263 0615 902 | IC BA15218F | | TR417 | 272 0053 005 | Transistor 2SB647(C) | |
| IC571 | 263 0855 005 | IC SI18752 | | TR419 | 273 0430 003 | Transistor 2SC4278(E/F) | |
| IC572 | 263 0855 005 | IC SI18752 | | TR421 | 271 0276 009 | Transistor 2SA1633(E/F) | |
| IC573 | 263 0516 001 | IC NJM7812FA | | TR423 | 273 0235 020 | Transistor 2SC1841(E/F) | |
| IC574 | | IC NJM7912FA | | TR442 | UDM D010 434 | Transistor DTA114EKA | |
| IC575 | 9LC P024 12 | IC KIA7806PI | | TR443 | 269 0048 904 | Transistor DTC143EK | |
| IC601 | 262 1875 007 | IC BU4066BCF | | TR481 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| IC913 | 9LC K089 01R | IC BU4094BCF | | TR482 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| IC914 | 9LC K089 01R | IC BU4094BCF | | TR483 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR301 | 271 0094 016 | Transistor 2SA970(BL) | | TR484 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR302 | 271 0094 016 | Transistor 2SA970(BL) | | TR485 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR303 | 271 0094 016 | Transistor 2SA970(BL) | | TR486 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR304 | 271 0094 016 | Transistor 2SA970(BL) | | TR487 | 271 0238 908 | Transistor 2SA1037K(Q/R) | |
| TR305 | 271 0131 021 | Transistor 2SA988(E/F) | | TR488 | 269 0054 901 | Transistor DTC144EK | |
| TR306 | 271 0131 021 | Transistor 2SA988(E/F) | | TR531 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR307 | 273 0235 020 | Transistor 2SC1841(E/F) | | TR551 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR308 | 273 0235 020 | Transistor 2SC1841(E/F) | | TR601 | 273 0317 906 | Transistor 2SC2458(BL) | |
| TR309 | 273 0235 020 | Transistor 2SC1841(E/F) | | TR602 | 273 0317 906 | Transistor 2SC2458(BL) | |
| TR310 | 273 0235 020 | Transistor 2SC1841(E/F) | | TR603 | 271 0102 021 | Transistor 2SA1015(GR) | |
| TR311 | 273 0235 020 | Transistor 2SC1841(E/F) | | TR604 | 271 0102 021 | Transistor 2SA1015(GR) | |
| TR312 | 273 0235 020 | Transistor 2SC1841(E/F) | | TR651 | 273 0253 028 | Transistor 2SC2878(B) | |
| TR313 | 273 0325 008 | Transistor 2SC1815(GR) | | TR653 | 273 0253 028 | Transistor 2SC2878(B) | |
| TR314 | 273 0325 008 | Transistor 2SC1815(GR) | | TR801 | 269 0048 904 | Transistor DTC143EK | |
| TR315 | 274 0060 007 | Transistor 2SD667A(C) | | TR802 | 273 0384 900 | Transistor 2SC2412K(Q/R) | |
| TR316 | 274 0060 007 | Transistor 2SD667A(C) | | TR803 | UDM D010 434 | Transistor DTA114EKA | |
| TR317 | 272 0053 005 | Transistor 2SB647A(C) | | TR903 | UDM D010 434 | Transistor DTA114EKA | |
| TR318 | 272 0053 005 | Transistor 2SB647A(C) | | TR904 | UDM D010 434 | Transistor DTA114EKA | |
| TR319 | 273 0430 003 | Transistor 2SC4278(E/F) | | D301 | 276 0401 905 | Diode 1SS133 | |
| TR320 | 273 0430 003 | Transistor 2SC4278(E/F) | | D302 | 276 0401 905 | Diode 1SS133 | |
| TR321 | 271 0276 009 | Transistor 2SA1633(E/F) | | D303 | 276 0401 905 | Diode 1SS133 | |
| TR322 | 271 0276 009 | Transistor 2SA1633(E/F) | | D304 | 276 0401 905 | Diode 1SS133 | |
| TR323 | 273 0235 020 | Transistor 2SC1841(E/F) | | D305 | 276 0401 905 | Diode 1SS133 | |
| TR324 | 273 0235 020 | Transistor 2SC1841(E/F) | | D306 | 276 0401 905 | Diode 1SS133 | |
| TR325 | 271 0131 021 | Transistor 2SA988(E/F) | | D307 | 9L2 3312 32M | Diode 1S2471B | |
| TR351 | 271 0131 021 | Transistor 2SA988(E/F) | | D308 | 9L2 3312 32M | Diode 1S2471B | |
| TR352 | 271 0131 021 | Transistor 2SA988(E/F) | | D309 | 9L2 3312 32M | Diode 1S2471B | |
| TR353 | 273 0384 900 | Transistor 2SC2412K(Q/R) | | D310 | 9L2 3312 32M | Diode 1S2471B | |
| TR354 | 271 0238 908 | Transistor 2SA1037K(Q/R) | | D311 | 276 0401 905 | Diode 1SS133 | |
| TR355 | 9L2 3286 25 | Transistor 2SB647(C) | | D312 | 276 0401 905 | Diode 1SS133 | |
| TR401 | 271 0094 016 | Transistor 2SA970(BL) | | D351 | 276 0338 007 | Diode S4VB20 | |
| TR403 | 271 0094 016 | Transistor 2SA970(BL) | | D352 | 276 0401 905 | Diode 1SS133 | |
| TR405 | 271 0131 021 | Transistor 2SA988(E/F) | | D401 | 276 0401 905 | Diode 1SS133 | |
| TR407 | 273 0235 020 | Transistor 2SC1841(E/F) | | D403 | 276 0401 905 | Diode 1SS133 | |
| TR409 | 273 0235 020 | Transistor 2SC1841(E/F) | | D405 | 276 0401 905 | Diode 1SS133 | |
| TR411 | 273 0235 020 | Transistor 2SC1841(E/F) | | D407 | 9L2 3312 32M | Diode 1S2471B | |
| TR413 | 273 0325 901 | Transistor 2SC1815(GR) | | | | | |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|------------------------|--------------|----------------------|----------------|----------|--------------|-----------------------------|------------------|
| D409 | 9L2 3312 32M | Diode 1S2471B | | R315 | 241 2380 963 | Carbon 2.2kohm | RD14S2E222J(NB) |
| D411 | 276 0401 905 | Diode 1SS133 | | R316 | 241 2380 963 | Carbon 2.2kohm | RD14S2E222J(NB) |
| D441 | 276 0401 905 | Diode 1SS133 | | R317 | 241 2380 963 | Carbon 2.2kohm | RD14S2E222J(NB) |
| D481 | 276 0401 905 | Diode 1SS133 | | R318 | 241 2380 963 | Carbon 2.2kohm | RD14S2E222J(NB) |
| D482 | 276 0401 905 | Diode 1SS133 | | R319 | 241 2315 967 | Carbon film 68ohm 1/4W (NB) | RD45B2E680JNB-FR |
| D483 | 276 0401 905 | Diode 1SS133 | | R320 | 241 2315 967 | Carbon film 68ohm 1/4W (NB) | RD45B2E680JNB-FR |
| D484 | 9L2 2000 03R | Diode SDDC-1SS355 | | R321 | 241 2377 976 | Carbon 130ohm | RD14S2E131J(NB) |
| | | | | R322 | 241 2377 976 | Carbon 130ohm | RD14S2E131J(NB) |
| D571 | 276 0401 905 | Diode 1SS133 | | R323 | 241 2377 976 | Carbon 130ohm | RD14S2E131J(NB) |
| D572 | 276 0338 007 | Diode S4VB20 | | R324 | 241 2377 976 | Carbon 130ohm | RD14S2E131J(NB) |
| D573 | 276 0401 905 | Diode 1SS133 | | R325 | | Chip 5.6kohm | RNC562J1-16 |
| | | | | R326 | | Chip 5.6kohm | RNC562J1-16 |
| D616 | 276 0401 905 | Diode 1SS133 | | R327 | | Chip 75kohm | RMC73M-1F753JR |
| D617 | 276 0401 905 | Diode 1SS133 | | R328 | | Chip 75kohm | RMC73M-1F753JR |
| | | | | R329 | | Carbon 9.1kohm | RDL-912J1-16LQ |
| D801 | 9L2 3980 64 | Diode IN4001-U01 | | R330 | | Carbon 9.1kohm | RDL-912J1-16LQ |
| D802 | 276 0401 905 | Diode 1SS133 | | R331 | 241 2378 920 | Carbon 220ohm | RD14S2E221J(NB) |
| D803 | 276 0401 905 | Diode 1SS133 | | R332 | 241 2378 920 | Carbon 220ohm | RD14S2E221J(NB) |
| D804 | 276 0401 905 | Diode 1SS133 | | R333 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R334 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| D905 | 276 0401 905 | Diode 1SS133 | | R335 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| D912 | 276 0401 905 | Diode 1SS133 | | R336 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R337 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| ZD301 | DB8 00-0 112 | Zener diode HZS6C2L | | R338 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| ZD302 | DB8 00-0 112 | Zener diode HZS6C2L | | R339 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| ZD351 | 9W2 3392 23 | Zener diode HZS27-3L | | R340 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R341 | | Chip 20kohm | RMC73M-1F203JR |
| ZD401 | DB8 00-0 112 | Zener diode HZS6C2L | | R342 | | Chip 20kohm | RMC73M-1F203JR |
| | | | | R343 | | Chip 20kohm | RMC73M-1F203JR |
| ZD551 | DB8 00-0 112 | Zener diode HZS6C2L | | R344 | | Chip 20kohm | RMC73M-1F203JR |
| ZD571 | DB8 00-0 112 | Zener diode HZS6C2L | | R345 | | Chip 10kohm | RNC103J1-16 |
| | | | | R346 | | Chip 10kohm | RNC103J1-16 |
| ZD801 | 276 0634 905 | Zener diode MTZJ3.3A | | R347 | | Chip 270kohm | RNC274J1-16 |
| | | | | R348 | | Chip 270kohm | RNC274J1-16 |
| TH531 | 9LC J001 51 | PTH9M04B222TS2F333 | | R349 | 241 2407 082 | Carbon film 2.2ohm | RD14S1J2R2J |
| | | | | R350 | 241 2407 082 | Carbon film 2.2ohm | RD14S1J2R2J |
| | | | | R351 | | Chip 22kohm | RNC223J1-16 |
| | | | | R352 | | Chip 22kohm | RNC223J1-16 |
| | | | | R353 | | Chip 20kohm | RMC73M-1F203JR |
| | | | | R354 | | Chip 20kohm | RMC73M-1F203JR |
| | | | | R358 | | Chip 10kohm | RNC103J1-16 |
| | | | | R359 | | Chip 10kohm | RNC103J1-16 |
| | | | | R361 | 244 2043 050 | Metal oxide 470ohm 1W | RS08B3A471JS |
| | | | | R362 | 244 2043 050 | Metal oxide 470ohm 1W | RS08B3A471JS |
| | | | | R371 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R372 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R373 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R374 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N |
| | | | | R375 | | Chip 910ohm | RMZ73M-1F911JR |
| | | | | R376 | | Chip 560kohm | RNC564J1-16 |
| | | | | R377 | | Chip 22kohm | RNC223J1-16 |
| | | | | R378 | | Chip 470ohm | RNC471J1-16 |
| RESISTORS GROUP | | | | | | | |
| R301 | | Chip 10kohm | RNC103J1-16 | | | | |
| R302 | | Chip 10kohm | RNC103J1-16 | | | | |
| R303 | | Chip 470ohm | RNC471J1-16 | | | | |
| R304 | | Chip 470ohm | RNC471J1-16 | | | | |
| R305 | | Carbon film 12kohm | RD14S1J123JQ | | | | |
| R306 | | Carbon film 12kohm | RD14S1J123JQ | | | | |
| R307 | | Chip 30ohm | RMC73M-1F300JR | | | | |
| R308 | | Chip 30ohm | RMC73M-1F300JR | | | | |
| R309 | | Carbon film 10kohm | RD14S1J103JQ | | | | |
| R310 | | Carbon film 10kohm | RD14S1J103JQ | | | | |
| R311 | | Chip 47ohm | RNC470J1-16 | | | | |
| R312 | | Chip 47ohm | RNC470J1-16 | | | | |
| R313 | | Chip 430ohm | RMC73M-1F431JR | | | | |
| R314 | | Chip 430ohm | RMC73M-1F431JR | | | | |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|----------|--------------|-----------------------------|------------------|----------|--------------|--------------------|-----------------|
| R379 | | Chip 3.6kohm | RMC73M-1F362JR | R465 | | Chip 220ohm | RNC221J1-16 |
| R380 | | Chip 470ohm | RNC471J1-16 | R466 | | Chip 220ohm | RNC221J1-16 |
| R381 | | Chip 560kohm | RNC564J1-16 | R467 | | Chip 11kohm | RMC73M-1F113JR |
| R383 | 241 2400 063 | Carbon 7.5kohm | RDL-752J1-16LQ | R468 | | Chip 11kohm | RMC73M-1F113JR |
| R384 | 241 2315 967 | Metal film 68ohm 1/4W | RN45B2E680JB-FR | R469 | | Chip 1.8kohm | RNC182J1-16 |
| R397 | 241 2402 003 | Carbon 30kohm | RDL-303J1-16LQ | R470 | | Chip 1.8kohm | RNC182J1-16 |
| R398 | 241 2402 003 | Carbon 30kohm | RDL-303J1-16LQ | R471 | | Chip 6.8ohm | RNC6R8J1-16 |
| | | | | R472 | | Chip 6.8ohm | RNC6R8J1-16 |
| R401 | | Chip 10kohm | RNC103J1-16 | R473 | | Chip 200ohm | RMC73M-1F201JR |
| R402 | | Chip 1.5kohm | RNC152J1-16 | R474 | | Chip 200ohm | RMC73M-1F201JR |
| R403 | | Carbon film 12kohm | RD14S1J123JQ | R475 | | Chip 39ohm | RNC390J1-16 |
| R404 | | Chip 100ohm | RNC101J1-16 | R476 | | Chip 39ohm | RNC390J1-16 |
| R405 | | Carbon film 10kohm | RD14S1J103JQ | R477 | | Chip 100ohm | RNC101J1-16 |
| R406 | | Chip 47ohm | RNC470J1-16 | R478 | | Chip 100ohm | RNC101J1-16 |
| R407 | | Chip 430ohm | RMC73M-1F431JR | R481 | 241 2321 087 | Carbon 120ohm | RD14S2E121J(NB) |
| R408 | 241 2380 963 | Carbon 2.2kohm | RD14S2E222J(NB) | R482 | 241 2321 087 | Carbon 120ohm | RD14S2E121J(NB) |
| R409 | 241 2380 963 | Carbon 2.2kohm | RD14S2E222J(NB) | R484 | | Chip 10kohm | RNC103J1-16 |
| R410 | 241 2315 967 | Metal film 68ohm 1/4W | RN45B2E680JNB-FR | R485 | | Chip 4.7kohm | RNC4R7J1-16 |
| R411 | 241 2377 976 | Carbon 130ohm | RD14S2E131J(NB) | R486 | | Chip 10kohm | RNC103J1-16 |
| R412 | 241 2377 976 | Carbon 130ohm | RD14S2E131J(NB) | R488 | | Chip 10kohm | RNC103J1-16 |
| R413 | | Chip 6kohm | RNC562J1-16 | R489 | | Chip 47ohm | RNC470J1-16 |
| R414 | | Chip 75kohm | RMC73M-1F753JR | R490 | | Chip 4.7kohm | RNC472J1-16 |
| R415 | | Carbon 9.1kohm | RDL-912J1-16LQ | R491 | | Chip 1kohm | RNC102J1-16 |
| R416 | 241 2378 920 | Carbon 220ohm | RD14S2E221J(NB) | R492 | | Chip 10kohm | RNC103J1-16 |
| R417 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N | R493 | | Chip 47kohm | RNC473J1-16 |
| R418 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N | R494 | | Chip 47kohm | RNC473J1-16 |
| R419 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N | R496 | | Chip 4.7kohm | RNC472J1-16 |
| R420 | 244 2043 982 | 0.22ohm 1W | RE-R22J0001N | R497 | | Chip 4.7kohm | RNC472J1-16 |
| R421 | | Chip 20kohm | RMC73M-1F203JR | R498 | | Chip 4.7kohm | RNC472J1-16 |
| R422 | | Chip 20kohm | RMC73M-1F203JR | R499 | | Chip 47ohm | RNC470J1-16 |
| R424 | | Chip 270kohm | RNC274J1-16 | | | | |
| R425 | 241 2393 002 | Carbob 4.7ohm | RD14S1J4R7J | R571 | | Chip 22kohm | RNC223J1-16 |
| R426 | | Chip 2.2ohm | RNC223J1-16 | R572 | | Chip 22kohm | RNC223J1-16 |
| R427 | | Chip 20kohm | RMC73M-1F203JR | R573 | | Chip 1.2kohm | RNC122J1-16 |
| R428 | | Chip 10kohm | RNC103J1-16 | R574 | | Chip 1.2kohm | RNC122J1-16 |
| R429 | | Chip 10kohm | RNC103J1-16 | R575 | 241 2402 003 | Carbon 30kohm | RDL-303J1-16LQ |
| R431 | 244 2051 987 | 4.7ohm 1W | RE-4R7J0001N | R576 | 241 2402 003 | Carbon 30kohm | RDL-303J1-16LQ |
| R433 | | 4.7ohm 1W | RE-4R7J0001N | R577 | 241 2393 002 | Carbon film 4.7ohm | RD14S1J4R7J |
| R434 | | 4.7ohm 1W | RE-4R7J0001N | R578 | 241 2393 002 | Carbon film 4.7ohm | RD14S1J4R7J |
| R437 | | Chip 10kohm | RNC103J1-16 | R579 | 244 2051 987 | 4.7ohm 1W | RE-4R7J0001N |
| R438 | | Chip 13kohm | RMC73M-1F133JR | R580 | 244 2051 987 | 4.7ohm 1W | RE-4R7J0001N |
| R442 | 241 0185 005 | Carbon film 1kohm 1/2W (NB) | RD14S2H102JB | R581 | | Chip 20kohm | RMC73M-1F203JR |
| R443 | | Chip 2.2kohm | RNC222J1-16 | R582 | | Chip 20kohm | RMC73M-1F203JR |
| R445 | | Chip 2.2kohm | RNC222J1-16 | R583 | 241 2321 087 | Carbon 120ohm | RD14S2E121J(NB) |
| R451 | | Chip 470ohm | RNC471J1-16 | R584 | | Chip 390kohm | RNC394J1-16 |
| R452 | | Chip 470ohm | RNC471J1-16 | R585 | | Chip 10kohm | RNC103J1-16 |
| R453 | | Chip 62kohm | RMC73M-1F623JR | R586 | | Chip 20kohm | RNC73M-1F203JR |
| R454 | | Chip 62kohm | RMC73M-1F623JR | R587 | | Chip 4.7kohm | RNC472J1-16 |
| R457 | | Chip 62kohm | RMC73M-1F623JR | | | | |
| R458 | | Chip 62kohm | RMC73M-1F623JR | R601 | 241 2395 097 | Carbon 75ohm | RDL-750J1-16LQ |
| R463 | | Chip 1.2kohm | RNC122J1-16 | R603 | 241 2395 097 | Carbon 75ohm | RDL-750J1-16LQ |
| R464 | | Chip 1.2kohm | RNC122J1-16 | R604 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |

| Ref. No. | Part No. | Part Name | Remarks |
|----------|--------------|----------------------------|----------------|
| R608 | 241 2400 979 | Carbon 8.2kohm | RDL-822J1-16LQ |
| R611 | 241 2400 979 | Carbon 8.2kohm | RDL-822J1-16LQ |
| R612 | 241 2400 979 | Carbon 8.2kohm | RDL-822J1-16LQ |
| R613 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| R614 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| R615 | 241 2397 008 | Carbon 220ohm | RDL-221J1-16LQ |
| R616 | 241 2397 008 | Carbon 220ohm | RDL-221J1-16LQ |
| R617 | 241 2398 007 | Carbon 620ohm | RDL-621J1-16LQ |
| R618 | 241 2398 007 | Carbon 620ohm | RDL-621J1-16LQ |
| R619 | 241 2397 008 | Carbon 220ohm | RDL-221J1-16LQ |
| R620 | 241 2397 008 | Carbon 220ohm | RDL-221J1-16LQ |
| R621 | 241 2395 097 | Carbon 75ohm | RDL-750J1-16LQ |
| R622 | 241 2395 097 | Carbon 75ohm | RDL-750J1-16LQ |
| R623 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| R624 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| R625 | 241 2400 995 | Carbon film 10kohm | RDL-103J1-16LQ |
| R626 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| R677 | | Chip 2.2kohm | RNC222J1-16 |
| R680 | | Chip 15kohm | RNC153J1-16 |
| R681 | | Chip 15kohm | RNC153J1-16 |
| R682 | | Chip 15kohm | RNC153J1-16 |
| R683 | | Chip 910ohm | RMC73M-1F911JR |
| R684 | | Chip 15kohm | RNC153J1-16 |
| R685 | | Chip 910ohm | RMC73M-1F911JR |
| R686 | | Chip 2.2kohm | RNC222J1-16 |
| R739 | | Chip 2.2kohm | RNC222J1-16 |
| R740 | | Chip 2.2kohm | RNC222J1-16 |
| R747 | | Chip 2.2kohm | RNC222J1-16 |
| R748 | | Chip 6.8kohm | RNC682J1-16 |
| R749 | | Chip 6.8kohm | RNC682J1-16 |
| R802 | | Chip 10kohm | RNC103J1-16 |
| R803 | | Chip 1kohm | RNC102J1-16 |
| R804 | | Chip 1kohm | RNC102J1-16 |
| R805 | | Chip 1kohm | RNC102J1-16 |
| R806 | | Chip 4.7kohm | RNC472J1-16 |
| R807 | | Chip 4.7kohm | RNC472J1-16 |
| R808 | | Chip 220kohm | RNC224J1-16 |
| R809 | | Chip 10kohm | RNC103J1-16 |
| R810 | | Chip 10kohm | RNC103J1-16 |
| VR301 | 9LA W001 61R | Semi fixed resistor 5 kohm | RT6-3H502T |
| VR302 | 9LA W001 61R | Semi fixed resistor 5 kohm | RT6-3H502T |
| VR401 | 9LA W001 61R | Semi fixed resistor 5 kohm | RT6-3H502T |
| VR451 | 9LA Y001 81 | Variable resistor 100 kohm | BALANCE |
| VR452 | 9LA Y001 82 | Variable resistor 30 kohm | BASS |
| VR453 | 9LA Y001 83 | Variable resistor 10 kohm | TREBLE |

| Ref. No. | Part No. | Part Name | Remarks |
|-------------------------|--------------|--------------------------------|-------------------|
| CAPACITORS GROUP | | | |
| C301 | 254 4256 004 | Electrolytic 10 μ F/25V | CE04W1E100MB(SSL) |
| C302 | 254 4256 004 | Electrolytic 10 μ F/25V | CE04W1E100MB(SSL) |
| C303 | | Ceramic chip 220pF/50V | CC73MSL1H221J |
| C304 | | Ceramic chip 220pF/50V | CC73MSL1H221J |
| C305 | | Ceramic chip 220pF/50V | CC73MSL1H221J |
| C306 | | Ceramic chip 220pF/50V | CC73MSL1H221J |
| C307 | | Ceramic chip 6800pF/50V | CK73MB1H682J |
| C308 | | Ceramic chip 6800pF/50V | CK73MB1H682J |
| C309 | | Ceramic chip 100pF/50V | CC73MSL1H101J |
| C310 | | Ceramic chip 100pF/50V | CC73MSL1H101J |
| C311 | 254 4256 059 | Electrolytic 220 μ F/25V | CE04W1E221MB(SSL) |
| C312 | 254 4256 059 | Electrolytic 220 μ F/25V | CE04W1E221MB(SSL) |
| C313 | 255 4199 986 | Mylar film 1000pF/50V | CQ92M1H102KB |
| C314 | 255 4199 986 | Mylar film 1000pF/50V | CQ92M1H102KB |
| C315 | 255 4199 986 | Mylar film 1000pF/50V | CQ92M1H102KB |
| C316 | 255 4199 986 | Mylar film 1000pF/50V | CQ92M1H102KB |
| C317 | | Ceramic 18pF/500V | CC45SL2H180KB |
| C318 | | Ceramic D36918pF/500V | CC45SL2H180KB |
| C319 | 254 4260 045 | Electrolytic 1 μ F/50V | CE04W1H1R0MB(SSL) |
| C320 | 254 4260 045 | Electrolytic 1 μ F/50V | CE04W1H1R0MB(SSL) |
| C321 | 255 1134 025 | Mylar film 0.01 μ F/50V | CQ92M1H103KB |
| C322 | 255 1134 025 | Mylar film 0.01 μ F/50V | CQ92M1H103KB |
| C325 | 053 1028 009 | Ceramic 220pF/500V | CK45B2H221KB |
| C326 | 253 1028 009 | Ceramic 220pF/500V | CK45B2H221KB |
| C327 | 255 1134 025 | Mylar film 0.01 μ F/50V | CQ92M1H103KB |
| C331 | 254 4260 074 | Electrolytic 4.7 μ F/50V | CE04W1H4R7MB(SSL) |
| C332 | 254 4260 074 | Electrolytic 4.7 μ F/50V | CE04W1H4R7MB(SSL) |
| C333 | 254 4260 074 | Electrolytic 4.7 μ F/50V | CE04W1H4R7MB(SSL) |
| C334 | 254 4260 074 | Electrolytic 4.7 μ F/50V | CE04W1H4R7MB(SSL) |
| C351 | 9LA L004 71 | 8200 μ /50v | 8200 μ /50v |
| C352 | 9LA L004 71 | 8200 μ /50v | 8200 μ /50v |
| C355 | 255 1131 002 | Mylar film 0.1 μ F/100V | MYL-ECQB2104KF3 |
| C356 | 255 1134 054 | Mylar film 0.1 μ F/50V | CQ92M1H104KB |
| C357 | 255 1134 054 | Mylar film 0.1 μ F/50V | CQ92M1H104KB |
| C358 | 254 4260 045 | Electrolytic 1 μ F/50V | CE04W1H1R0MB(SSL) |
| C359 | 254 4260 045 | Electrolytic 1 μ F/50V | CE04W1H1R0MB(SSL) |
| C365 | | Ceramic 0.01 μ F | CCT103M16D3 |
| C366 | | Ceramic 0.01 μ F | CCT103M16D3 |
| C399 | 255 1134 054 | Mylar film 0.1 μ F/50V | CQ92M1H104KB |
| C401 | 254 4256 004 | Electrolytic 10 μ F/25V | CE04W1E100MB(SSL) |
| C402 | | Ceramic chip 2200pF/50V | CK73MSL1H222K |
| C403 | | Ceramic chip 220pF/50V | CC73MSL1H221J |
| C404 | | Ceramic chip 0.012 μ F/50V | CK73MB1H123K |
| C405 | | Ceramic chip 100pF/50V | CC73MSL1H101J |
| C406 | 254 4256 059 | Electrolytic 220 μ F/25V | CE04W1E221MB(SSL) |
| C407 | 255 4199 986 | Mylar film 1000pF/50V | CQ92M1H102KB |
| C408 | 255 4199 986 | Mylar film 1000pF/50V | CQ92M1H102KB |
| C409 | | Ceramic chip 33pF/500V | CC45SL2H330KB |
| C410 | 254 4260 045 | Electrolytic 1 μ F/50V | CE04W1H1R0MB(SSL) |
| C411 | 255 4213 972 | Mylar film 0.01 μ F/50V | CQ92M1H103KB |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|--------------------------|--------------|-----------------------------|-------------------|----------|--------------|--------------------------|-------------------|
| C421 | 254 4260 074 | Electrolytic 4.7μF/50V | CE04W1H4R7MB(SSL) | C590 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C422 | 254 4260 074 | Electrolytic 4.7μF/50V | CE04W1H4R7MB(SSL) | C591 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C425 | 253 1028 009 | Ceramic 220pF/500V | CK45B2H221KB | C592 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) |
| C431 | 255 1134 054 | Mylar film 0.1μF/50V | CQ92M1H104KEB | C593 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C432 | | Ceramic chip 0.01μF | CCT103M16D3 | C594 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C433 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KEB | C601 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) |
| C434 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KEB | C602 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) |
| C451 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C604 | 254 4254 080 | Electrolytic 1000μF/16V | CE04W1C102MF |
| C452 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C605 | | Ceramic chip 5pF | CCT5R050D3 |
| C455 | | Ceramic chip 100pF/50V | CC73MSL1H101J | C606 | | Ceramic chip 5pF | CCT5R050D3 |
| C456 | | Ceramic chip 100pF/50V | CC73MSL1H101J | C607 | 254 4252 079 | Electrolytic 1000μF/10V | CE04W1A102MF |
| C457 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) | C608 | 254 4252 079 | Electrolytic 1000μF/10V | CE04W1A102MF |
| C458 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) | C671 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C459 | | Ceramic chip 2200pF/50V | CK73MB1H222K | C672 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C460 | | Ceramic chip 2200pF/50V | CK73MB1H222K | C675 | 254 4256 046 | Electrolytic 100μF/25V | CE04W1E101MB(SSL) |
| C461 | 256 1034 004 | Mylar film 0.18μF | CQM-184J500R | C676 | 254 4256 046 | Electrolytic 100μF/25V | CE04W1E101MB(SSL) |
| C462 | 256 1034 004 | Mylar film 0.18μF | CQM-184J500R | C677 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C463 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C464 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C801 | 254 4250 084 | Electrolytic 3300μF/6.3V | CE04W0J332M |
| C467 | | Ceramic chip 0.012μF/50V | CK73MB1H123K | C802 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C468 | | Ceramic chip 0.012μF/50V | CK73MB1H123K | C803 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C469 | | Ceramic chip 0.056μF/16V | CK73MB1C563K | C804 | 254 4260 074 | Electrolytic 4.7μF/50V | CE04W1H4R7MB(SSL) |
| C470 | | Ceramic chip 0.056μF/16V | CK73MB1C563K | C805 | 255 4199 915 | Mylar film 0.12μF | CQM-124J500R |
| C471 | 254 4196 928 | Electrolytic 0.33μF/50V | CE04W1HR33(SRA) | C806 | 254 4250 039 | Electrolytic 220μF/6.3V | CE04W0J221MB(SME) |
| C472 | 254 4196 928 | Electrolytic 0.33μF/50V | CE04W1HR133(SRA) | C807 | | Ceramic chip 0.01μF/50V | CK73MB1H103K |
| C473 | | Ceramic chip 0.047μF/50V | CK73MF1H473Z | | | | |
| C474 | | Ceramic chip 0.022μF/50V | CK73MF1H223Z | | | | |
| C481 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) | C921 | 254 4250 039 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) |
| C482 | 254 4256 042 | Electrolytic 330μF/6.3V | CE04W0J331MB | | | | |
| C498 | | Ceramic chip 0.1μF/25V | CK73MF1E104Z | | | | |
| C499 | | Ceramic chip 0.1μF/25V | CK73MF1E104Z | | | | |
| C526 | | Ceramic chip 0.01μF | CCT103M16D3 | | | | |
| C571 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) | | | | |
| C572 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) | | | | |
| C573 | | Ceramic chip 4700pF/50V | CK73MB1H472K | | | | |
| C574 | | Ceramic chip 4700pF/50V | CK73MB1H472K | | | | |
| C575 | | Ceramic chip 100pF/50V | CC73MSL1H101J | | | | |
| C576 | | Ceramic chip 100pF/50V | CC73MSL1H101J | | | | |
| C577 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) | | | | |
| C578 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) | | | | |
| C579 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C580 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C581 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C582 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C583 | 255 1134 054 | Mylar film 0.1μF/50V | CQ92M1H104KEB | | | | |
| C584 | 255 1134 054 | Mylar film 0.1μF/50V | CQ92M1H104KEB | | | | |
| C585 | 256 1034 076 | Mylar film 0.1μF/100V | MYL-ECQB2104KF3 | | | | |
| C586 | 254 4261 772 | Electrolytic 2200μF | CE04W1F222 | | | | |
| C587 | 254 4261 772 | Electrolytic 2200μF | CE04W1F222 | | | | |
| C588 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | | | | |
| C589 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | | | | |
| OTHER PARTS GROUP | | | | | | | |
| | CN004A | 4P PH Pinpost | | | | | |
| | CN004B | 4P PH B-C Connector | L=80 | | | | |
| | CN005A | 4P MX Pinpost | | | | | |
| | CN006A | 6P PIN Header | | | | | |
| | CN007A | 8P PIN Header | | | | | |
| | CN008A | 7P PIN Header | | | | | |
| | CN009A | 10P PIN Header | | | | | |
| | CN010A | 10P PIN Header | | | | | |
| | CN013A | 13P PIN Header | | | | | |
| | CN015C | 10P PIN Header | | | | | |
| | CN015D | 10P PIN Header | | | | | |
| | CN016A | 10P PIN Header | | | | | |
| | CN017 | 6P TSB Connector | L=100 | | | | |
| | CN018A | 2P TXL Pinpost | | | | | |
| | CN018B | 2P TXL B-C Connector | L=350 | | | | |
| | CN025A | 9LE D007 92 FFC Connector | | | | | |
| | JK002 | 9LE R002 41 1P USPIN Jack | | | | | |
| | JK003 | 9LE R002 26 2P USPIN Jack | | | | | |
| | JK502 | 9L2 6950 13 Headphones jack | | | | | |

FL P.W.B. ASS'Y

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|----------|-------------|------------------|---------|-----------------------------|--------------|--------------------------|---------|
| JK601 | 9LE R002 33 | 4P USPIN Jack | | SEMICONDUCTORS GROUP | | | |
| L301 | 9L2 2273 63 | Audio trap coil | | IC001 | 263 0891 001 | IC LA1265S | |
| L302 | 9L2 2273 63 | Audio trap coil | | IC002 | 9LC P030 61 | IS LA6401 | |
| L401 | 9L2 2273 63 | Audio trap coil | | IC003 | 262 2348 009 | IC LM7001 | |
| L571 | 9L2 2273 63 | Audio trap coil | | IC101 | 263 0672 903 | IC BA4558F | |
| L572 | 9L2 2273 63 | Audio trap coil | | IC102 | 9LC P030 51 | IC LC78212 | |
| RL481 | 9L2 6413 21 | Speaker relay | DC24V | IC103 | 263 0672 903 | IC BA4558F | |
| RL482 | 9L2 6413 21 | Speaker relay | DC24V | IC201 | 263 0906 006 | IC NJM2177AF | |
| RL571 | 9L2 6413 21 | Speaker relay | DC24V | IC202 | 9LC K050 32 | IC NJU9702G | |
| SW001 | 9LF E001 81 | Speaker switch | | IC203 | 262 1875 900 | IC BU4066BCF | |
| SP003 | 9LE U004 01 | Speaker terminal | | IC205 | 262 1875 900 | IC BU4066BCF | |
| SP301 | 9LE U003 81 | Speaker terminal | | IC261 | 263 0672 903 | IC BA4558F | |
| SP501 | 9LE U000 86 | Speaker terminal | | IC263 | 263 0672 903 | IC BA4558F | |
| TP-L | | 3P MX Pinpost | | IC265 | 263 0905 007 | IC BA6208F | |
| TP-R | | 3P MX Pinpost | | IC266 | 262 0625 009 | IC TC9176P | |
| TP-C | | 3P MX Pinpost | | IC701 | 262 2455 002 | IC TMP87CM71F-6668 | |
| | | | | IC702 | 9LH N000 31 | IC SBX1910-52 | |
| | | | | TR002 | 273 0434 902 | Transistor 2SC2058S(Q) | |
| | | | | TR003 | 269 0046 906 | Transistor DTA114ES | |
| | | | | TR004 | 269 0046 906 | Transistor DTA114ES | |
| | | | | TR005 | 273 0198 002 | Transistor 2SC1815Y | |
| | | | | TR006 | 275 0053 907 | Transistor 2SK365(BL/GR) | |
| | | | | TR007 | 269 0072 909 | Transistor DTC323TS | |
| | | | | TR008 | 269 0072 909 | Transistor DTC323TS | |
| | | | | TR009 | 269 0079 902 | Transistor DTC144TS | |
| | | | | TR010 | 269 0080 904 | Transistor DTA114TS | |
| | | | | TR201 | UDM D010 434 | Transistor DTA114EKA | |
| | | | | TR202 | 269 0054 901 | Transistor DTC114EKA | |
| | | | | TR203 | 269 0054 901 | Transistor DTC144EKA | |
| | | | | TR205 | 269 0054 901 | Transistor DTC144EKA | |
| | | | | TR206 | | Transistor DTC143EKA | |
| | | | | TR207 | 269 0054 901 | Transistor DTC144EKA | |
| | | | | TR208 | 269 0054 901 | Transistor DTC144EKA | |
| | | | | TR209 | 269 0054 901 | Transistor DTC144EKA | |
| | | | | TR210 | 273 0303 910 | Transistor 2SC1740S(S) | |
| | | | | TR552 | 273 0303 910 | Transistor 2SC1740S(S) | |
| | | | | TR701 | 269 0020 906 | Transistor DTC114ES | |
| | | | | TR702 | 269 0020 906 | Transistor DTC114ES | |
| | | | | TR703 | 269 0062 906 | Transistor DTC124ES | |
| | | | | D001 | 276 0401 905 | Diode 1SS133 | |
| | | | | D002 | 276 0401 905 | Diode 1SS133 | |
| | | | | D003 | 276 0401 905 | Diode 1SS133 | |
| | | | | D006 | 9L2 3980 64 | Diode 1N4001-U01 | |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|------------------------|--------------|---------------------|----------------|----------|--------------|----------------|----------------|
| D202 | 276 0401 905 | Diode 1SS133 | | R035 | 241 2403 934 | Carbon 100kohm | RDL-104J1-16LQ |
| D203 | 276 0401 905 | Diode 1SS133 | | R036 | 241 2399 970 | Carbon 3.3kohm | RDL-332J1-16LQ |
| D204 | 276 0401 905 | Diode 1SS133 | | R037 | 241 2403 934 | Carbon 100kohm | RDL-104J1-16LQ |
| D205 | 276 0401 905 | Diode 1SS133 | | R038 | 241 2403 934 | Carbon 100kohm | RDL-104J1-16LQ |
| D261 | 276 0401 905 | Diode 1SS133 | | R039 | 241 2399 019 | Carbon 1.8kohm | RDL-182J1-16LQ |
| | | | | R040 | 241 2399 019 | Carbon 1.8kohm | RDL-182J1-16LQ |
| D551 | 276 0401 905 | Diode 1SS133 | | R041 | 241 2400 953 | Carbon 6.8kohm | RDL-682J1-16LQ |
| D552 | 9L2 3980 64 | Diode IN4001-U01 | | R042 | 241 2400 953 | Carbon 6.8kohm | RDL-682J1-16LQ |
| D553 | 9L2 3980 64 | Diode IN4001-U01 | | R043 | 241 2401 059 | Carbon 18kohm | RDL-183J1-16LQ |
| D554 | 9L2 3980 64 | Diode IN4001-U01 | | R044 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| D555 | 9L2 3980 64 | Diode IN4001-U01 | | R045 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ |
| D556 | 9L2 3980 64 | Diode IN4001-U01 | | R046 | 241 2400 034 | Carbon 5.6kohm | RDL-562J1-16LQ |
| D557 | 9L2 3980 64 | Diode IN4001-U01 | | R050 | 241 2396 025 | Carbon 100ohm | RDL-101J1-16LQ |
| | | | | R051 | 241 2403 934 | Carbon 100kohm | RDL-104J1-16LQ |
| D701 | 276 0401 905 | Diode 1SS133 | | R052 | 241 2403 934 | Carbon 100kohm | RDL-104J1-16LQ |
| D702 | 276 0401 905 | Diode 1SS133 | | R065 | 241 2400 911 | Carbon 4.7kohm | RDL-472J1-16LQ |
| D703 | 276 0401 905 | Diode 1SS133 | | | | | |
| ZD201 | 9L2 3390 31Q | Zener diode HZS6C1L | | R101 | | Chip 390ohm | RNC391J1-16 |
| ZD701 | 9L2 3390 73Q | Zener diode HZS9A3L | | R102 | | Chip 390ohm | RNC391J1-16 |
| LD701 | 9L2 3984 05 | LED SLR54VC3F | | R103 | | Chip 68kohm | RNC683J1-16 |
| LD702 | 9L2 3984 05 | LED SLR54VC3F | | R104 | | Chip 68kohm | RNC683J1-16 |
| RESISTORS GROUP | | | | R105 | | Chip 150kohm | RNC154J1-16 |
| R005 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ | R106 | | Chip 150kohm | RNC154J1-16 |
| R007 | 241 2400 911 | Carbon 4.7kohm | RDL-472J1-16LQ | R107 | | Chip 47ohm | RNC470J1-16 |
| R008 | 241 2397 943 | Carbon 330ohm | RDL-331J1-16LQ | R108 | | Chip 47ohm | RNC470J1-16 |
| R009 | 241 2397 008 | Carbon 220ohm | RDL-221J1-16LQ | R109 | | Chip 750ohm | RMC73M-F751JR |
| R010 | 241 2399 019 | Carbon 1.8kohm | RDL-182J1-16LQ | R110 | | Chip 750ohm | RMC73M-F751JR |
| R011 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ | R111 | | Chip 560kohm | RNC564J1-16 |
| R014 | 241 2396 025 | Carbon 100ohm | RDL-101J1-16LQ | R112 | | Chip 560kohm | RNC564J1-16 |
| R015 | 241 2400 979 | Carbon 8.2kohm | RDL-822J1-16LQ | R113 | | Chip 47kohm | RNC473J1-16 |
| R016 | 241 2399 996 | Carbon 3.9kohm | RDL-392J1-16LQ | R114 | | Chip 47kohm | RNC473J1-16 |
| R017 | 241 2397 066 | Carbon 390ohm | RDL-391J1-16LQ | R115 | | Chip 22ohm | RNC220J1-16 |
| R018 | 241 2396 960 | Carbon 150ohm | RDL-151J1-16LQ | R116 | | Chip 22ohm | RNC220J1-16 |
| R019 | 241 2396 025 | Carbon 100ohm | RDL-101J1-16LQ | R117 | | Chip 100ohm | RNC101J1-16 |
| R020 | 241 2401 936 | Carbon 15kohm | RDL-153J1-16LQ | R118 | | Chip 100ohm | RNC101J1-16 |
| R021 | 241 2396 944 | Carbon 120ohm | RDL-121J1-16LQ | R119 | | Chip 470kohm | RNC474J1-16 |
| R022 | 241 2402 935 | Carbon 39kohm | RDL-393J1-16LQ | R120 | | Chip 470kohm | RNC474J1-16 |
| R024 | 241 2400 953 | Carbon 6.8kohm | RDL-682J1-16LQ | R121 | | Chip 1Mohm | RNC105J1-16 |
| R025 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ | R122 | | Chip 1Mohm | RNC105J1-16 |
| R026 | 241 2400 995 | Carbon 10kohm | RDL-103J1-16LQ | R123 | | Chip 1Mohm | RNC105J1-16 |
| R027 | 241 2399 970 | Carbon 3.3kohm | RDL-332J1-16LQ | R124 | | Chip 1Mohm | RNC105J1-16 |
| R028 | 241 2400 089 | Carbon 9.1kohm | RDL-912J1-16LQ | R125 | | Chip 1Mohm | RNC105J1-16 |
| R029 | 241 2402 090 | Carbon 68kohm | RDL-683J1-16LQ | R126 | | Chip 1Mohm | RNC105J1-16 |
| R030 | 241 2402 980 | Carbon 62kohm | RDL-623J1-16LQ | R127 | | Chip 1Mohm | RNC105J1-16 |
| R031 | 241 2402 980 | Carbon 62kohm | RDL-623J1-16LQ | R128 | | Chip 1Mohm | RNC105J1-16 |
| R032 | 241 2403 934 | Carbon 100kohm | RDL-104J1-16LQ | R133 | | Chip 470ohm | RNC471J1-16 |
| R033 | 241 2403 950 | Carbon 120kohm | RDL-124J1-16LQ | R134 | | Chip 470ohm | RNC471J1-16 |
| R034 | 241 2403 950 | Carbon 120kohm | RDL-124J1-16LQ | R135 | | Chip 470ohm | RNC471J1-16 |
| | | | | R136 | | Chip 470ohm | RNC471J1-16 |
| | | | | R137 | | Chip 470ohm | RNC471J1-16 |
| | | | | R138 | | Chip 470ohm | RNC471J1-16 |
| | | | | R139 | | Chip 470ohm | RNC471J1-16 |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|----------|--------------|---------------|-----------------|----------|--------------|----------------|-----------------|
| R140 | | Chip 470ohm | RNC471J1-16 | R239 | | Chip 100ohm | RNC101J1-16 |
| R141 | | Chip 470ohm | RNC471J1-16 | R240 | | Chip 100ohm | RNC101J1-16 |
| R142 | | Chip 470ohm | RNC471J1-16 | R241 | | Chip 47kohm | RNC473J1-16 |
| R143 | | Chip 470ohm | RNC471J1-16 | R242 | | Chip 47kohm | RNC473J1-16 |
| R144 | | Chip 470ohm | RNC471J1-16 | R243 | | Chip 100kohm | RNC104J1-16 |
| R145 | | Chip 680kohm | RNC684J1-16 | R251 | | Chip 2.2kohm | RNC222J1-16 |
| R151 | | Chip 12kohm | RNC123J1-16 | R252 | | Chip 2.2kohm | RNC222J1-16 |
| R152 | | Chip 12kohm | RNC123J1-16 | R253 | | Chip 4.7kohm | RNC472J1-16 |
| R153 | | Chip 56kohm | RNC563J1-16 | R254 | | Chip 4.7kohm | RNC472J1-16 |
| R154 | | Chip 56kohm | RNC563J1-16 | R265 | | Chip 220kohm | RNC224J1-16 |
| R155 | | Chip 100kohm | RNC104J1-16 | R266 | | Chip 1kohm | RNC102J1-16 |
| R156 | | Chip 100kohm | RNC104J1-16 | R267 | | Chip 3.3kohm | RNC332J1-16 |
| R157 | | Chip 100ohm | RNC101J1-16 | R268 | | Chip 100ohm | RNC101J1-16 |
| R158 | | Chip 100ohm | RNC101J1-16 | R269 | | Chip 100kohm | RNC104J1-16 |
| R159 | | Chip 100ohm | RNC101J1-16 | R270 | | Chip 100kohm | RNC104J1-16 |
| R160 | | Chip 100ohm | RNC101J1-16 | R271 | | Chip 220kohm | RNC224J1-16 |
| R201 | | Chip 7.5kohm | RMC73M-1F752JR | R272 | | Chip 1kohm | RNC102J1-16 |
| R202 | | Chip 47kohm | RNC473J1-16 | R273 | | Chip 3.3kohm | RNC332J1-16 |
| R203 | | Chip 15kohm | RNC153J1-16 | R274 | | Chip 100ohm | RNC101J1-16 |
| R204 | | Chip 7.5kohm | RMC73M-1F752JR | R280 | | Chip 100ohm | RNC101J1-16 |
| R205 | | Chip 47kohm | RNC473J1-16 | R281 | | Chip 470kohm | RNC474J1-16 |
| R206 | | Chip 15kohm | RNC153J1-16 | R282 | | Chip 1kohm | RNC102J1-16 |
| R207 | | Chip 7.5kohm | RMC73M-1F752JR | R283 | | Chip 5.6kohm | RNC562J1-16 |
| R208 | | Chip 56kohm | RNC563J1-16 | R284 | | Chip 33kohm | RNC333J1-16 |
| R209 | | Chip 56kohm | RNC563J1-16 | R285 | | Chip 470kohm | RNC474J1-16 |
| R210 | | Chip 100kohm | RNC104J1-16 | R286 | | Chip 100ohm | RNC101J1-16 |
| R211 | | Chip 100kohm | RNC104J1-16 | R287 | | Chip 1kohm | RNC102J1-16 |
| R212 | | Chip 15kohm | RNC153J1-16 | R288 | | Chip 5.6kohm | RNC562J1-16 |
| R213 | | Chip 8.2kohm | RNC822J1-16 | R290 | | Chip 33kohm | RNC333J1-16 |
| R214 | | Chip 15kohm | RNC153J1-16 | R296 | | Chip 10kohm | RNC103J1-16 |
| R215 | | Chip 330kohm | RNC334J1-16 | R297 | | Chip 10kohm | RNC103J1-16 |
| R218 | | Chip 47kohm | RNC473J1-16 | R298 | 241 2321 032 | Carbon 4.7ohm | RD14S2E4R7J(NB) |
| R219 | | Chip 47kohm | RNC473J1-16 | R301 | 241 2396 025 | Carbon 100ohm | RDL-101J1-16 |
| R220 | | Chip 47kohm | RNC473J1-16 | R302 | 241 2396 025 | Carbon 100ohm | RDL-101J1-16 |
| R221 | | Chip 8.2kohm | RNC822J1-16 | R590 | 241 2400 911 | Carbon 4.7kohm | RDL-472J1-16LQ |
| R222 | | Chip 8.2kohm | RNC822J1-16 | R591 | 241 2400 911 | Carbon 10kohm | RDL-103J1-16LQ |
| R223 | | Chip 8.2kohm | RNC822J1-16 | R592 | 241 2375 978 | Carbon 20ohm | RD14S2E200J(NR) |
| R224 | | Chip 1Mohm | RNC105J1-16 | R701 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ |
| R225 | | Chip 15kohm | RNC153J1-16 | R702 | 241 2396 979 | Carbon 200ohm | RDL-201J1-16LQ |
| R226 | | Chip 18kohm | RNC183J1-16 | R703 | 241 2397 037 | Carbon 300ohm | RDL-301J1-16LQ |
| R227 | | Chip 15kohm | RNC153J1-16 | R704 | 241 2397 082 | Carbon 510ohm | RDL-511J1-16LQ |
| R228 | | Chip 20ohm | RMC73M-1F200JR | R707 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ |
| R229 | | Chip 20ohm | RMC73M-1F200JR | R708 | 241 2396 999 | Carbon 200ohm | RDL-201J1-16LQ |
| R230 | | Chip 7.5kohm | RMC73M-1F752JR | R709 | 241 2397 037 | Carbon 300ohm | RDL-301J1-16LQ |
| R231 | | Chip 5.6kohm | RNC562J1-16 | R710 | 241 2397 082 | Carbon 510ohm | RDL-511J1-16LQ |
| R232 | | Chip 18kohm | RNC183J1-16 | R711 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ |
| R233 | | Chip 47kohm | RNC473J1-16 | R712 | 241 2399 064 | Carbon 3kohm | RDL-302J1-16LQ |
| R234 | | Chip 47kohm | RNC473J1-16 | R713 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ |
| R235 | | Chip 47kohm | RNC473J1-16 | R719 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ |
| R236 | 241 2321 045 | Carbon 220ohm | RD14S2E221J(NB) | | | | |
| R237 | | Chip 1kohm | RNC102J1-16 | | | | |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|-------------------------|--------------|---------------------------|-------------------|----------|--------------|-------------------------|-------------------|
| R720 | 241 2396 999 | Carbon 200ohm | RDL-201J1-16LQ | C039 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R721 | 241 2397 037 | Carbon 300ohm | RDL-301J1-16LQ | C040 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| R722 | 241 2397 082 | Carbon 510ohm | RDL-511J1-16LQ | C041 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) |
| R723 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ | C042 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| R724 | 241 2399 064 | Carbon 3kohm | RDL-302J1-16LQ | C043 | 254 4196 012 | Electrolytic 0.22μF/50V | CE04W1HR22(SRA) |
| R725 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ | C044 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| R726 | 241 2396 979 | Carbon 200ohm | RDL-201J1-16LQ | C045 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R727 | 241 2397 037 | Carbon 300ohm | RDL-301J1-16LQ | C046 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) |
| R728 | 241 2397 082 | Carbon 510ohm | RDL-511J1-16LQ | C047 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) |
| R729 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ | C048 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| R730 | 241 2399 064 | Carbon 3kohm | RDL-302J1-16LQ | C049 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R731 | 241 2400 911 | Carbon 4.7kohm | RDL-472J1-16LQ | C051 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) |
| R732 | 241 2398 052 | Carbon 1kohm | RDL-102J1-16LQ | C052 | 254 4260 087 | Electrolytic 10μF/50V | CE04W1H100MB(SSL) |
| R733 | 241 2399 051 | Carbon 2.7kohm | RDL-272J1-16LQ | C053 | | Ceramic 680pF/50V | CCT681K50D3 |
| R734 | 241 2400 092 | Carbon 10kohm | RDL-103J1-16LQ | C054 | | Ceramic 680pF/50V | CCT681K50D3 |
| R735 | 241 2400 092 | Carbon 10kohm | RDL-103J1-16LQ | C056 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R736 | 241 2400 092 | Carbon 10kohm | RDL-103J1-16LQ | C057 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R737 | 241 2400 092 | Carbon 10kohm | RDL-103J1-16LQ | C059 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R738 | | Carbon 2kohm | RDL-202J1-16LQ | C060 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R742 | 241 2397 943 | Carbon 330ohm | RDL-331J1-16LQ | C065 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| R743 | 241 2397 943 | Carbon 330ohm | RDL-331J1-16LQ | | | | |
| R744 | 241 2397 943 | Carbon 330ohm | RDL-331J1-16LQ | C101 | | Ceramic 220pF/50V | CC73MSL1H221J |
| R745 | 241 2400 092 | Carbon 10kohm | RDL-103J1-16LQ | C102 | | Ceramic 220pF/50V | CC73MSL1H221J |
| VR261 | 9LA Y001 71 | Variable resistor 100kohm | Master volume | C103 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| CAPACITORS GROUP | | | | C104 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C004 | | Ceramic 12pF/50V | CCT120J50D3 | C105 | | Ceramic 100pF/50V | CC73MSL1H101J |
| C007 | | Ceramic 0.01μF/16V | CCT103M16D3 | C106 | | Ceramic 100pF/50V | CC73MSL1H101J |
| C008 | | Ceramic 0.01μF/16V | CCT103M16D3 | C107 | 254 4254 022 | Electrolytic 33μF/16V | CE04W1E330MB(SSL) |
| C011 | 254 3056 917 | Electrolytic 1μF/50V | CE04W1H1R0MB(BP) | C108 | 254 4254 022 | Electrolytic 33μF/16V | CE04W1E330MB(SSL) |
| C013 | 254 4196 009 | Electrolytic 0.1μF/50V | CE04W1H0R1M(SRA) | C109 | 255 1251 982 | Mylar film 5600pF/50V | CQ92M1H562JB |
| C014 | | Ceramic 0.022μF/50V | CCT223Z50D3 | C110 | 255 1251 982 | Mylar film 5600pF/50V | CQ92M1H562JB |
| C016 | | Ceramic 100pF/50V | CCT101Z50D3 | C111 | | Ceramic 1500pF/50V | CK73M1H1 1 52K |
| C017 | | Ceramic 0.01μF/16V | CCT103M16D3 | C112 | | Ceramic 1500pF/50V | CK73M1H1 1 52K |
| C018 | | Ceramic 0.01μF/16V | CCT103M16D3 | C113 | | Ceramic 0.01μF/50V | CK73M1H1 1 03Z |
| C019 | 254 4260 032 | Electrolytic 0.47μF/50V | CE04W1HR47MB(SSL) | C114 | | Ceramic 0.01μF/50V | CK73M1H1 1 03Z |
| C020 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C115 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) |
| C021 | 254 4260 087 | Electrolytic 10μF/50V | CE04W1H100MB(SSL) | C116 | 254 4260 058 | Electrolytic 2.2μF/50V | CE04W1H2R2MB(SSL) |
| C022 | | Ceramic 0.022μF/50V | CCT223Z50D3 | C129 | | Ceramic 0.1μF/25V | CK73M1H1 1 04Z |
| C023 | | Ceramic 100pF/50V | CCT101J50D3 | C130 | | Ceramic 0.1μF/25V | CK73M1H1 1 04Z |
| C024 | 255 1135 095 | Mylar film 0.056μF/50V | CQ92M1H563JB | C131 | | Ceramic 0.1μF/25V | CK73M1H1 1 04Z |
| C025 | 254 4260 993 | Electrolytic 22μF/50V | CE04W1H220MB(SSL) | C133 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| C027 | 254 4260 993 | Electrolytic 22μF/50V | CE04W1H220MB(SSL) | C136 | | Ceramic 0.022μF/50V | CK73M1H2 23Z |
| C028 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C137 | | Ceramic 0.022μF/50V | CK73M1H2 23Z |
| C029 | | Ceramic 0.01μF/16V | CCT103M16D3 | C138 | | Ceramic 0.022μF/50V | CK73M1H2 23Z |
| C031 | | Ceramic 0.01μF/16V | CCT103M16D3 | C139 | | Ceramic 2200pF/50V | CK73M1H2 22M |
| C033 | 253 3125 007 | Ceramic 15pF/50V | CCT150J50D3 | C151 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C034 | 253 3125 007 | Ceramic 15pF/50V | CCT150J50D3 | C152 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C035 | 255 1134 041 | Mylar film 0.047μF/50V | CQ92M1H473JB | C153 | | Ceramic 100pF/50V | CC73MSL1H101J |
| C036 | | Ceramic 0.01μF/16V | CCT103M16D3 | C154 | | Ceramic 100pF/50V | CC73MSL1H101J |
| C037 | | Ceramic 0.01μF/16V | CCT103M16D3 | C155 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| | | | | C156 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|----------|--------------|-------------------------|-------------------|----------|--------------|-------------------------|-------------------|
| C201 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C253 | | Ceramic 5600pF/50V | CK73MB1H562K |
| C202 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C254 | | Ceramic 5600pF/50V | CK73MB1H562K |
| C203 | | Ceramic 680pF/50V | CC73MSL1H681J | C255 | | Ceramic 0.1μF/25V | CK73MF1E104Z |
| C204 | 255 4212 054 | Mylar film 0.047μF/50V | CQ92M1H473KB | C256 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C205 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C257 | 254 4252 037 | Electrolytic 100μF/10V | CE04W1A101MB |
| C206 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C258 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) |
| C207 | | Ceramic 680pF/50V | CC73MSL1H681J | C259 | | Ceramic 220pF/50V | CC73MCH1H221J |
| C208 | 255 4212 054 | Mylar film 0.047μF/50V | CQ92M1H473KB | C260 | | Ceramic 220pF/50V | CC73MCH1H221J |
| C209 | 254 4260 993 | Electrolytic 22μF/50V | CE04W1H220MB(SSL) | C261 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| C210 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C262 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| C211 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C265 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C212 | 254 4252 037 | Electrolytic 100μF/10V | CE04W1A101MB | C266 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C213 | 255 1241 940 | Mylar film 4700pF/50V | CQ92M1H472JB | C268 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C214 | 254 4260 993 | Electrolytic 22μF/50V | CE04W1H220MB(SSL) | C269 | | Ceramic 470pF/50V | CC73MSL1H471J |
| C215 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C270 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C216 | 255 4212 009 | Mylar film 0.22μF/50V | CQ92M1H224KB | C271 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C217 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C272 | | Ceramic 470pF/50V | CC73MSL1H471J |
| C218 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) | C273 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C219 | 254 4256 046 | Electrolytic 100μF/25V | CE04W1E101MB | C277 | 245 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C220 | 255 1251 982 | Mylar film 5600pF/50V | CQ92M1H562JB | C279 | 245 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C221 | 254 4250 055 | Electrolytic 470μF/6.3V | CE04W0J471MB | C283 | 245 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C222 | 255 4212 054 | Mylar film 0.047μF/50V | CQ92M1H473JB | C284 | | Ceramic 0.022μF/50V | CK73MF1H223Z |
| C223 | | Ceramic 470pF/50V | CC73MSL1H471J | C285 | 254 4256 004 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C224 | | Ceramic 2200pF/50V | CK73MB1H222K | C286 | | Ceramic 0.022μF/50V | CK73MF1H223Z |
| C225 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C287 | 254 4196 944 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| C226 | 256 1035 075 | Mylar film 0.068μF/50V | CQM-684J500HB | C288 | | Ceramic 0.01μF/50V | CK73MF1H103Z |
| C227 | 255 4212 009 | Mylar film 0.22μF/50V | CQ92M1H224KB | C289 | | Ceramic 0.1μF/25V | CK73MF1E104Z |
| C228 | 255 4212 009 | Mylar film 0.22μF/50V | CQ92M1H224KB | C290 | | Ceramic 0.01μF/50V | CK73MF1H103Z |
| C229 | 255 4212 009 | Mylar film 0.22μF/50V | CQ92M1H224KB | C295 | | Ceramic 220pF/50V | CC73MSL1H221J |
| C230 | 254 4260 074 | Electrolytic 4.7μF/50V | CE04W1H4R7MB(SSL) | C297 | 254 4260 087 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C231 | 254 4260 074 | Electrolytic 4.7μF/50V | CE04W1H4R7MB(SSL) | C298 | 254 4260 087 | Electrolytic 10μF/50V | CE04W1H100MB(SSL) |
| C232 | 255 4212 009 | Mylar film 0.22μF/50V | CQ92M1H224KB | | | | |
| C233 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C554 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) |
| C234 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C555 | 254 4256 088 | Electrolytic 1000μF/25V | CE04W1E102MF |
| C235 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C556 | 253 1181 904 | Ceramic 0.01μF/50V | CK451H103ZB |
| C236 | 255 4224 945 | Mylar film 0.1μF/50V | CQ92M1H104KB | C557 | 253 1181 904 | Ceramic 0.01μF/50V | CK451H103ZB |
| C237 | 255 4223 962 | Mylar film 0.022μF/50V | CQ92M1H223JB | C559 | 253 8001 100 | Ceramic 250pF | CC-472M251F-D |
| C238 | 255 4223 962 | Mylar film 0.022μF/50V | CQ92M1H223JB | | | | |
| C239 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C703 | 254 4260 074 | Electrolytic 4.7μF/50V | CE04W1H4R7MB(SSL) |
| C240 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C705 | 254 4250 929 | Electrolytic 100μF/6.3V | CE04W0J101MB |
| C241 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | C706 | | Ceramic 0.01μF/16V | CCT103M16D3 |
| C242 | | Ceramic 0.1μF/25V | CK73MF1E104Z | C707 | 254 4256 046 | Electrolytic 10μF/25V | CE04W1E100MB(SSL) |
| C243 | 254 4260 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C244 | 025 4426 045 | Electrolytic 1μF/50V | CE04W1H1R0MB(SSL) | | | | |
| C245 | | Ceramic 470pF/50V | CC73MSL1H471J | | | | |
| C246 | | Ceramic 3300pF/50V | CK73MB1H332K | | | | |
| C247 | | Ceramic 0.1μF/25V | CK73MF1E104Z | | | | |
| C248 | | Ceramic 0.1μF/25V | CK73MF1E104Z | | | | |
| C249 | | Ceramic 0.1μF/25V | CK73MF1E104Z | | | | |
| C250 | 254 4256 033 | Electrolytic 47μF/25V | CE04W1E470MB(SSL) | | | | |
| C251 | | Ceramic 0.1μF/25V | CK73MF1E104Z | | | | |
| C252 | | Ceramic 470pF/50V | CC73MSL1H471J | | | | |

| Ref. No. | Part No. | Part Name | Remarks | Ref. No. | Part No. | Part Name | Remarks |
|--------------------------|--------------|------------------------------|-------------------------|----------|--------------|-----------------------------|-------------------------|
| OTHER PARTS GROUP | | | | SW719 | 9L2 6396 82R | Tact switch | |
| CF001 | 261 0135 907 | Ceramic filter SFE10.7MA-8 | | SW720 | 9L2 6396 82R | Tact switch | |
| CF002 | 261 0136 906 | Ceramic filter SFE10.7MS2G-A | | SW721 | 9L2 6396 82R | Tact switch | |
| CF003 | 9LB P005 01 | Ceramic filter BFU450C4 | | SW722 | 9L2 6396 82R | Tact switch | |
| CF004 | 9LB P004 91 | Ceramic filter CMU2-456A16 | | SW723 | 9L2 6396 82R | Tact switch | |
| CN001A | | 2P MX Pin post | AVR-750/770 Models only | SW724 | 9L2 6396 82R | Tact switch | |
| CN001B | | 2P MX B-C Connector L=350 | AVR-750/770 Models only | SW725 | 9L2 6396 82R | Tact switch | |
| CN002A | | 2P TXL B-C Connector L=100 | | SW726 | 9L2 6396 82R | Tact switch | |
| CN002B | | 2PTXL Pin post | | SW727 | 9L2 6396 82R | Tact switch | |
| CN005B | | 4P MX B-C Connector L=350 | | SW728 | 9L2 6396 82R | Tact switch | |
| CN006B | | 6P Socket | | SW729 | 9L2 6396 82R | Tact switch | |
| CN008B | | 7P Socket | | SW730 | 9L2 6396 82R | Tact switch | |
| CN007B | | 8P Socket | | SW731 | 9LF E002 03 | Push switch | |
| CN009B | | 10P PH B-C Connector L=270 | | JK101 | 9LE R002 23 | 6P US PIN Jack | |
| CN010B | | 10P Socket | | JK102 | 9LE R002 22 | 8P US PIN Jack | |
| CN015B | | 10P Socket | | L201 | 9L2 1222 54F | Choke coil 120μH | |
| CN016B | | 10P Socket | | ▲ RL551 | 9LF J000 51 | Power relay | |
| CN013B | | 13P Socket | | PG001 | — | 2P VH Pin post | |
| CN015A | | 10P Socket | | T003 | 9LB J002 51 | AM IFT | |
| CN003A | | 2P PH B-C Connector L=270 | | T004 | 9L2 1370 33 | FM DET Trans | |
| CN003B | | 2P PH Pin post | | ▲ T501 | 9LB T005 32 | Sub power trans | AVR-760/780 Models only |
| CN025B | 9LE D008 22 | 25P FFC Connector | | ▲ T501 | 9LB T005 33 | Sub power trans | AVR-750/770 Models only |
| E003 | 9L2 7292 52R | Fuse holder | | TU001 | 9LH H000 31 | Tuner pack | |
| E004 | 9L2 7292 52R | Fuse holder | | XT001 | 9L2 1701 32 | Crystal 7.2MHz | |
| E005 | 9L2 7292 52R | Fuse holder | AVR-750/770 Models only | XT201 | 399 0223 907 | Crystal CSA2.00MG | |
| E006 | 9L2 7292 52R | Fuse holder | AVR-750/770 Models only | XT701 | 399 9018 003 | Crystal 4MHz | |
| E500 | 9L2 7292 52R | Fuse holder | | W003 | | 1P Board-in connector (WHT) | |
| E501 | 9L2 7292 52R | Fuse holder | | W004 | | 1P Board-in connector (ORG) | |
| E502 | 9L2 7292 52R | Fuse holder | | W007 | | 1P Board-in connector (GRY) | |
| E503 | 9L2 7292 52R | Fuse holder | | W008 | | 1P Board-in connector (RED) | AVR-750/770 Models only |
| E705 | 9LN J017 11 | FL holder | | W009 | | 1P Board-in connector (ORG) | AVR-750/770 Models only |
| FL701 | 9LD D000 41 | FL Tube | | W010 | | 1P Board-in connector (BLU) | AVR-750/770 Models only |
| SW002 | 9L2 6225 21 | Slide switch | AVR-750/770 Models only | W011 | | 1P Board-in connector (GRY) | AVR-750/770 Models only |
| S552 | 9LF G000 11 | Voltage selector | AVR-750/770 Models only | W012 | | 1P Board-in connector (WHT) | AVR-750/770 Models only |
| S553 | 9LF G000 11 | Voltage selector | AVR-750/770 Models only | W013 | | 1P Board-in connector (GRY) | AVR-750/770 Models only |
| SW702 | 9L2 6396 82R | Tact switch | | W014 | | 1P Board-in connector (BLU) | AVR-750/770 Models only |
| SW703 | 9L2 6396 82R | Tact switch | | W015 | | 1P Board-in connector (WHT) | AVR-750/770 Models only |
| SW704 | 9L2 6396 82R | Tact switch | | AT001 | 9LE U000 11 | ANT Terminal | |
| SW708 | 9L2 6396 82R | Tact switch | | BL001 | 9LB H005 31 | MW ANT OSC Coil | |
| SW709 | 9L2 6396 82R | Tact switch | | | | | |
| SW710 | 9L2 6396 82R | Tact switch | | | | | |
| SW711 | 9L2 6396 82R | Tact switch | | | | | |
| SW712 | 9L2 6396 82R | Tact switch | | | | | |
| SW713 | 9L2 6396 82R | Tact switch | | | | | |


A

B

C


D

E

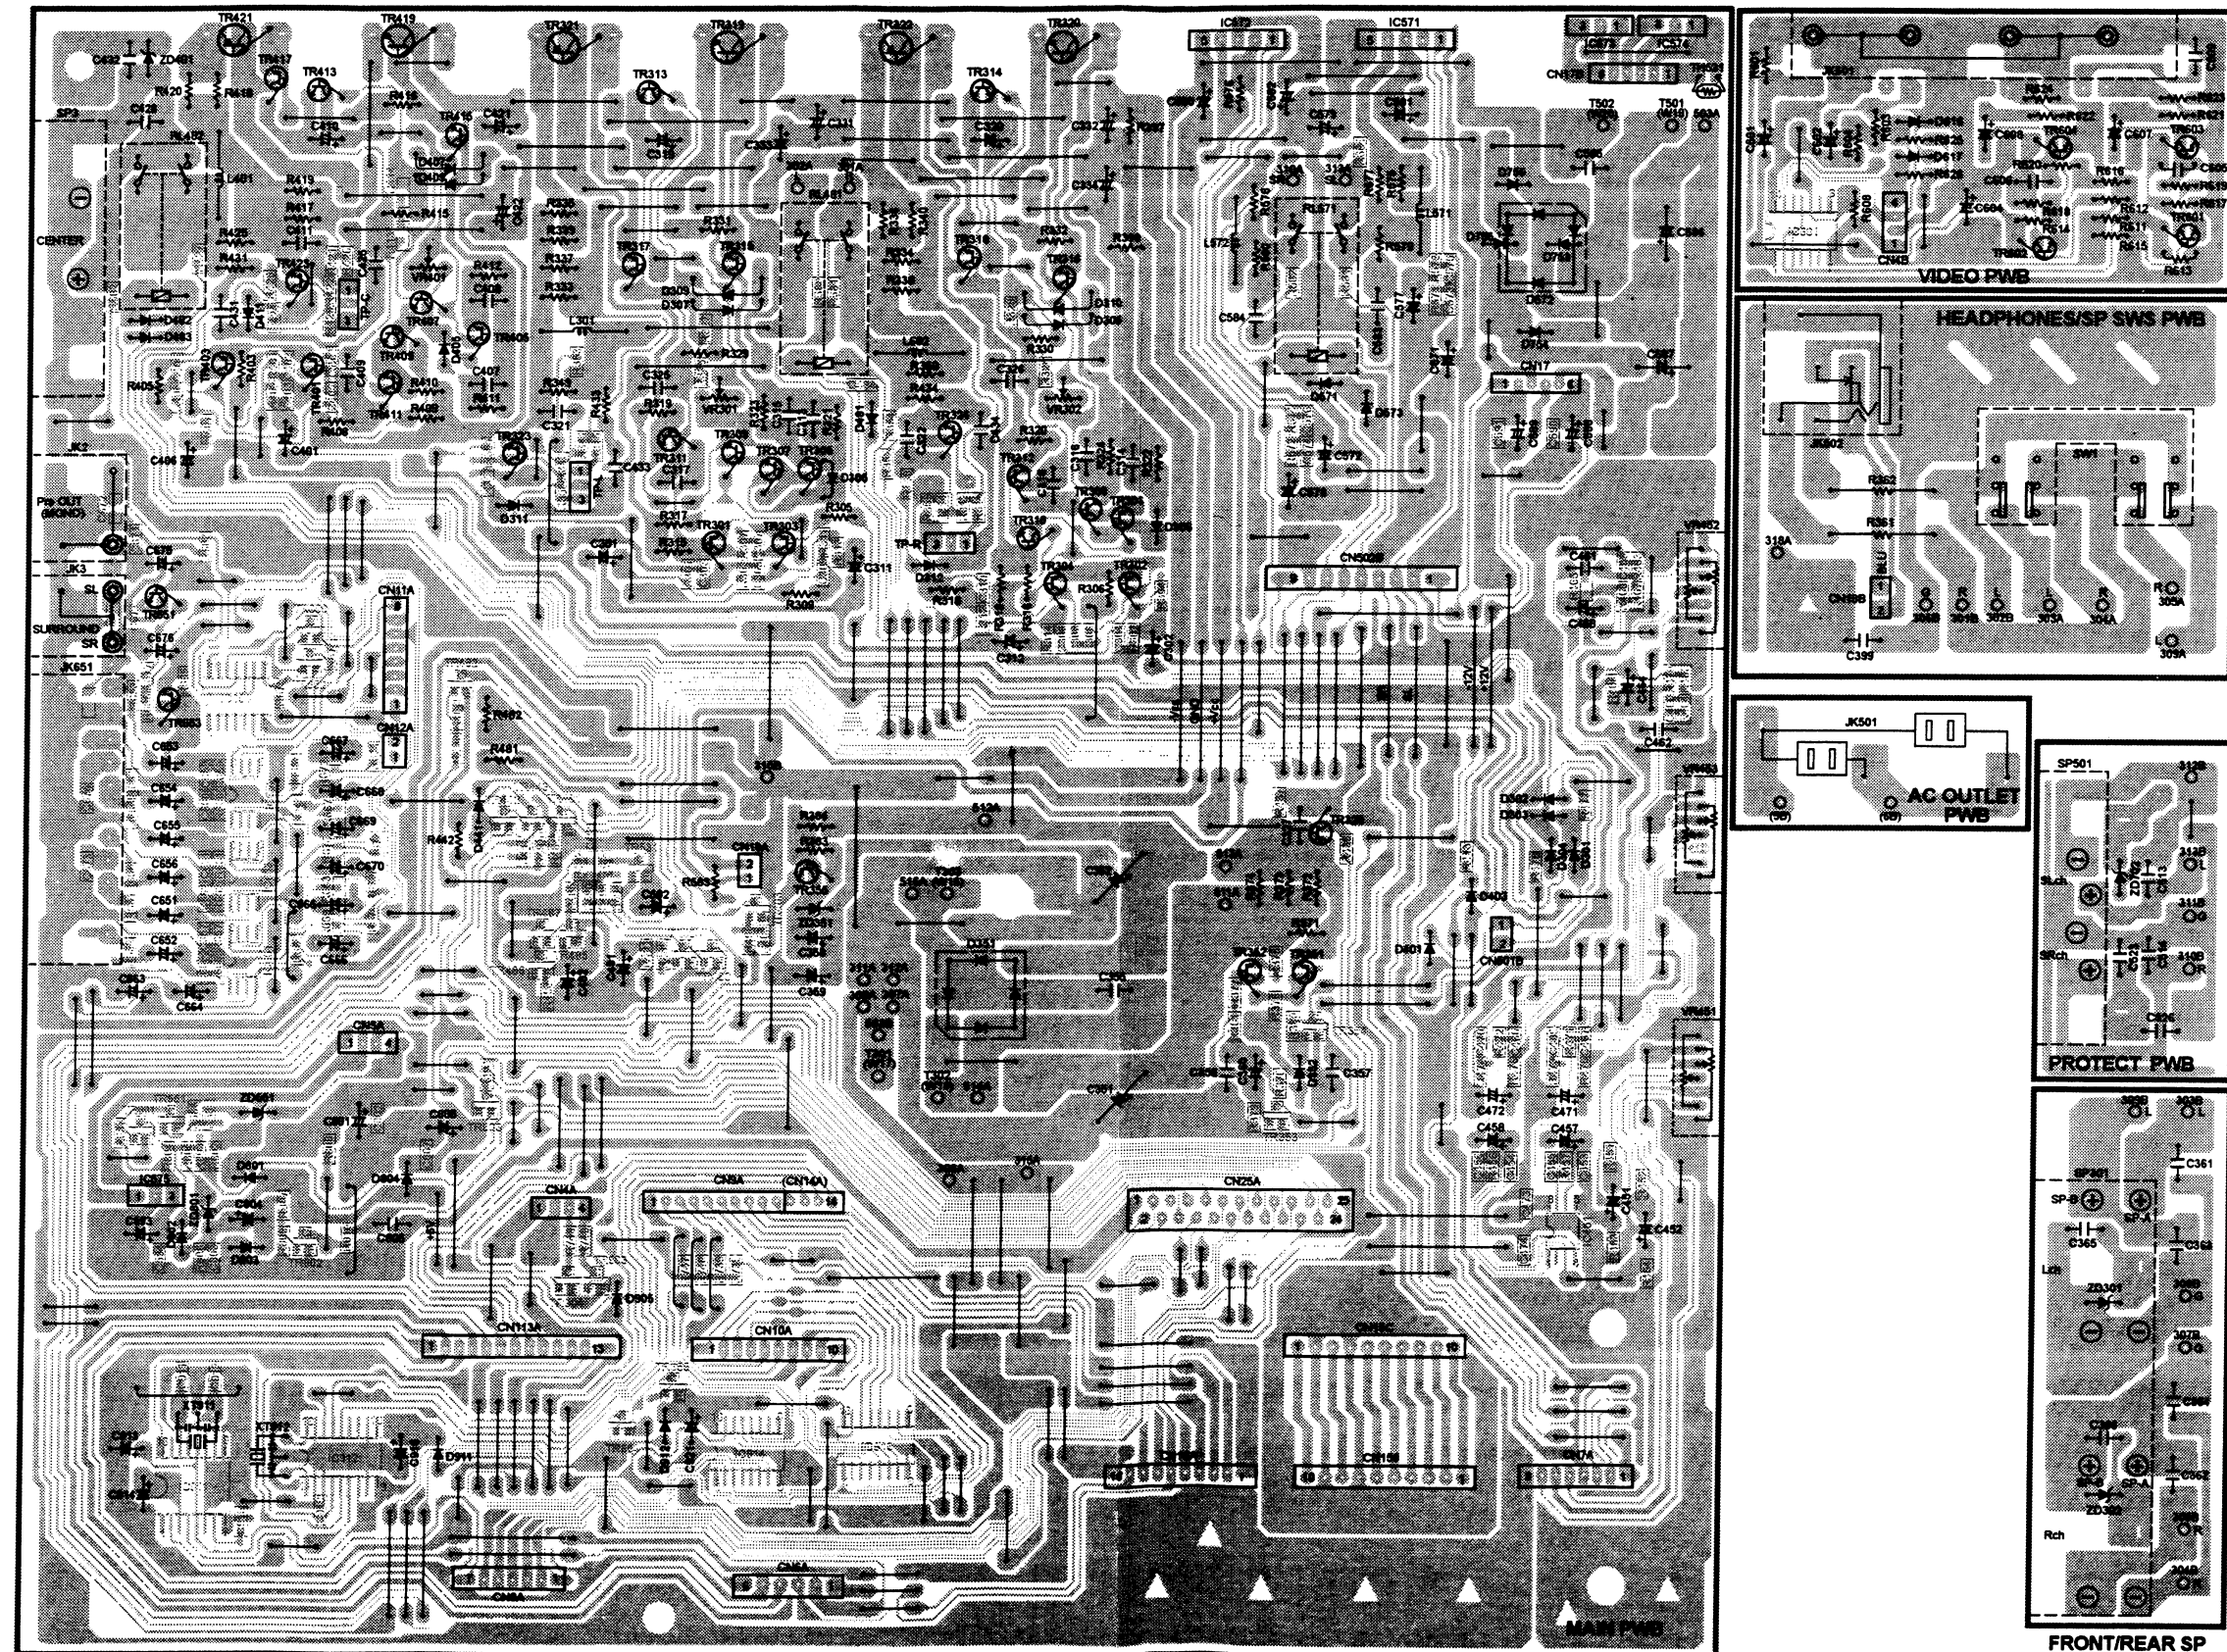

**FRONT/REAR SP
TERMINAL PWB**

FL P.W.B. Ass'y UNIT

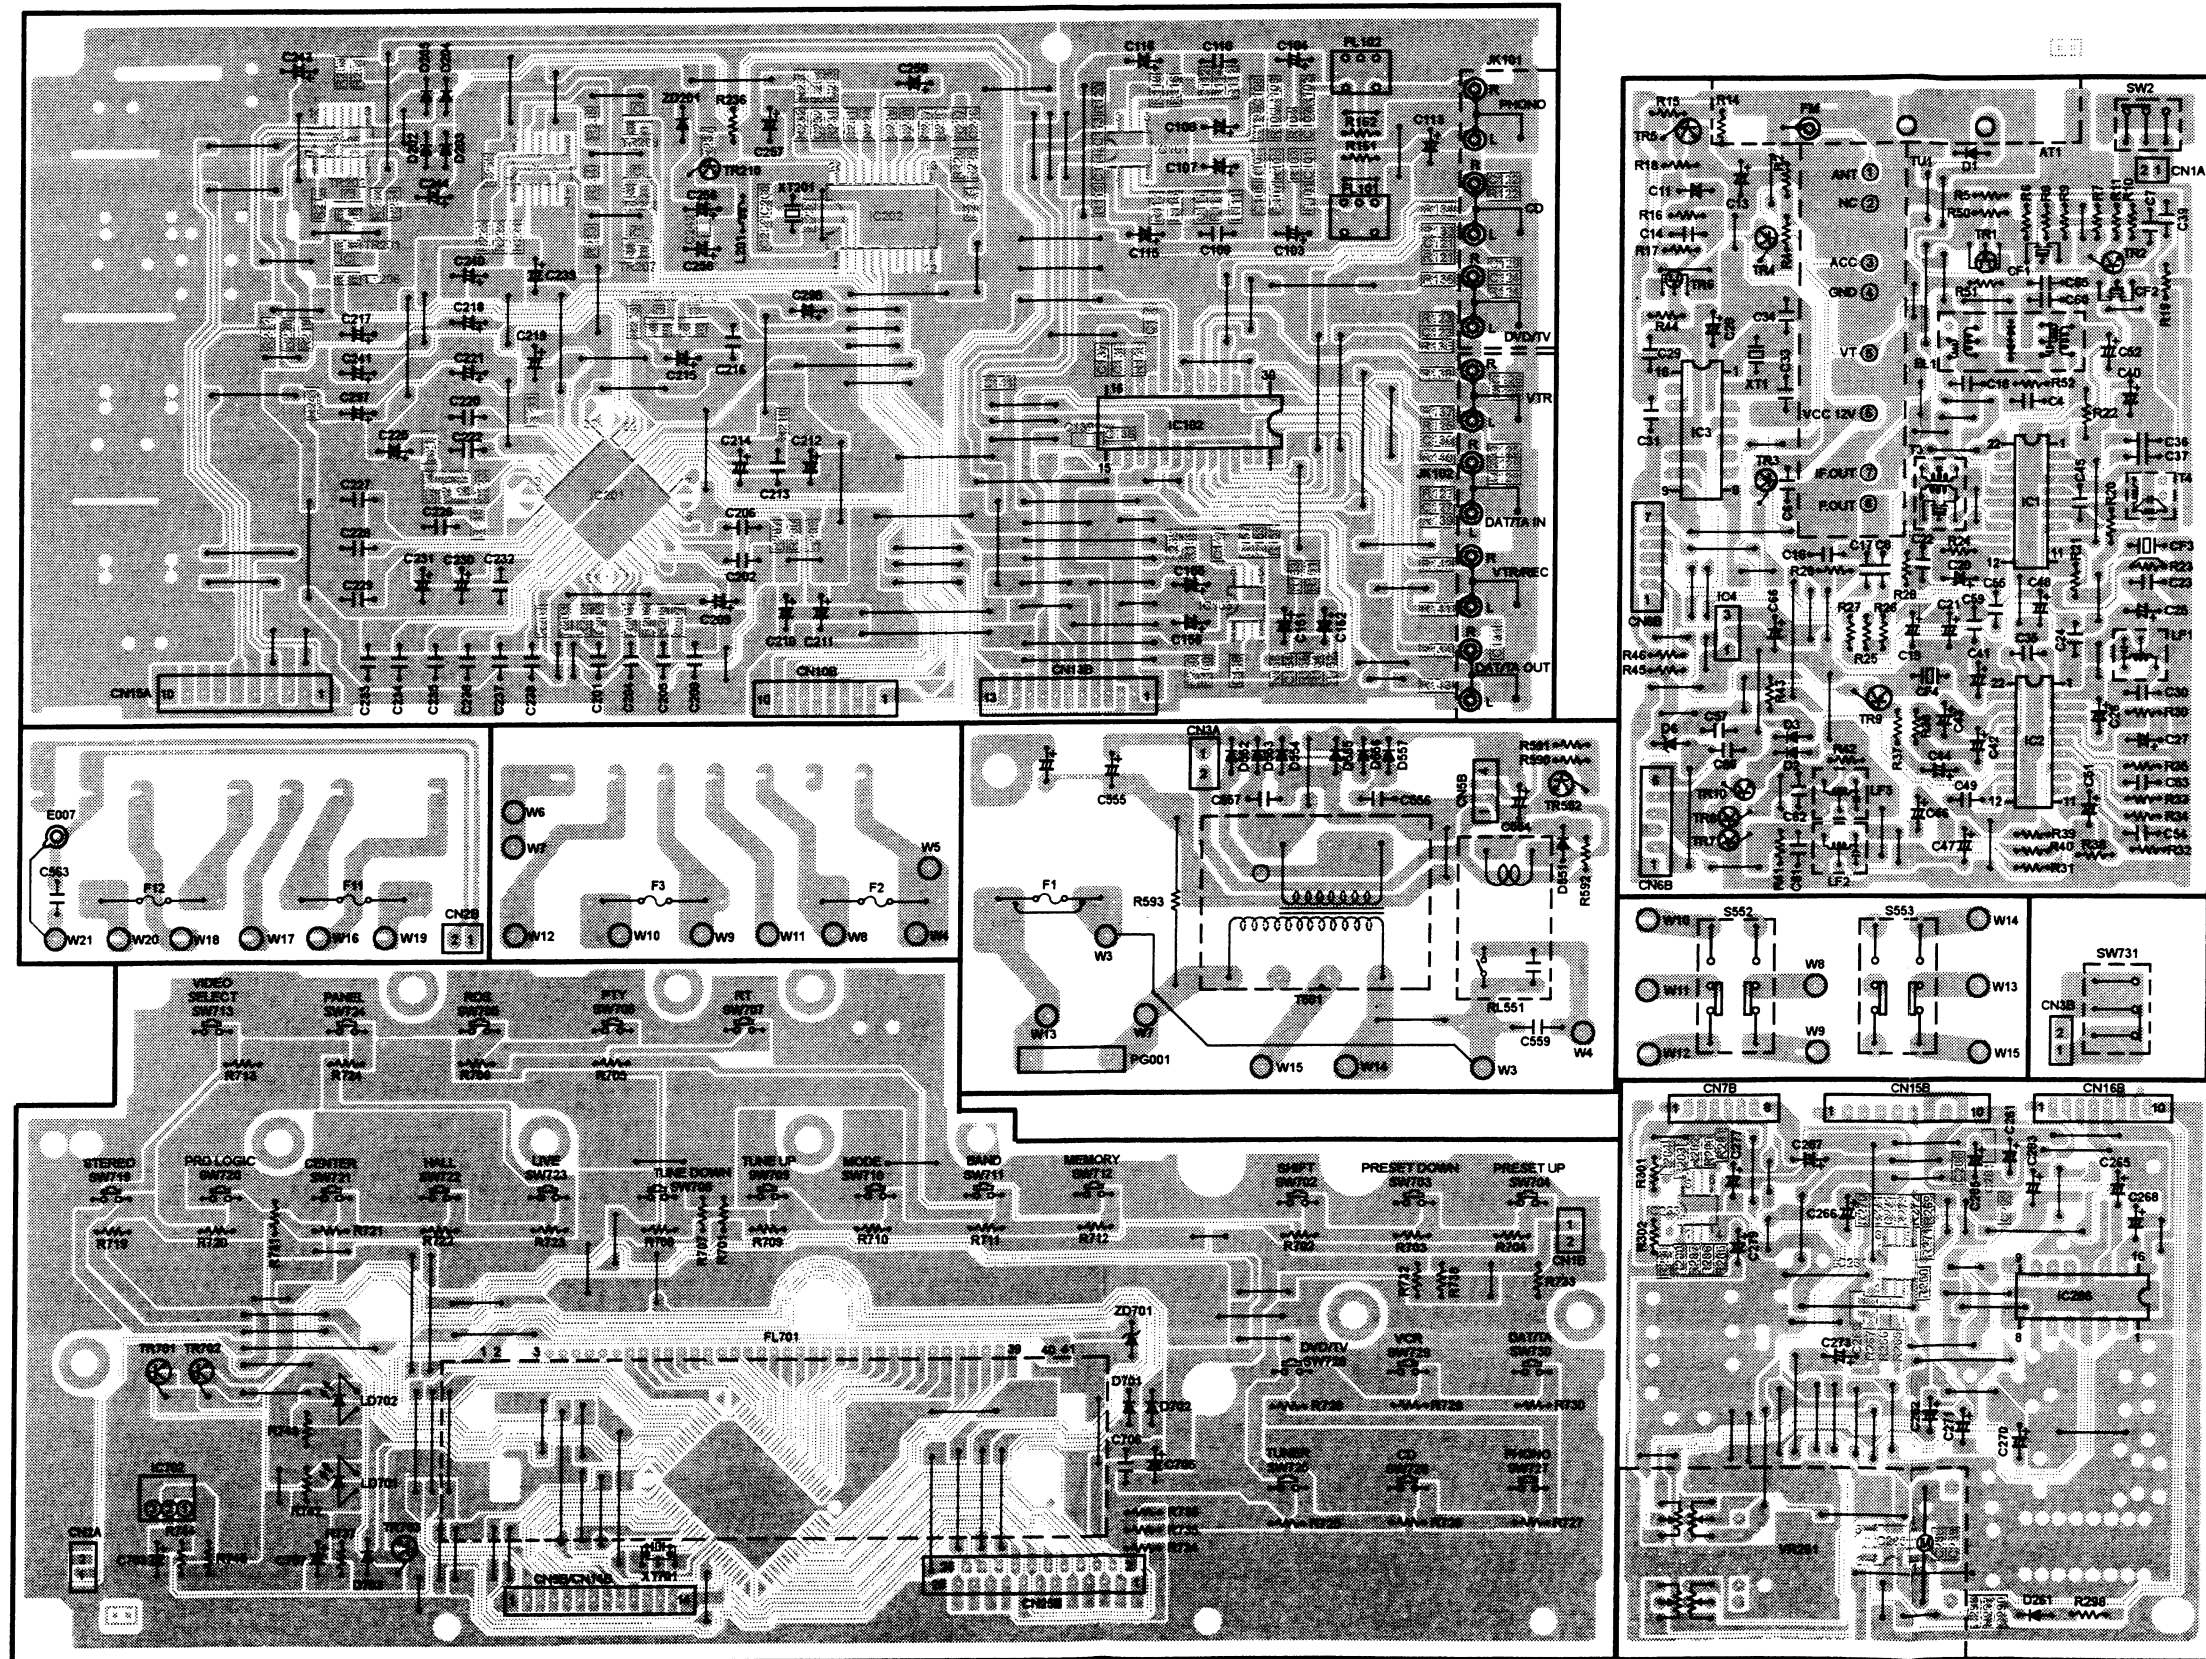

A


B

C

D

E

EXPLODED VIEW

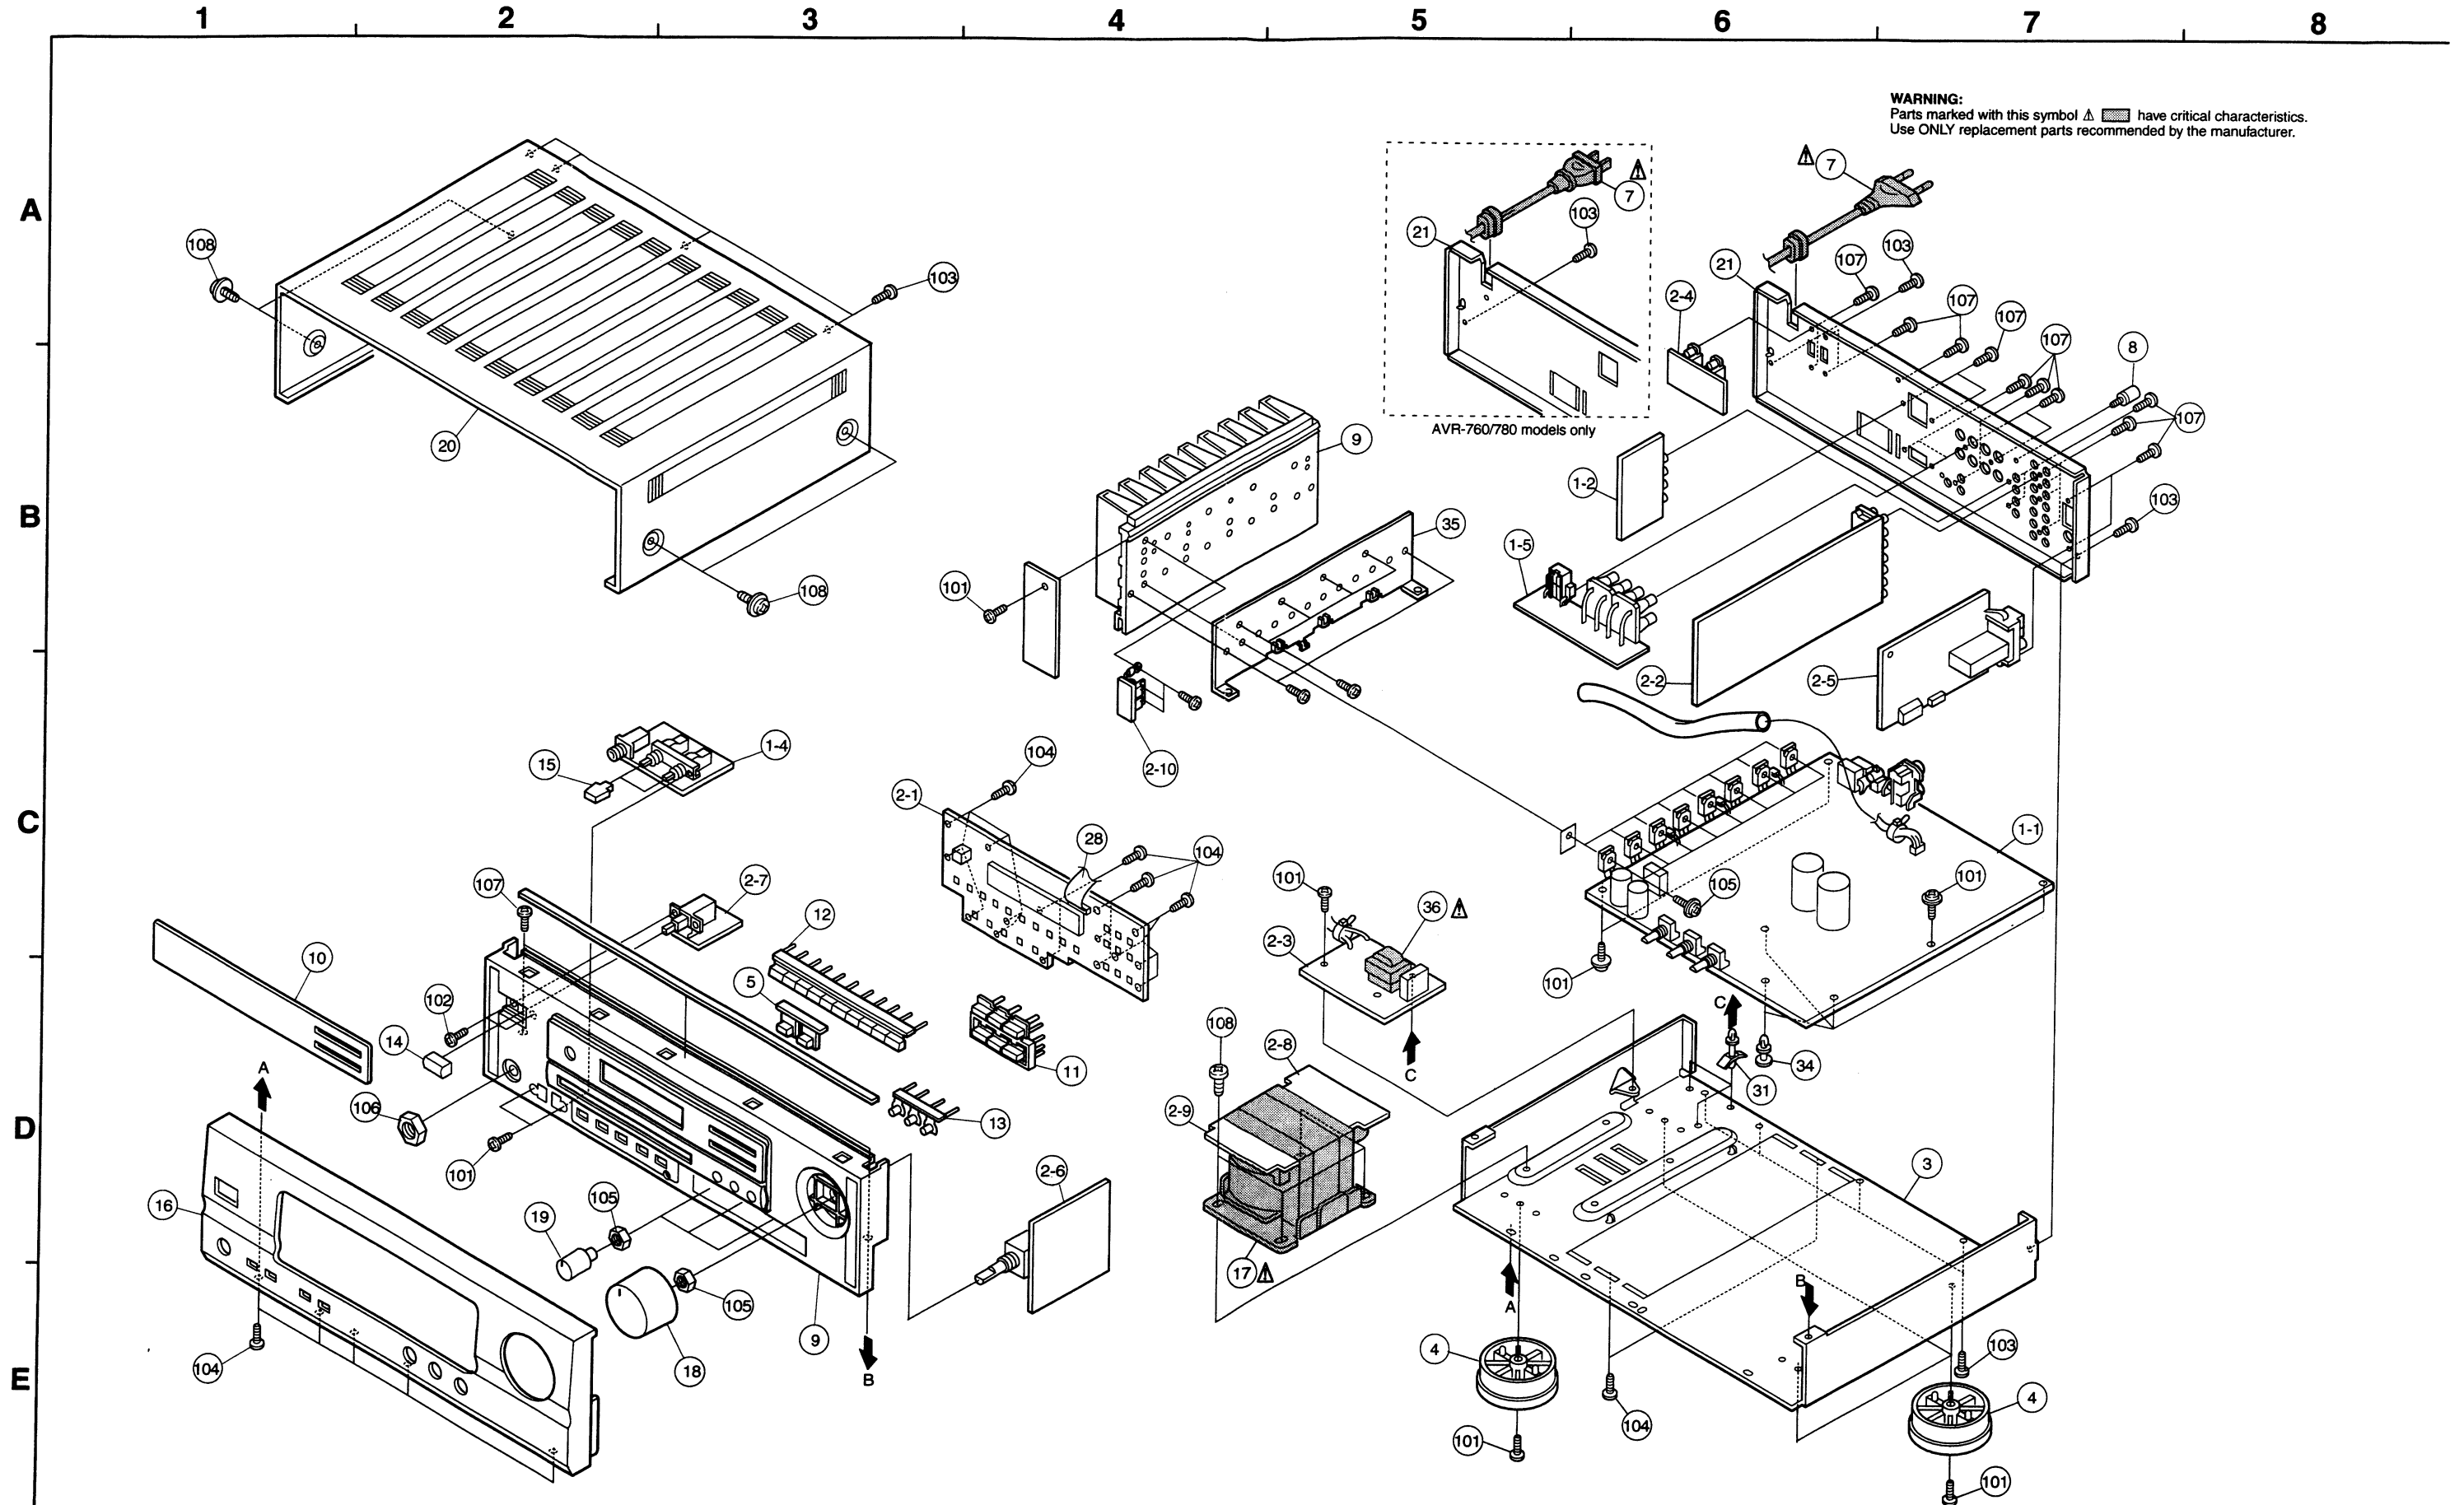

AVR-750/760/770/780

| Ref. No. | Part No. | Part Name | Remarks | Q'ty |
|----------|--------------|-------------------------------|-------------|------|
| 1 | | Main P.W.B. Ass'y | | 1 |
| 1-1 | — | Main P.W.B. unit | | |
| 1-2 | — | Video P.W.B. unit | | |
| 1-3 | — | AC Outlet P.W.B. unit | | |
| 1-4 | — | Headphones/SP sw P.W.B. unit | | |
| 1-5 | — | SP Terminal P.W.B. unit | | |
| 1-6 | — | Protect P.W.B. unit | | |
| 2 | | FL P.W.B. Ass'y | | 1 |
| 2-1 | — | FL P.W.B. unit | | |
| 2-2 | — | Audio P.W.B. unit | | |
| 2-3 | — | Power supply P.W.B. unit | | |
| 2-4 | — | Voltage select sw P.W.B. unit | | |
| 2-5 | — | Tuner P.W.B. unit | | |
| 2-6 | — | Master volume P.W.B. unit | | |
| 2-7 | — | Power switch P.W.B. unit | | |
| 2-8 | — | TF-PR1 P.W.B. unit | | |
| 2-9 | — | TF-SEC P.W.B. unit | | |
| 2-10 | — | STAB1 unit | | |
| 3 | 9LQ A004 81 | Bottom chassis | | 1 |
| 4 | 104 0194 205 | Foot | Black only | 4 |
| | | Foot | Gold only | |
| 5 | 9LP C018 02 | VS button | Gold only | 1 |
| | 9LP C018 01 | | Black only | |
| 7 | Note | AC Cord | AVR-750/770 | 1 |
| | Note | AC Cord | AVR-760/780 | 1 |
| 8 | 9LN X016 21 | Phono earth terminal | | 1 |
| 9 | Note | Inner panel | Gold only | 1 |
| | | Inner panel | Black only | |
| 10 | 9LP H051 71 | Clear panel | | 1 |
| 11 | 9LP C025 01 | Function button | | 1 |
| 12 | 9LP C017 63 | Tunner button | Gold only | 1 |
| | 9LP C017 61 | | Black only | |
| 13 | 9LP C017 72 | Tuning button | Gold only | 1 |
| | 9LP C017 71 | | Black only | |
| 14 | 9LP C017 82 | Power button | Gold only | 1 |
| | 9LP C017 81 | | Black only | |
| 15 | 9LP C017 92 | SP button | Gold only | 2 |
| | 9LP C01 791 | | Black only | |
| 16 | Note | Front panel | | 1 |
| 17 | Note | Power trans | | 1 |
| 18 | 9LP C025 12 | VOL knob | Gold only | 1 |
| | 9LP C025 11 | | Black only | |
| 19 | 9LP C017 42 | BASS knob | Gold only | 3 |
| | 9LP C017 41 | | Black only | |
| 20 | 9LQ A004 94 | Top cover | Gold only | 1 |
| | 9LQ A004 92 | | Black only | |
| 21 | Note | Rear plate | | 1 |
| 22 | 9L2 7277 25 | Fuse T4A | F1 | 1 |
| 23 | 9L2 7277 25 | Fuse T4A | F12 | 1 |
| 24 | Note | Fuse T5A | F2 | 1 |
| 25 | Note | Fuse T2.5A | F2 | 1 |
| 26 | Note | Fuse T2.5A | F3 | 1 |

| Ref. No. | Part No. | Part Name | Remarks | Q'ty |
|----------|-------------|-------------------|-------------------------|------|
| 28 | 9LE K001 18 | 25P FFC Cable | | 1 |
| 29 | — | Heat sink | | 1 |
| 30 | 9LM L002 51 | Mini PWB post | | 5 |
| 31 | 9LM 004 31 | PWB support L | | 3 |
| 32 | 9LP P002 41 | Side wood L | Gold only | 1 |
| 33 | 9LP P002 31 | Side wood R | Gold only | 1 |
| 34 | — | Card spacer (L=8) | | 5 |
| 35 | — | Heat sink bracket | | 1 |
| 36 | Note | Mini trans | | 1 |
| ★ | — | Origin label | AVR-750/770 Models only | 1 |
| ★ | — | Number sheet | | 1 |
| ★ | — | Preset label | AVR-750/770 Models only | 1 |
| ★ | — | Caution label | AVR-760/780 Models only | 1 |
| ★ | — | Rating label | AVR-760/780 Models only | 1 |


| Screws | | | | |
|--------|--------------|-------------------------|-------------------------|----|
| 101 | 9L8 6914 10 | Screw 3 x 10 BT BIND | | 29 |
| 102 | 9L8 6714 06 | Screw 3 x 6 DT BIND | | 4 |
| 103 | 9L8 6794 06 | Screw 3 x 6 DT BIND B | | 5 |
| 104 | 9L8 6796 06 | Screw 4 x 6 DT BIND B | | 8 |
| 105 | 475 6138 002 | NUT M9 x 0.75 | | 4 |
| 106 | 475 6124 003 | NUT M12 x 1 | | 1 |
| 107 | 9L8 6914 14 | Screw 3 x 14 BT BIND | | 1 |
| 108 | 9L8 6794 08 | Screw 3 x 8 DT BIND B | | 4 |
| 109 | 9L8 6994 10 | Screw 3 x 10 BT BIND B | | 27 |
| 110 | 9L8 6993 08 | Screw 2.6 x 8 BT BIND B | AVR-750/770 Models only | 4 |
| 111 | 9L8 6914 14 | Screw 3 x 14 BT BIND B | | 1 |
| 112 | 9L8 6994 08 | Screw 3 x 8 BT BIND B | | 2 |
| 113 | 9LM J009 81 | Screw (Side wood) | Gold only | 4 |

| PACKING & ACCSSORIES | | | | |
|----------------------|--------------|---------------------------|-------------------------|---|
| 201 | 9L3 6402 14W | Poly sack | | 1 |
| 202 | 9L2 7593 41 | AM Loop ant. | | 1 |
| 203 | 9LE F021 33 | FM Ant. | | 1 |
| 204 | 9LE Y002 81 | Plug adapter | AVR-750/770 Models only | 1 |
| 205 | 9LQ R233 34 | Instruction manual | | 1 |
| 206 | 9LH L005 83 | Remote controller (RC840) | | 1 |
| 207 | Note | Carton box | | 1 |
| 208 | 9LS P029 51 | Cushion | | 2 |
| 209 | — | Poly sack | | 1 |


ADDENDUM PARTS LIST

| Ref. No. | Part Name | Part No. | | | |
|--------------------------------|---------------------|-------------|-------------|-------------|-------------|
| | | AVR-750 | AVR-760 | AVR-770 | AVR-780 |
| 1 | Main P.W.B. Ass'y | | | | |
| 2 | FL P.W.B. Ass'y | | | | |
| ★ 6 | Euro converter plug | 9LE P000 62 | — | 9LE P000 62 | — |
| Δ 7 | AC Cord | 9LE V004 44 | 9LE V004 45 | 9LE V004 44 | 9LE V004 45 |
| 9 | Inner panel | 9LP H051 81 | 9LP H051 82 | 9LP H051 83 | 9LP H051 84 |
| 14 | Power trans | 9LB T010 23 | 9LB T010 22 | 9LB T010 23 | 9LB T010 22 |
| 16 | Front panell | 9LP H051 54 | 9LP H051 55 | 9LP H051 56 | 9LP H051 57 |
| 21 | Rear plate | 9LQ A009 93 | 9LQ A009 94 | 9LQ A009 95 | 9LQ A009 96 |
| Δ 25 | Fuse T5A | 9L2 7280 70 | — | 9L2 7280 70 | — |
| Δ 26 | Fuse T2.5A | — | 9L2 7277 22 | — | 9L2 7277 22 |
| Δ 27 | Fuse T2.5A | 9L2 7277 22 | — | 9L2 7277 22 | — |
| Δ 36 | Mini trans | 9LB T005 33 | 9LB T005 32 | 9LB T005 33 | 9LB T005 32 |
| | | | | | |
| PACKING AND ACCSEEORIES | | | | | |
| | | AVR-750 | AVR-760 | AVR-770 | AVR-780 |
| 207 | Carton box | 9L SG07 033 | 9L SG07 034 | 9L SG07 271 | 9L SG07 272 |


BLOCK DIAGRAM

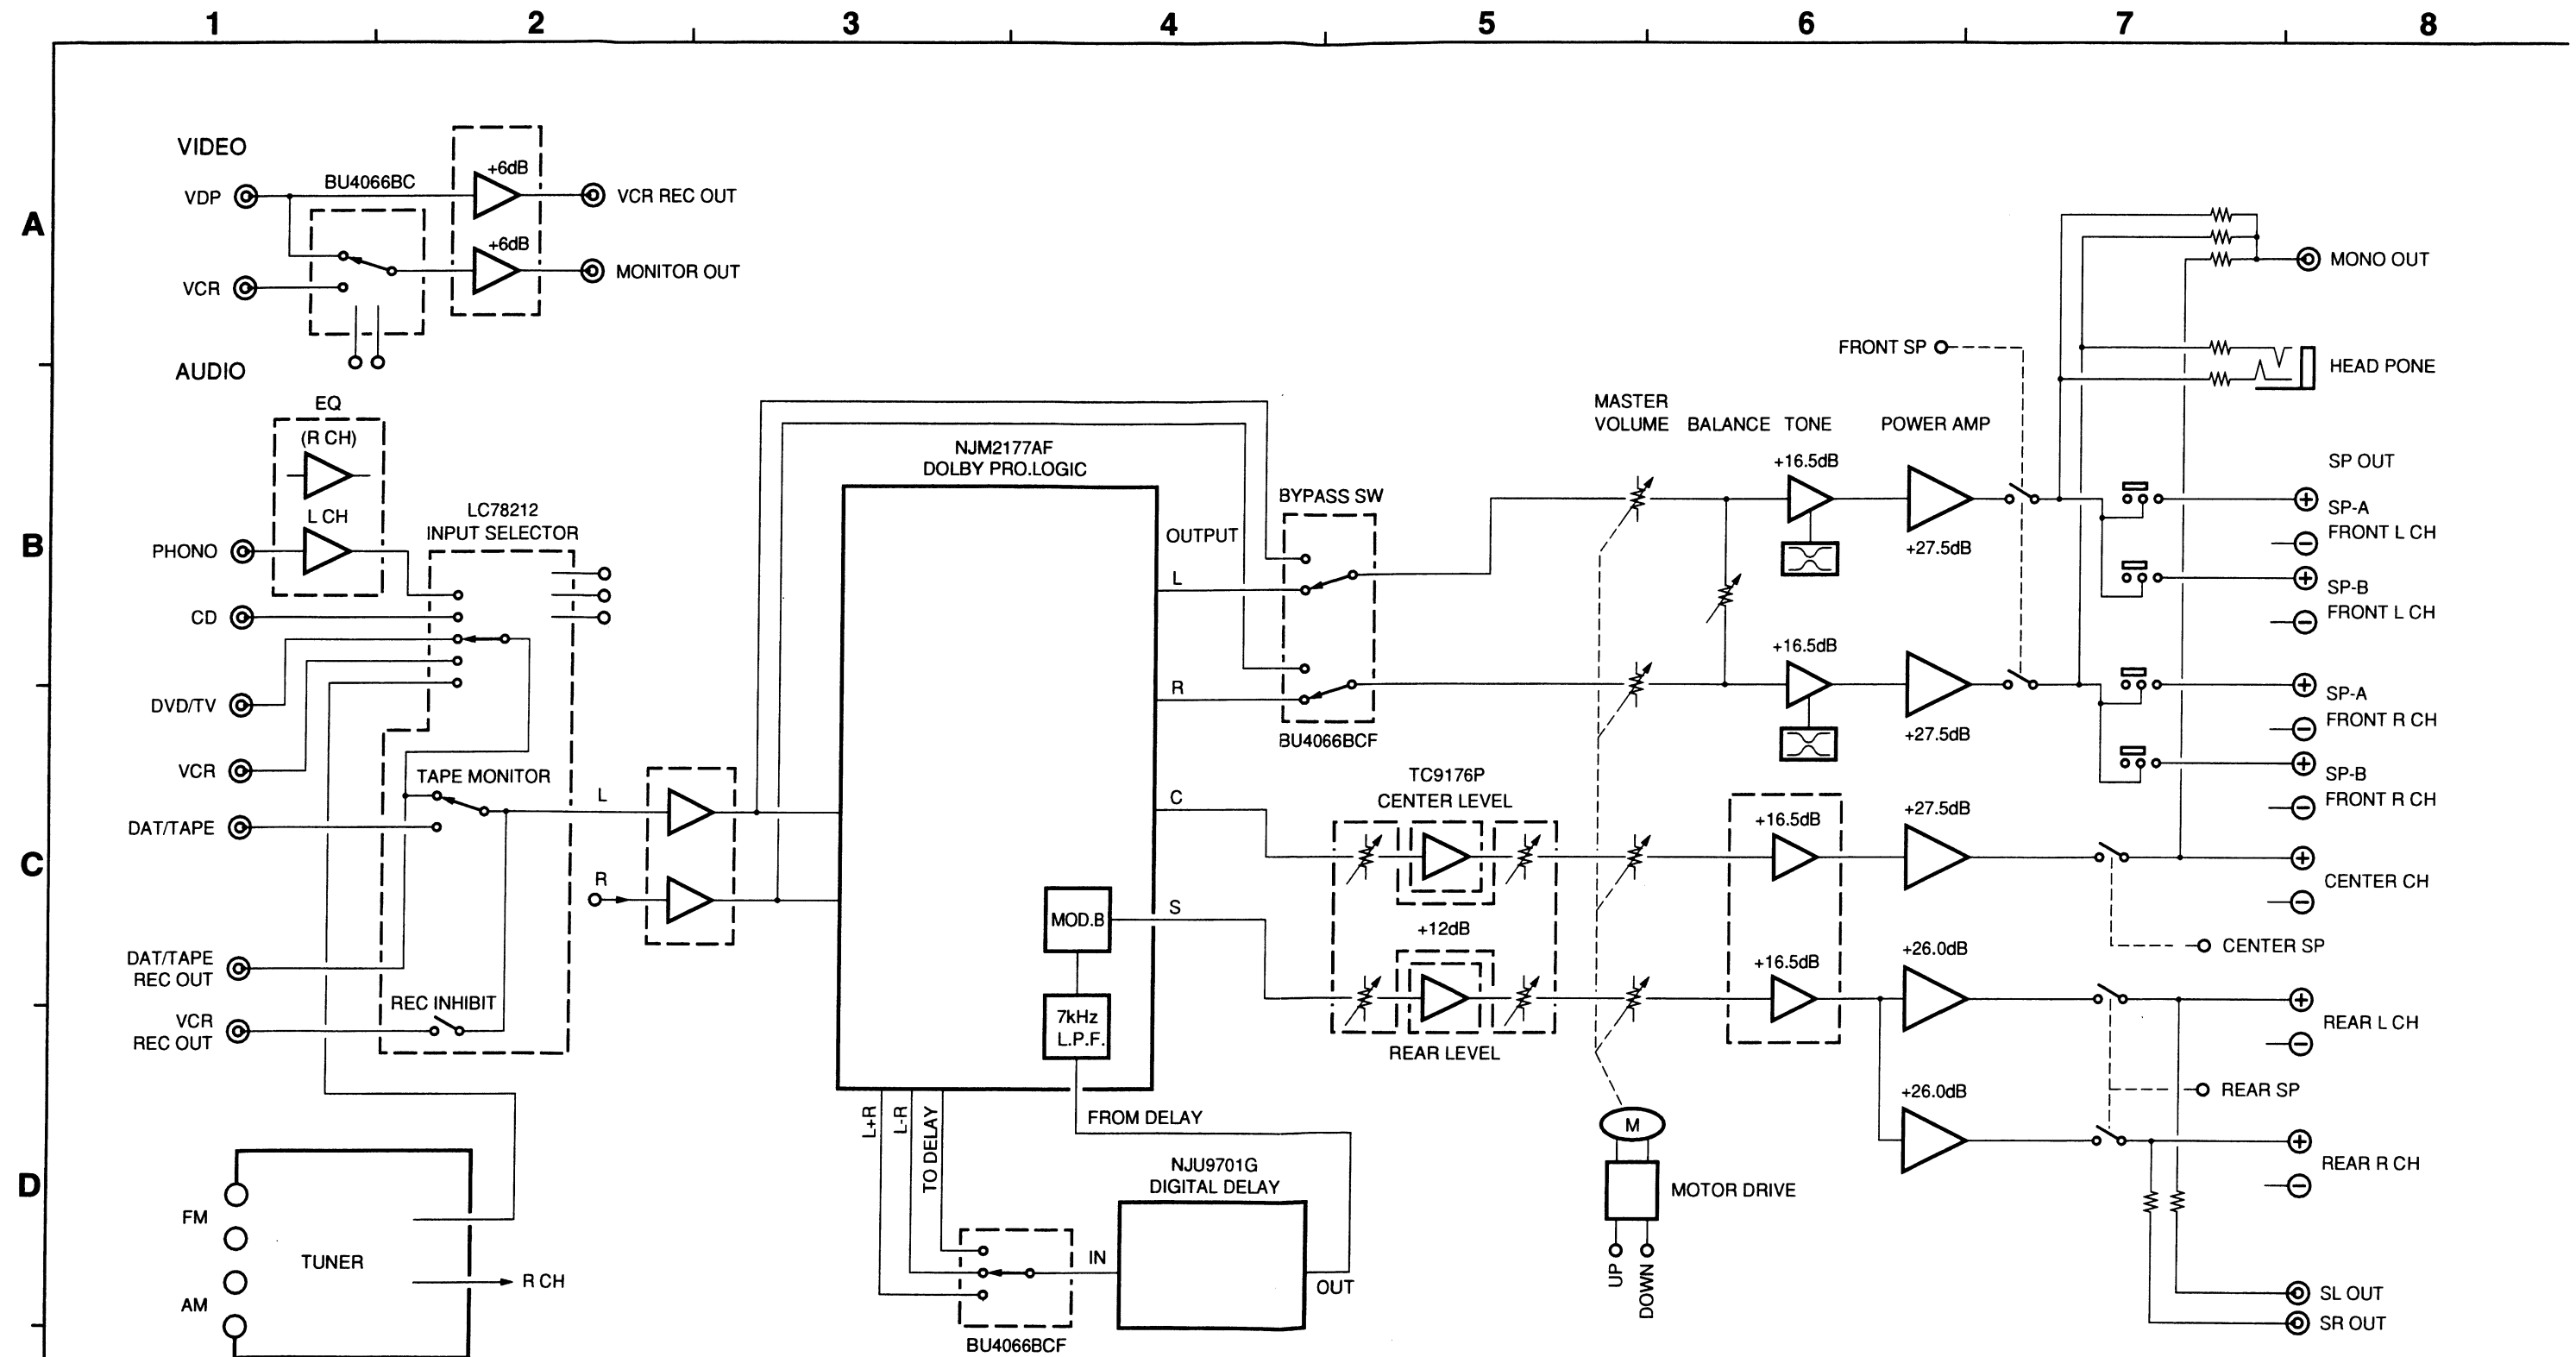

WIRING DIAGRAM

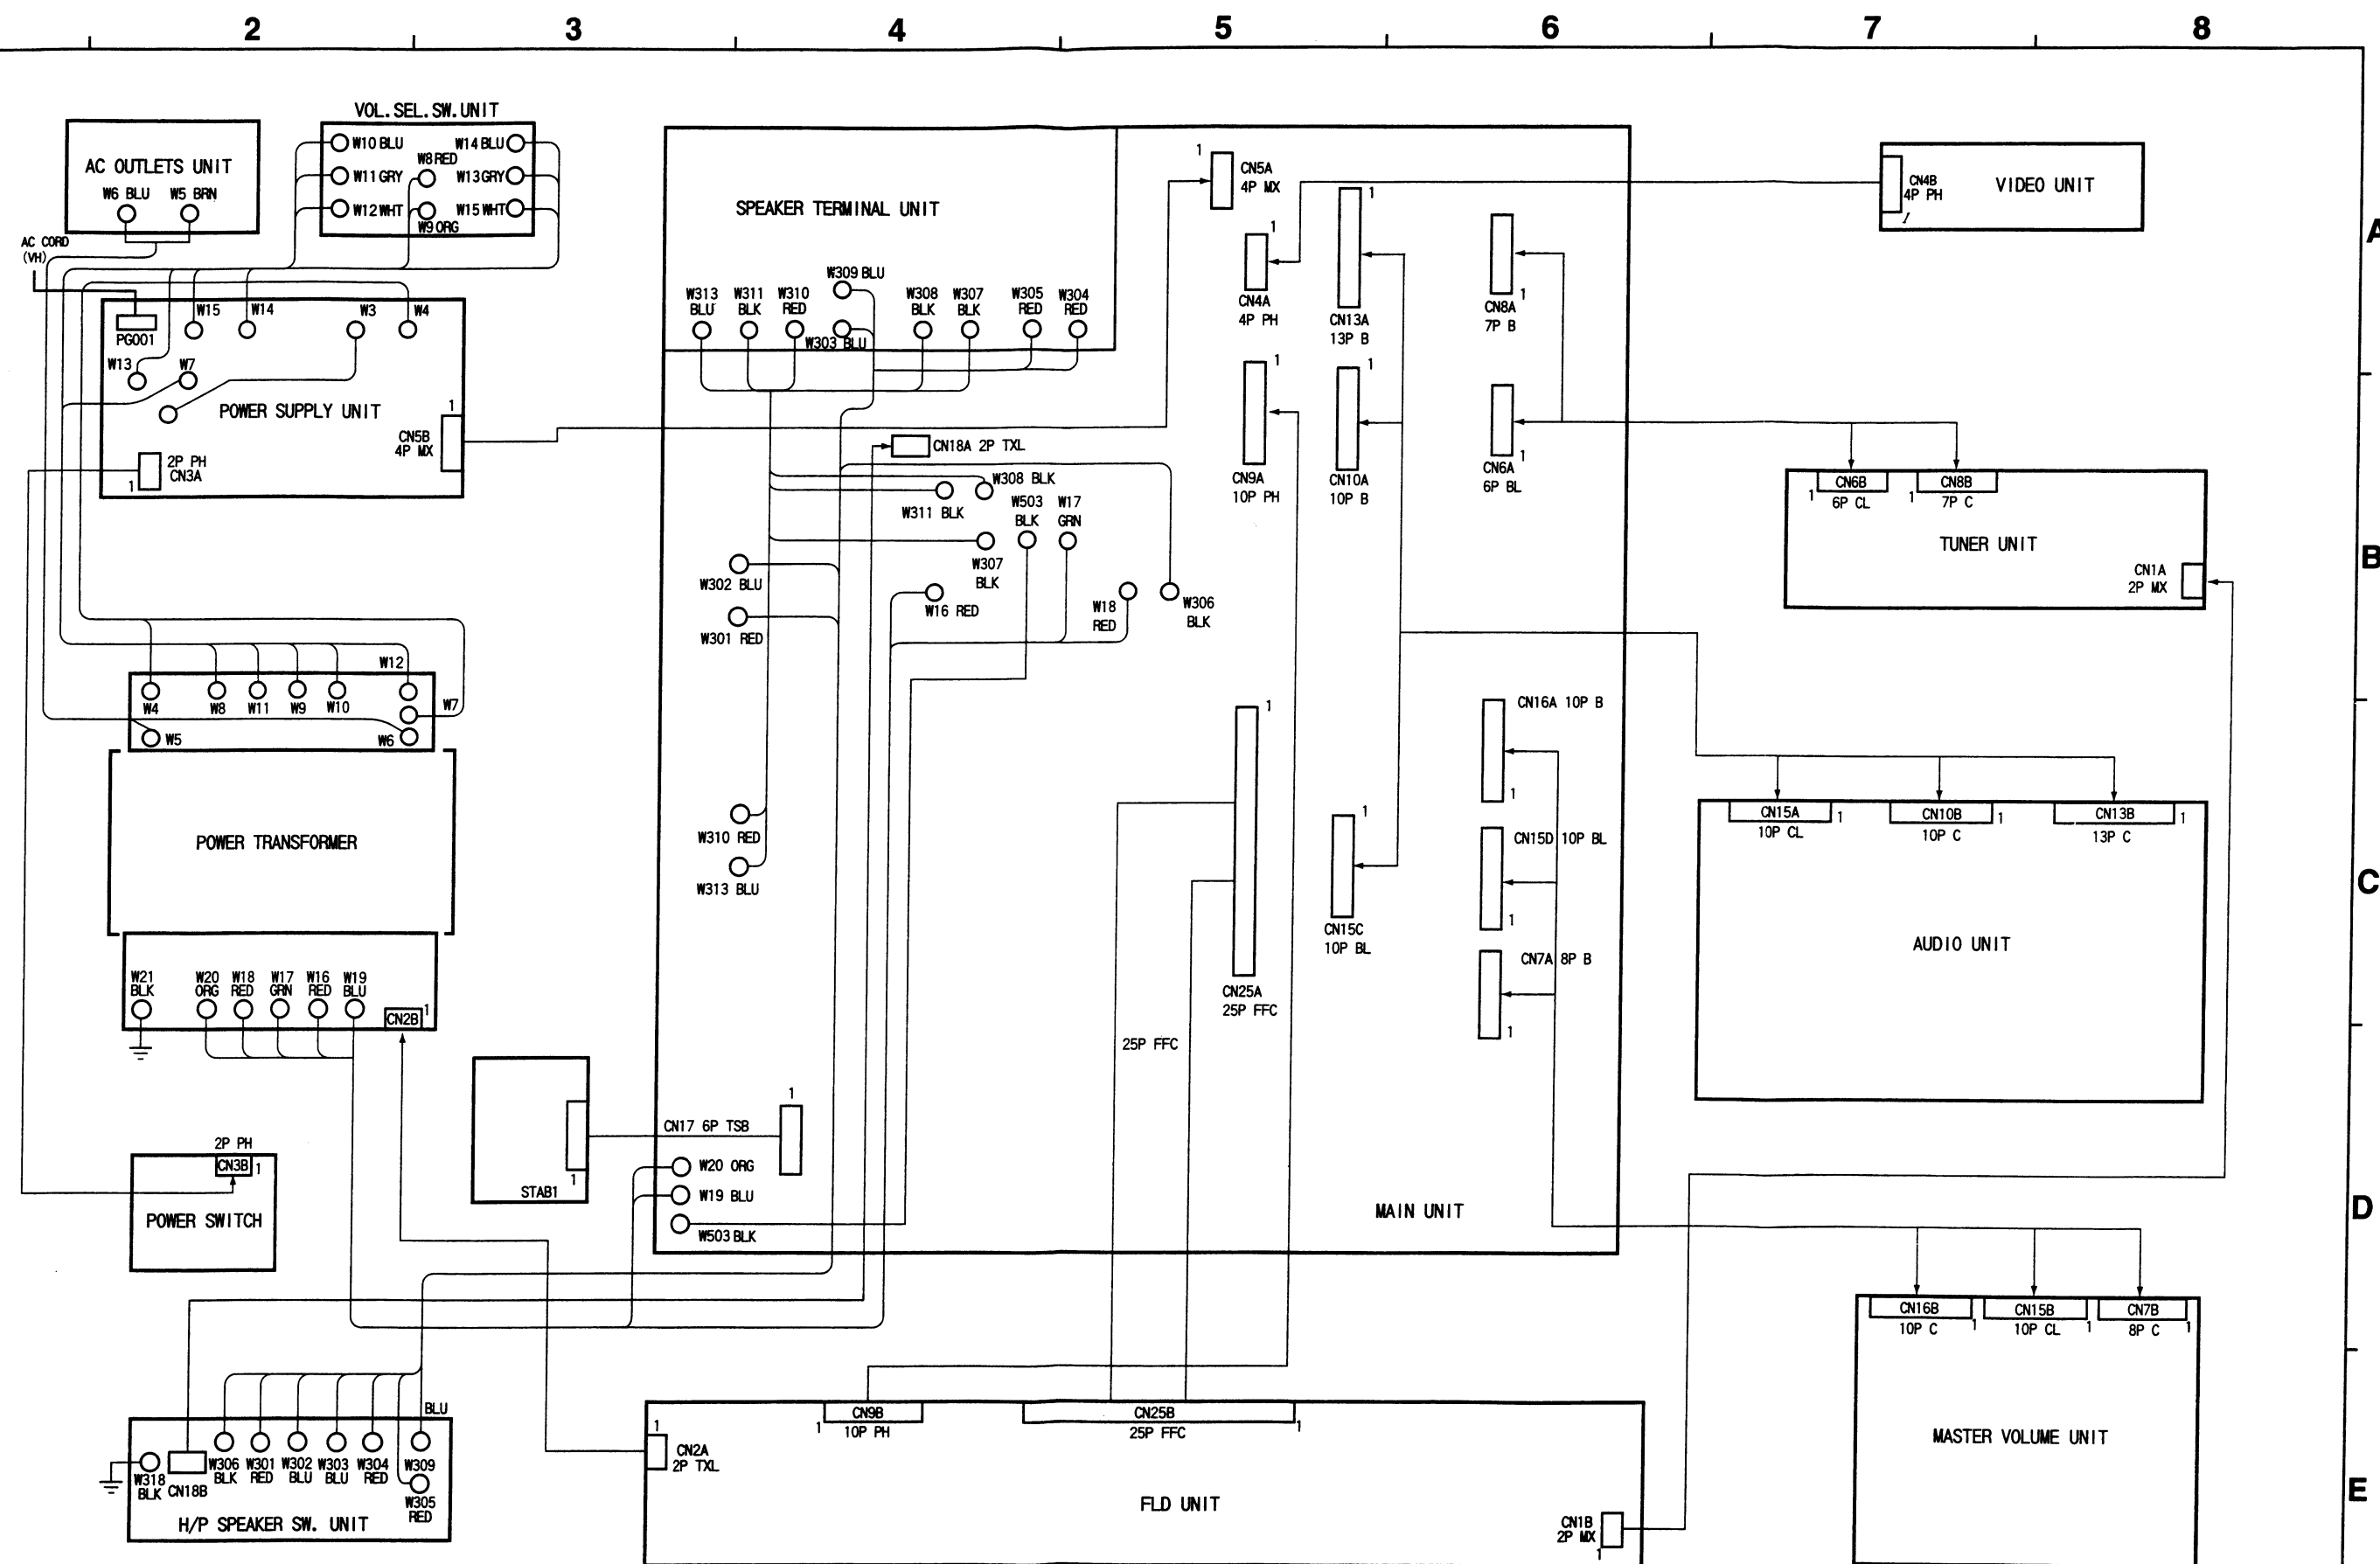

REMOTE CONTROL UNIT (RC-840)

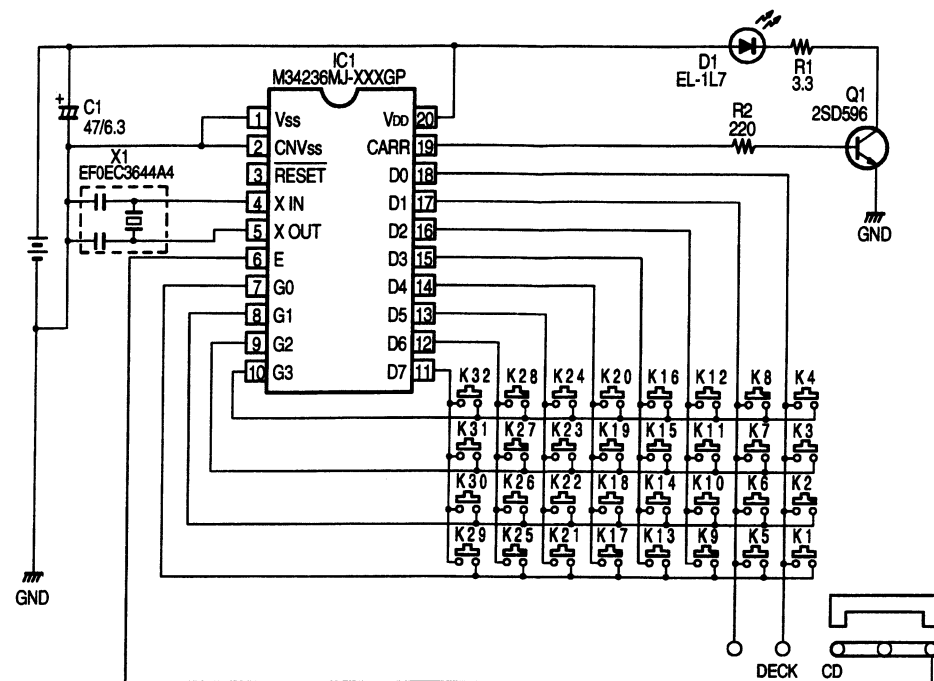


RC-840 Transmitting Code Table


CD

| KEY No. | Function | Classification | System address | | | | | Data code | | | | | Extension | | Mask | Judge | |
|---------|--------------------|----------------|----------------|----|----|----|----|-----------|----|----|----|-----|-----------|-----|------|-------|-----|
| | | | C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | C9 | C10 | C11 | C12 | C13 | | C14 |
| 1 | POWER ON/OFF | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 2 | DISK SKIP+ | CD | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 | 0 |
| 3 | STOP■ | CD | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 4 | PLAY▶ | CD | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 5 | AUTO SEARCH ◀◀ | CD | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 6 | PAUSE | CD | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 7 | AUTO SEARTH ▶▶ | CD | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 8 | PRESET. DOWN | TUNER | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 |
| 9 | PRESET CH. UP | TUNER | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 |
| 10 | CD | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 11 | PHOTO | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 12 | SHIFT | TUNER | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 13 | TUNER | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 14 | VCR | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 15 | VDP/DBS | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 16 | STEREO | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 17 | SURR. MODE | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | 0 | 0 |
| 18 | V.AUX/GAME | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 19 | DAT/TAPE MONITOR | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 0 |
| 20 | T. TONE | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 0 |
| 21 | DELAY+ | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 0 |
| 22 | MUTING | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 23 | SCREEN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 0 | 1 | 1 | 0 | 0 |
| 24 | PANEL | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 1 | 1 | 0 | 0 |
| 25 | CENTER VOLUME UP | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 26 | CENTER VOLUME DOWN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 27 | REAR VOLUME UP | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 28 | REAR VOLUME DOWN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 29 | MASTER VOLUME UP | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 30 | MASTER VOLUME DOWN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |

DECK

| KEY No. | Function | Classification | System address | | | | | Data code | | | | | Extension | | Mask | Judge | |
|---------|--------------------|----------------|----------------|----|----|----|----|-----------|----|----|----|-----|-----------|-----|------|-------|-----|
| | | | C1 | C2 | C3 | C4 | C5 | C6 | C7 | C8 | C9 | C10 | C11 | C12 | C13 | | C14 |
| 1 | POWER ON/OFF | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 2 | PLAY ◀ | DECK | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 0 | 1 | 0 | 1 | 0 | 0 | 0 |
| 3 | STOP ■ | DECK | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 4 | PLAY ▶ | DECK | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 5 | REW ◀◀ | DECK | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 6 | A/B | DECK | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 |
| 7 | FF ▶▶ | DECK | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 1 | 0 | 0 | 0 |
| 8 | PRESET CH. DOWN | TUNER | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 |
| 9 | PRESET CH. UP | TUNER | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 |
| 10 | CD | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 11 | PHOTO | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 12 | SHIFT | TUNER | 0 | 0 | 1 | 1 | 0 | 1 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 13 | TUNER | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| 14 | VCR | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 15 | VDP/DBS | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 16 | STEREO | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | 0 | 0 |
| 17 | SURR. MODE | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | 0 | 0 |
| 18 | V. AUX/GAME | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 0 | 0 |
| 19 | DAT/TAPE MONITOR | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 0 |
| 20 | T. TONE | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 0 |
| 21 | DELAY+ | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 1 | 1 | 1 | 0 | 0 |
| 22 | MUTING | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 23 | SCREEN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 0 | 1 | 1 | 0 | 0 |
| 24 | PANEL | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 1 | 1 | 0 | 0 |
| 25 | CENTER VOLUME UP | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 26 | CENTER VOLUME DOWN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 27 | REAR VOLUME UP | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 28 | REAR VOLUME DOWN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 29 | MASTER VOLUME UP | AV. AMP | 0 | 1 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |
| 30 | MASTER VOLUME DOWN | AV. AMP | 0 | 1 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 1 | 1 | 1 | 1 | 0 | 0 |

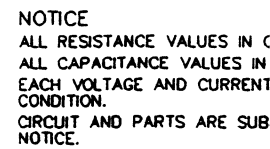

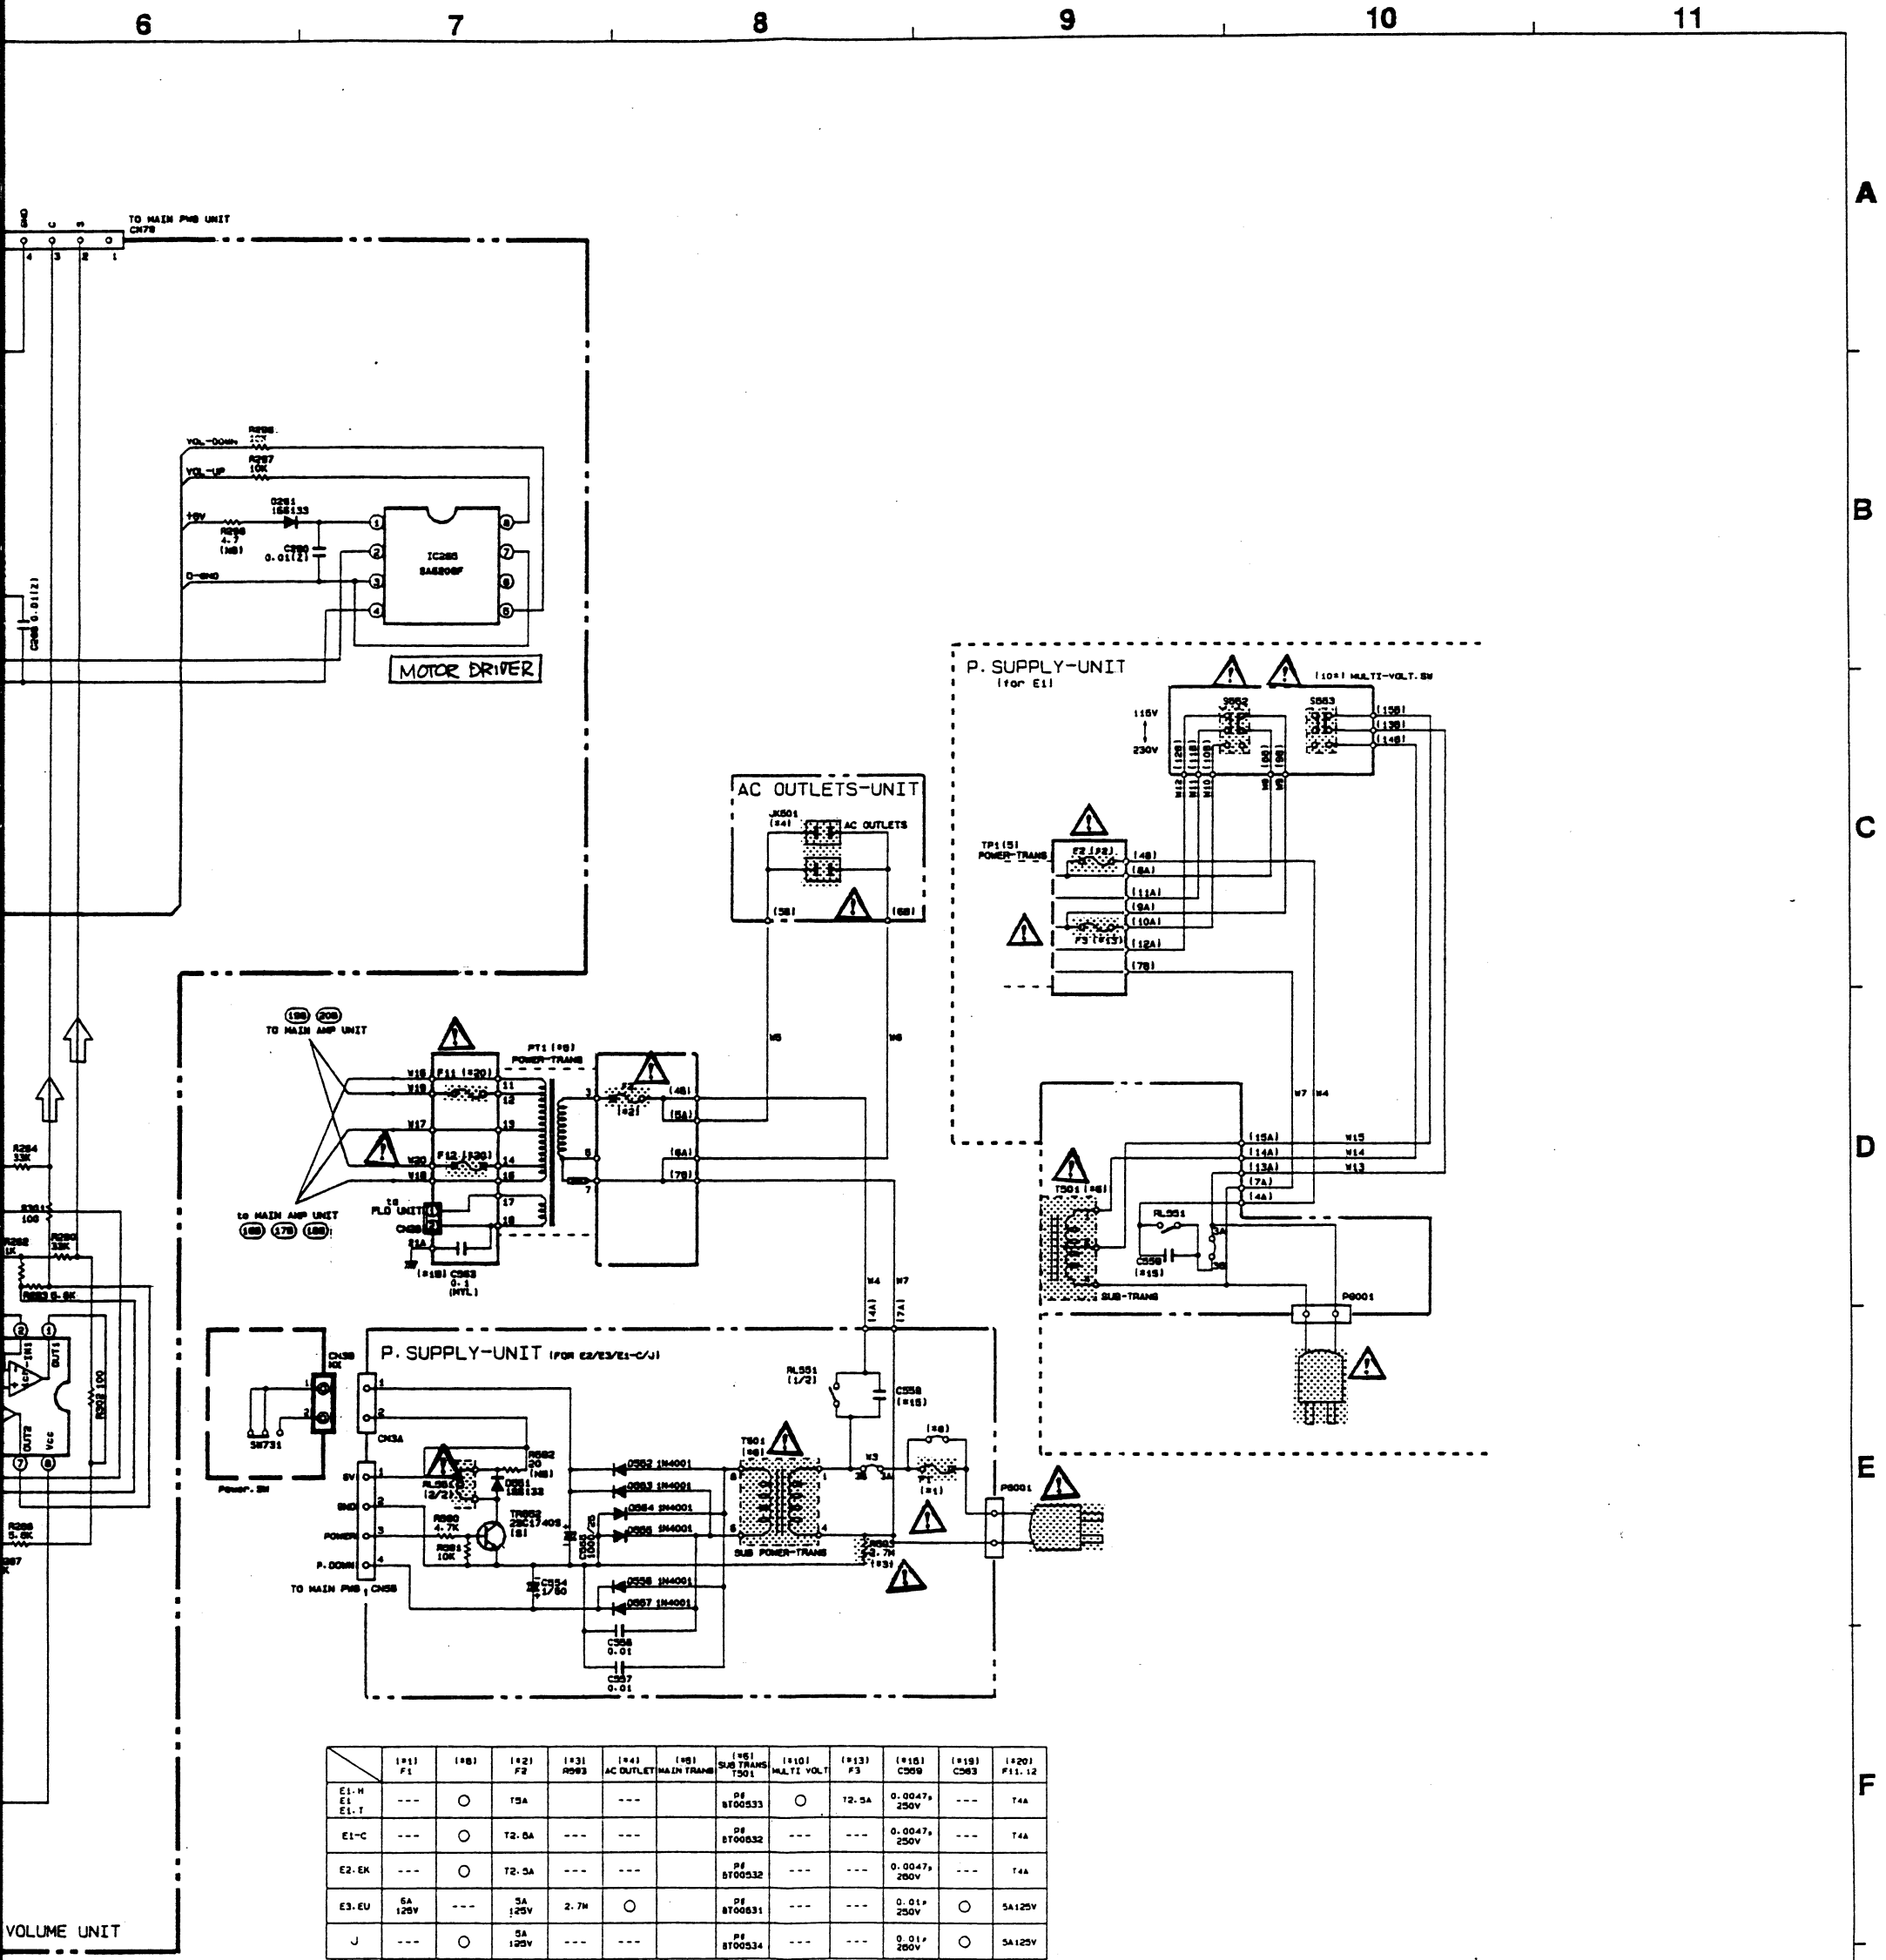


NOTICE
ALL RESISTANCE VALUES IN OHM. K=1,000 OHM M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
NOTICE.


WARNING:
Parts marked with this symbol have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a
leakage current check or (2) a line to chassis resistance check. If the leakage
current exceeds 0.5 milliamps, or if the resistance from chassis to either side
of the power cord is less than 240 kohms, the unit is defective.

WARNING:
DO NOT return the unit to the customer unit the problem is located and
corrected.

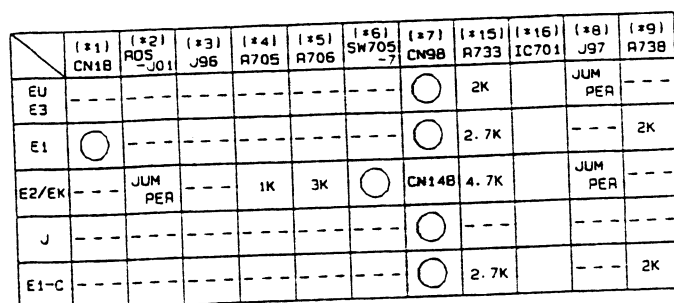

NOTICE
ALL RESISTANCE
ALL CAPACITANCE
EACH VOLTAGE
CONDITION.
CIRCUIT AND F
NOTICE.

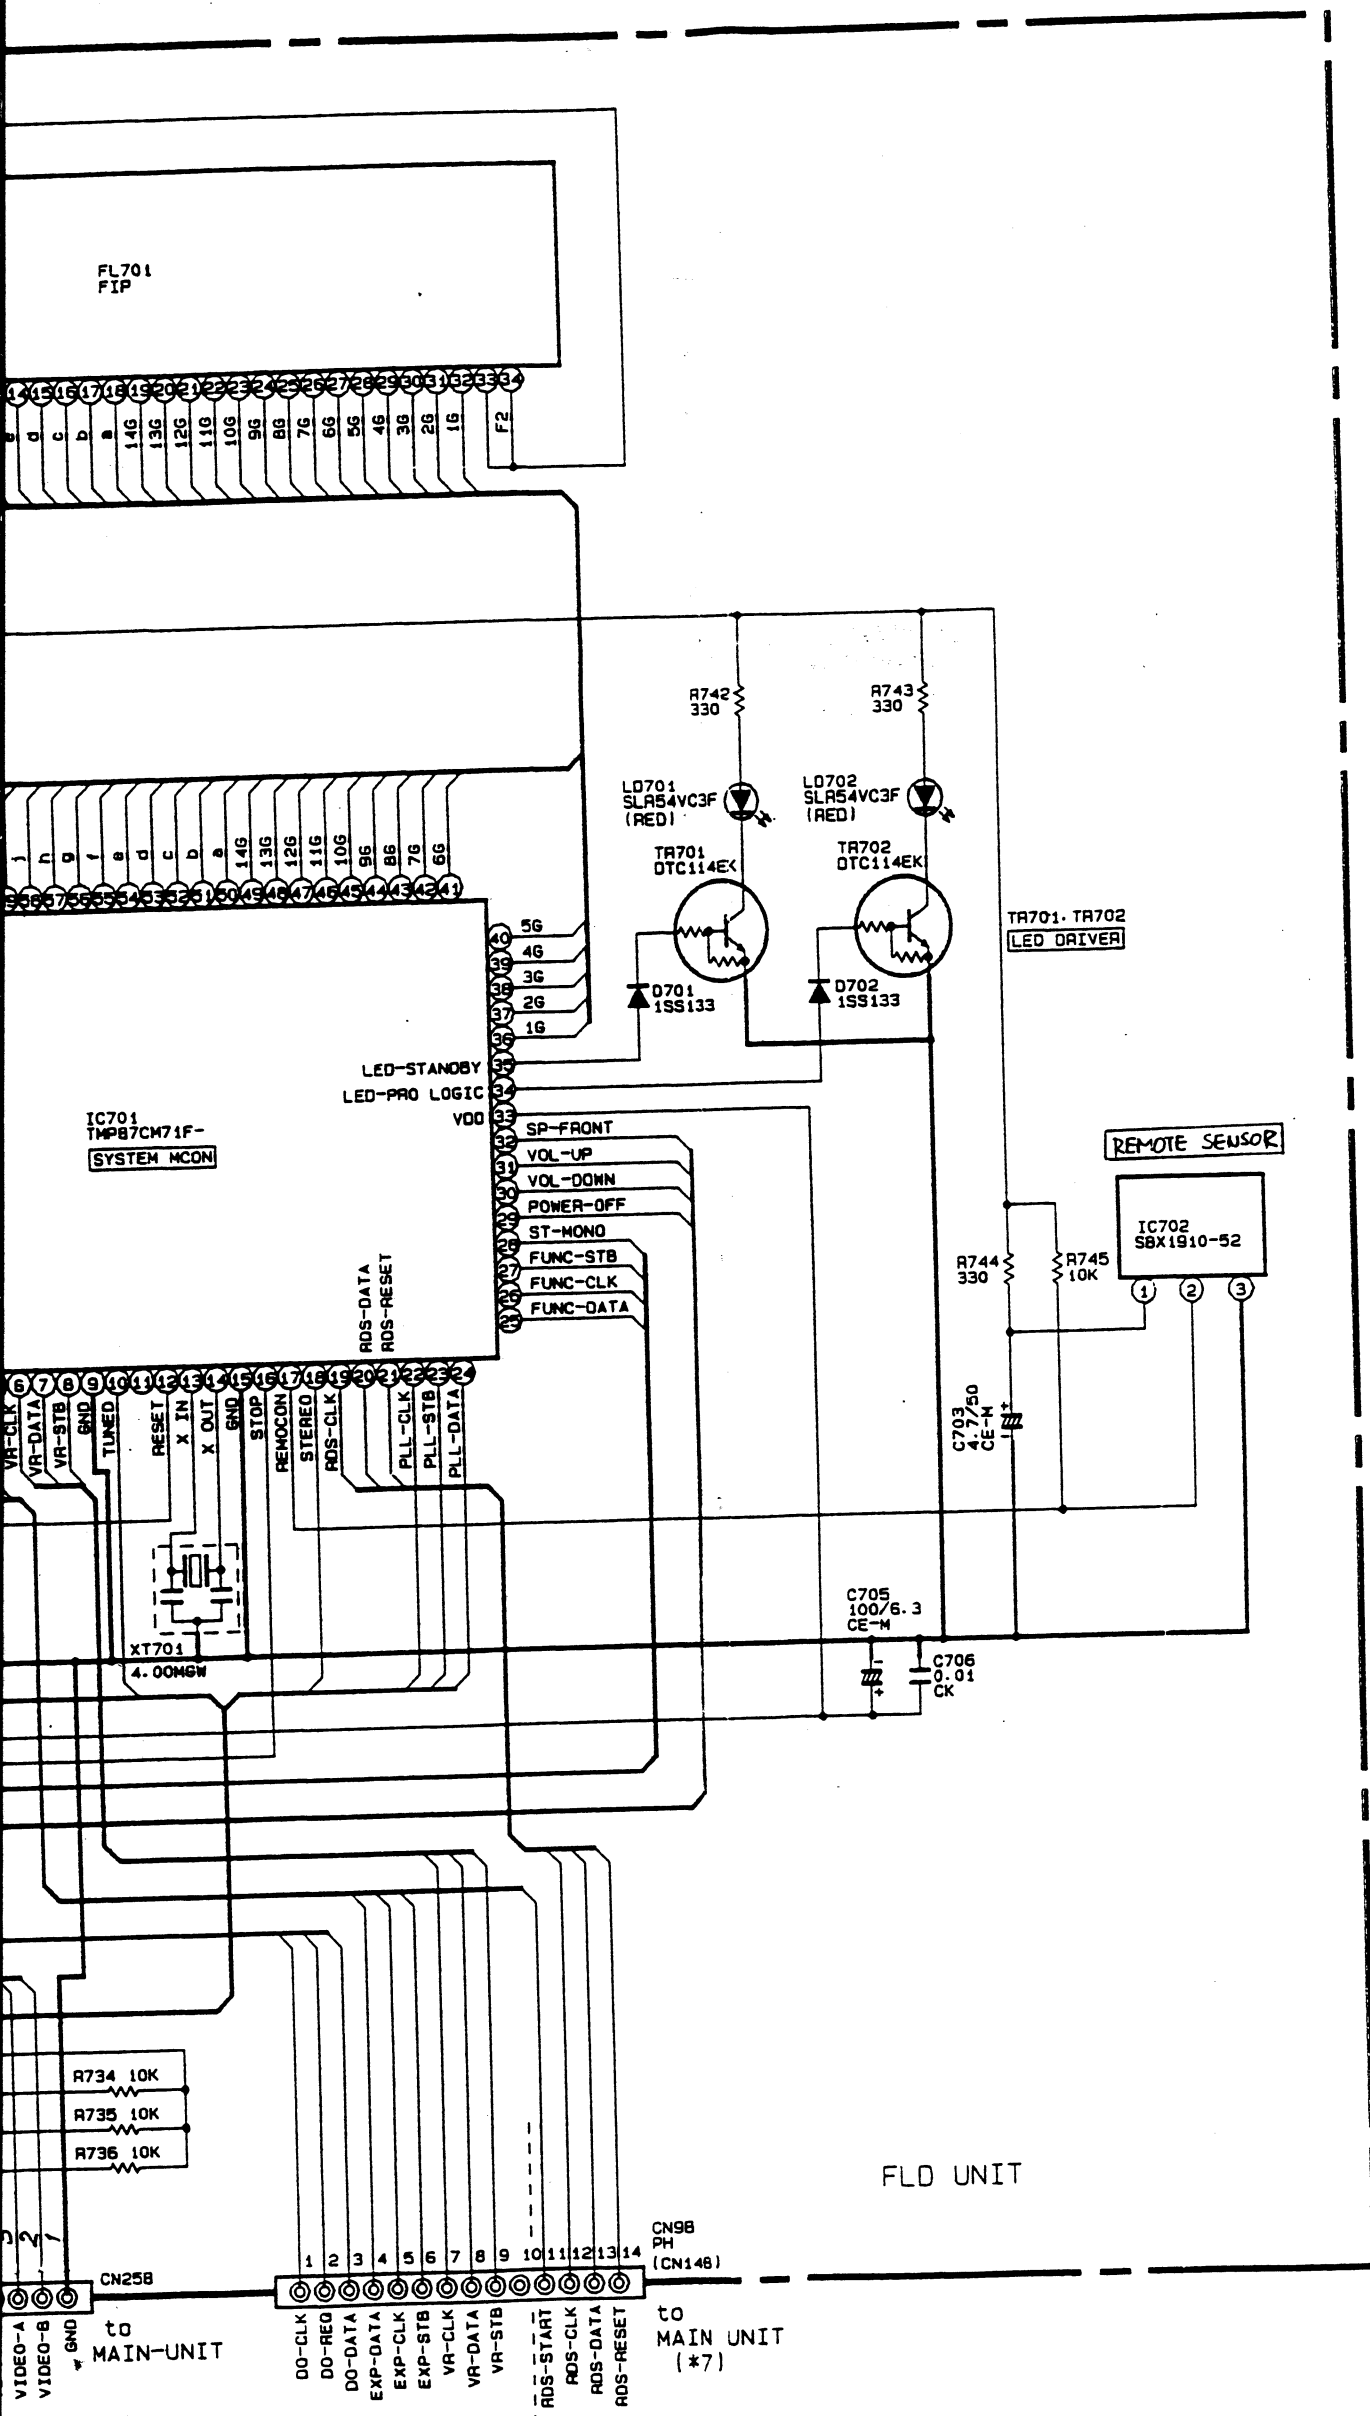


NOTICE
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
 CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
 NOTICE.


WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a
 leakage current check or (2) a line to chassis resistance check. If the leakage
 current exceeds 0.5 milliamps, or if the resistance from chassis to either side
 of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer unit the problem is located and
 corrected.

SCHEMATIC DIAGRAM (1/5)

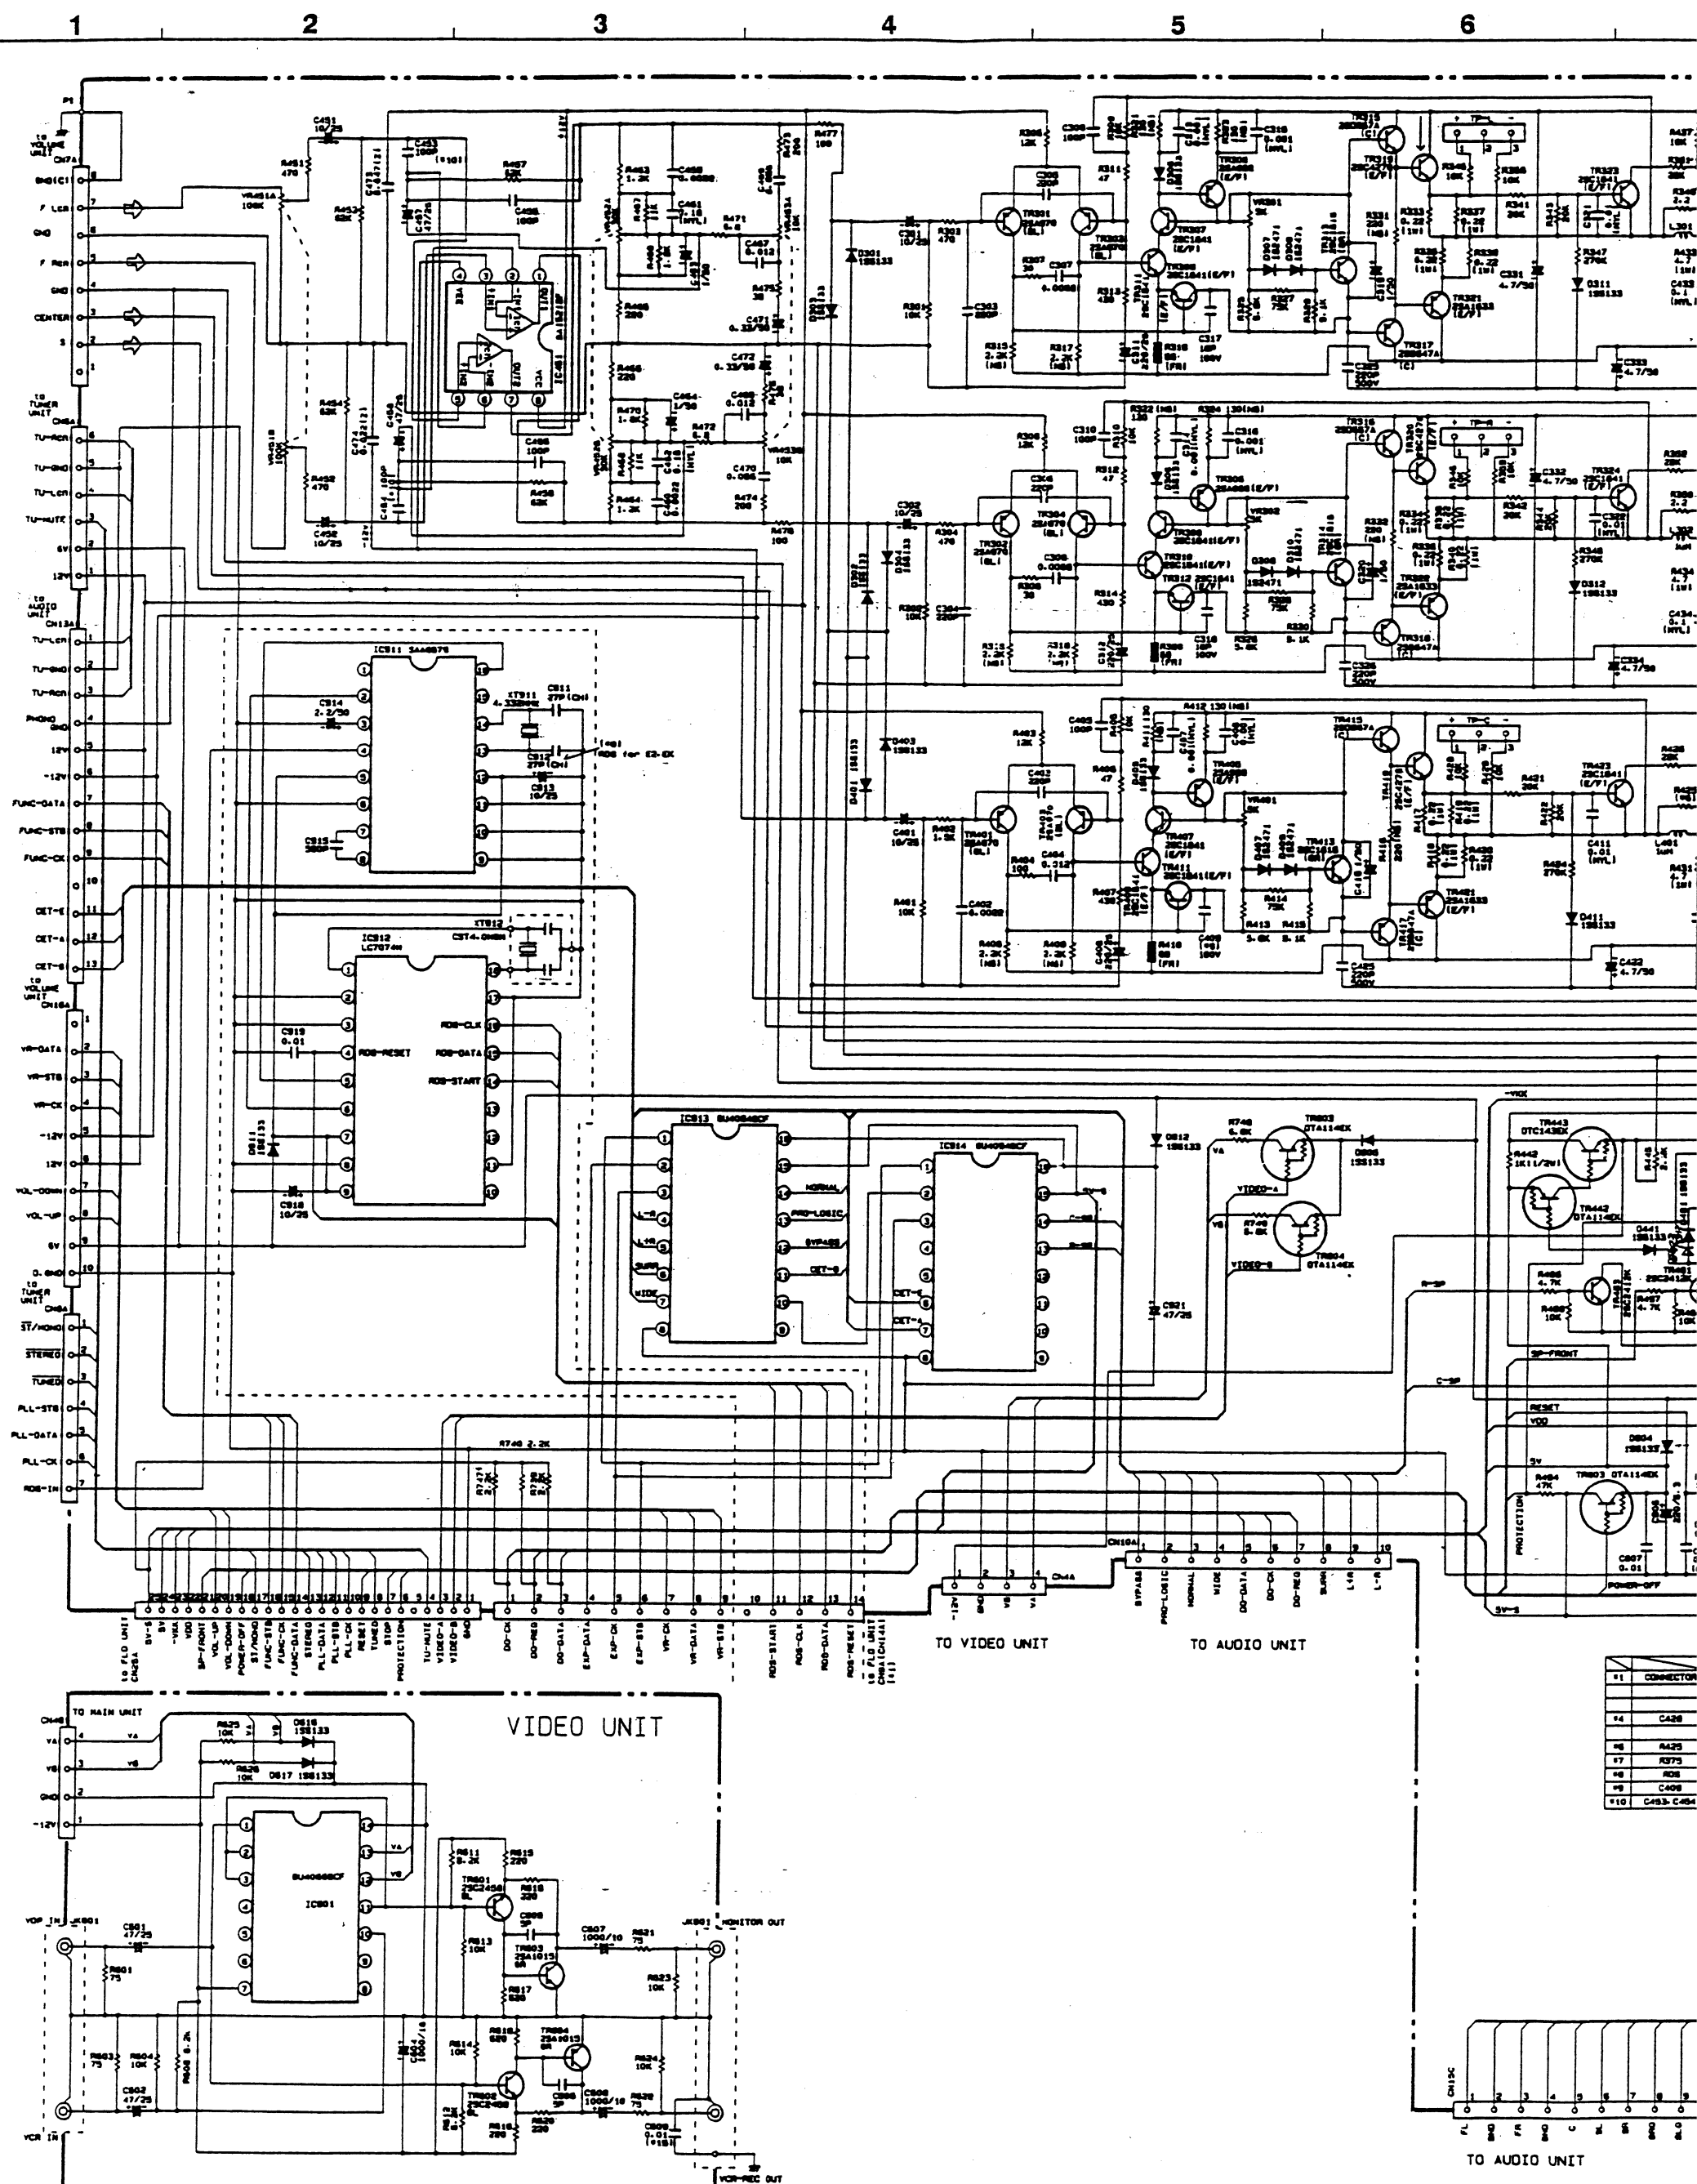

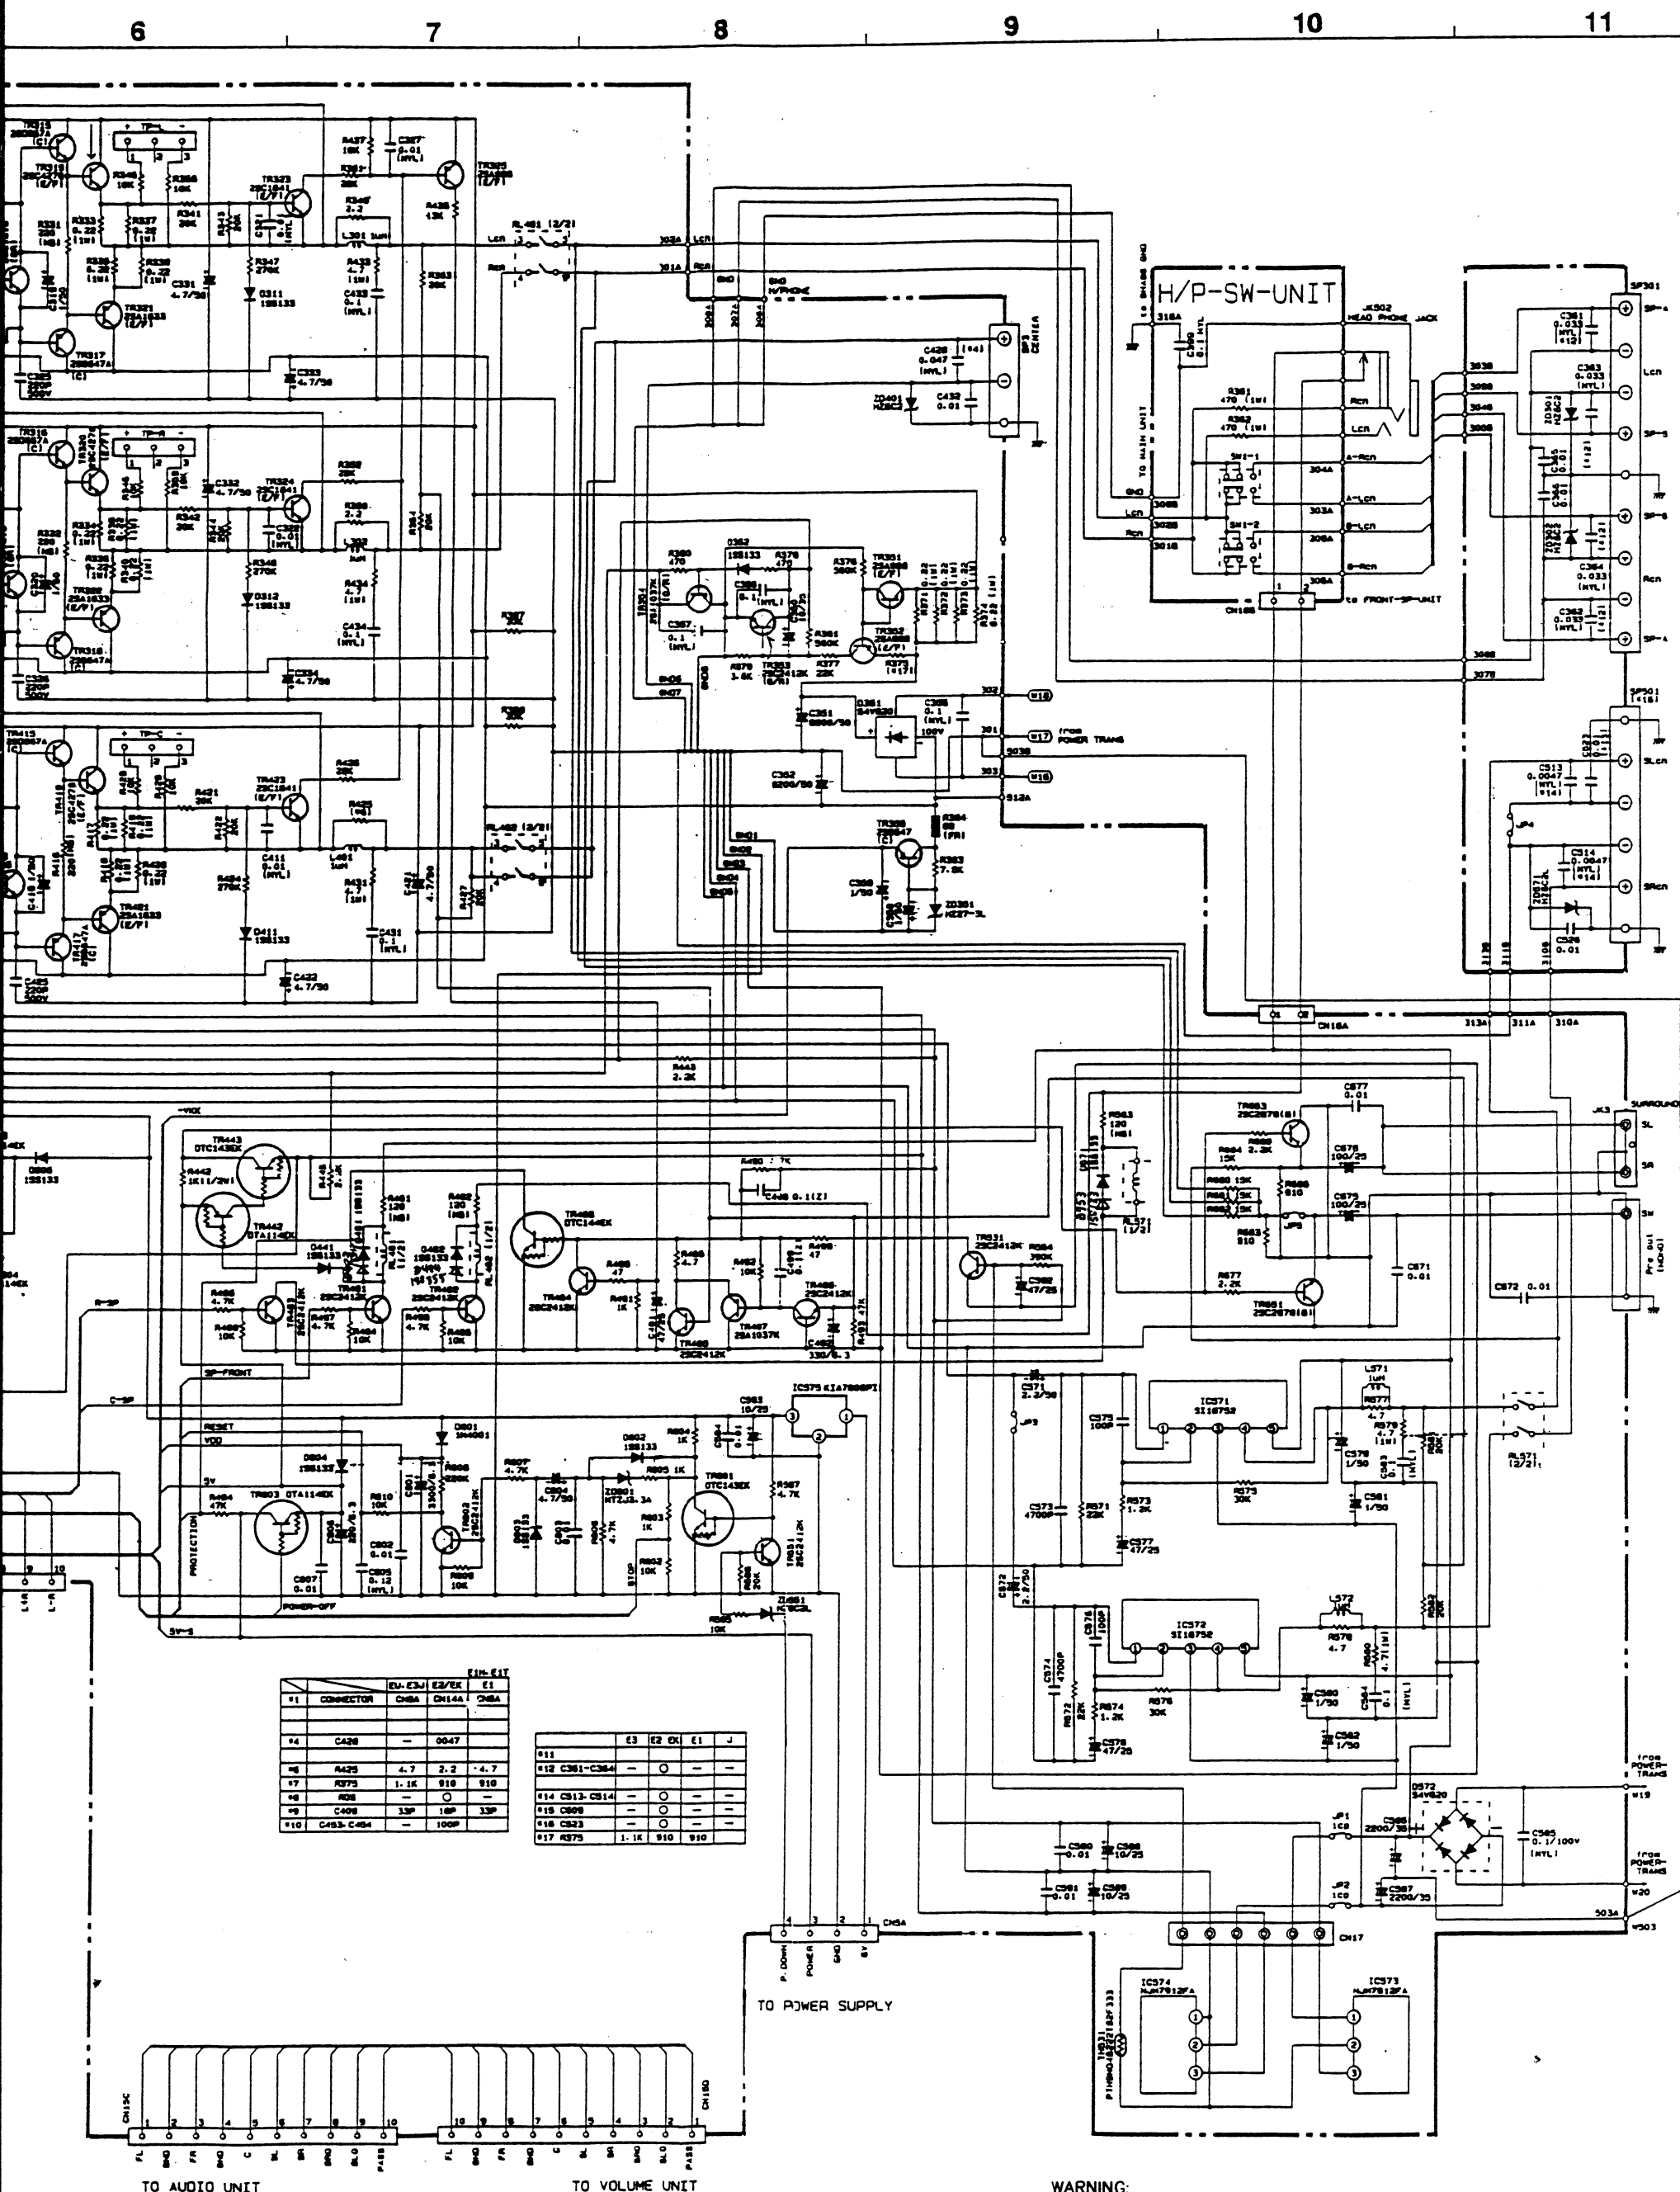

| CONNECTION | CH1 | CH2 | CH3 | CH4 |
|------------|-----|-----|-----|-----|
| 1 | CH1 | CH2 | CH3 | CH4 |
| 2 | CH1 | CH2 | CH3 | CH4 |
| 3 | CH1 | CH2 | CH3 | CH4 |
| 4 | CH1 | CH2 | CH3 | CH4 |
| 5 | CH1 | CH2 | CH3 | CH4 |
| 6 | CH1 | CH2 | CH3 | CH4 |
| 7 | CH1 | CH2 | CH3 | CH4 |
| 8 | CH1 | CH2 | CH3 | CH4 |
| 9 | CH1 | CH2 | CH3 | CH4 |
| 10 | CH1 | CH2 | CH3 | CH4 |


| CONNECTION | CH1 | CH2 | CH3 | CH4 |
|------------|-----|-----|-----|-----|
| 1 | CH1 | CH2 | CH3 | CH4 |
| 2 | CH1 | CH2 | CH3 | CH4 |
| 3 | CH1 | CH2 | CH3 | CH4 |
| 4 | CH1 | CH2 | CH3 | CH4 |
| 5 | CH1 | CH2 | CH3 | CH4 |
| 6 | CH1 | CH2 | CH3 | CH4 |
| 7 | CH1 | CH2 | CH3 | CH4 |
| 8 | CH1 | CH2 | CH3 | CH4 |
| 9 | CH1 | CH2 | CH3 | CH4 |
| 10 | CH1 | CH2 | CH3 | CH4 |


NOTICE
ALL RESISTANCE VALUES IN OHM. K=1,000 OHM M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
NOTICE.

WARNING:
Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a
leakage current check or (2) a line to chassis resistance check. If the leakage
current exceeds 0.5 milliamps, or if the resistance from chassis to either side
of the power cord is less than 240 kohms, the unit is defective.

WARNING:
DO NOT return the unit to the customer unit the problem is located and
corrected.

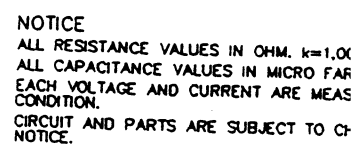

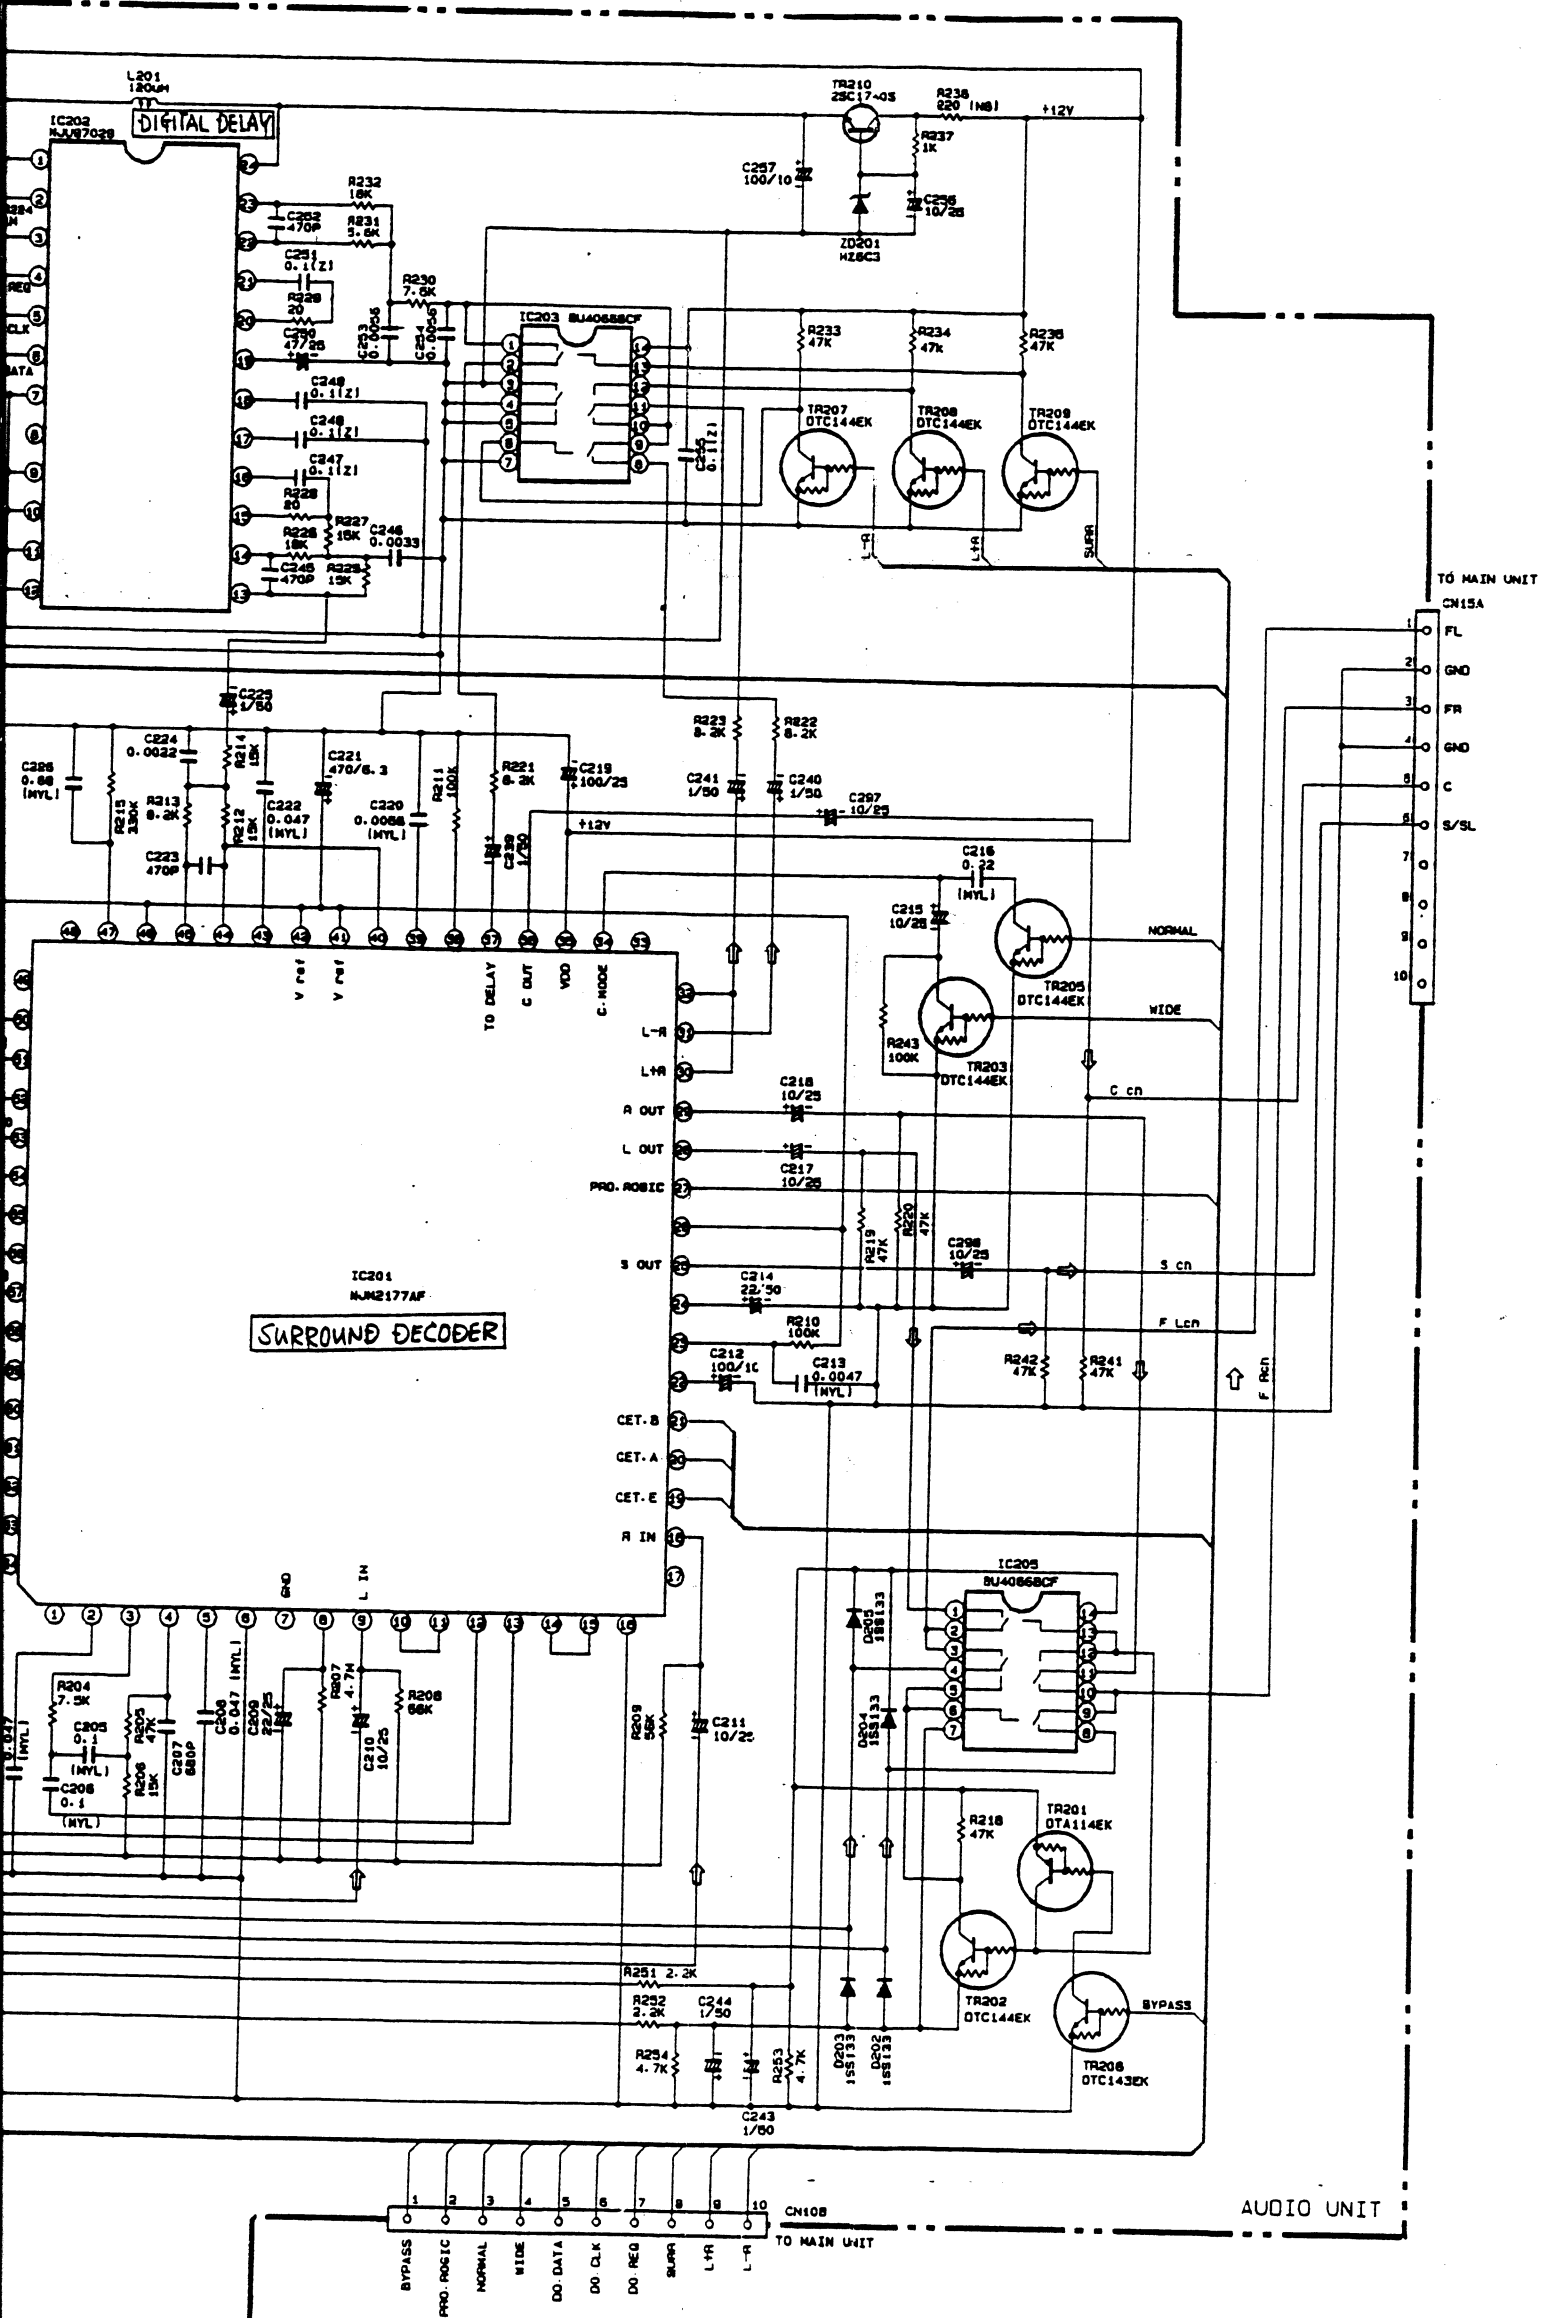

NOTICE

ALL RESISTANCE VALUES IN OHM, K=1,000 OHM M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD, P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
CONDITION.

CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
NOTICE.

WARNING:

Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.


CAUTION:

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:

DO NOT return the unit to the customer unit the problem is located and corrected.

SCHEMATIC DIAGRAM (5/5)

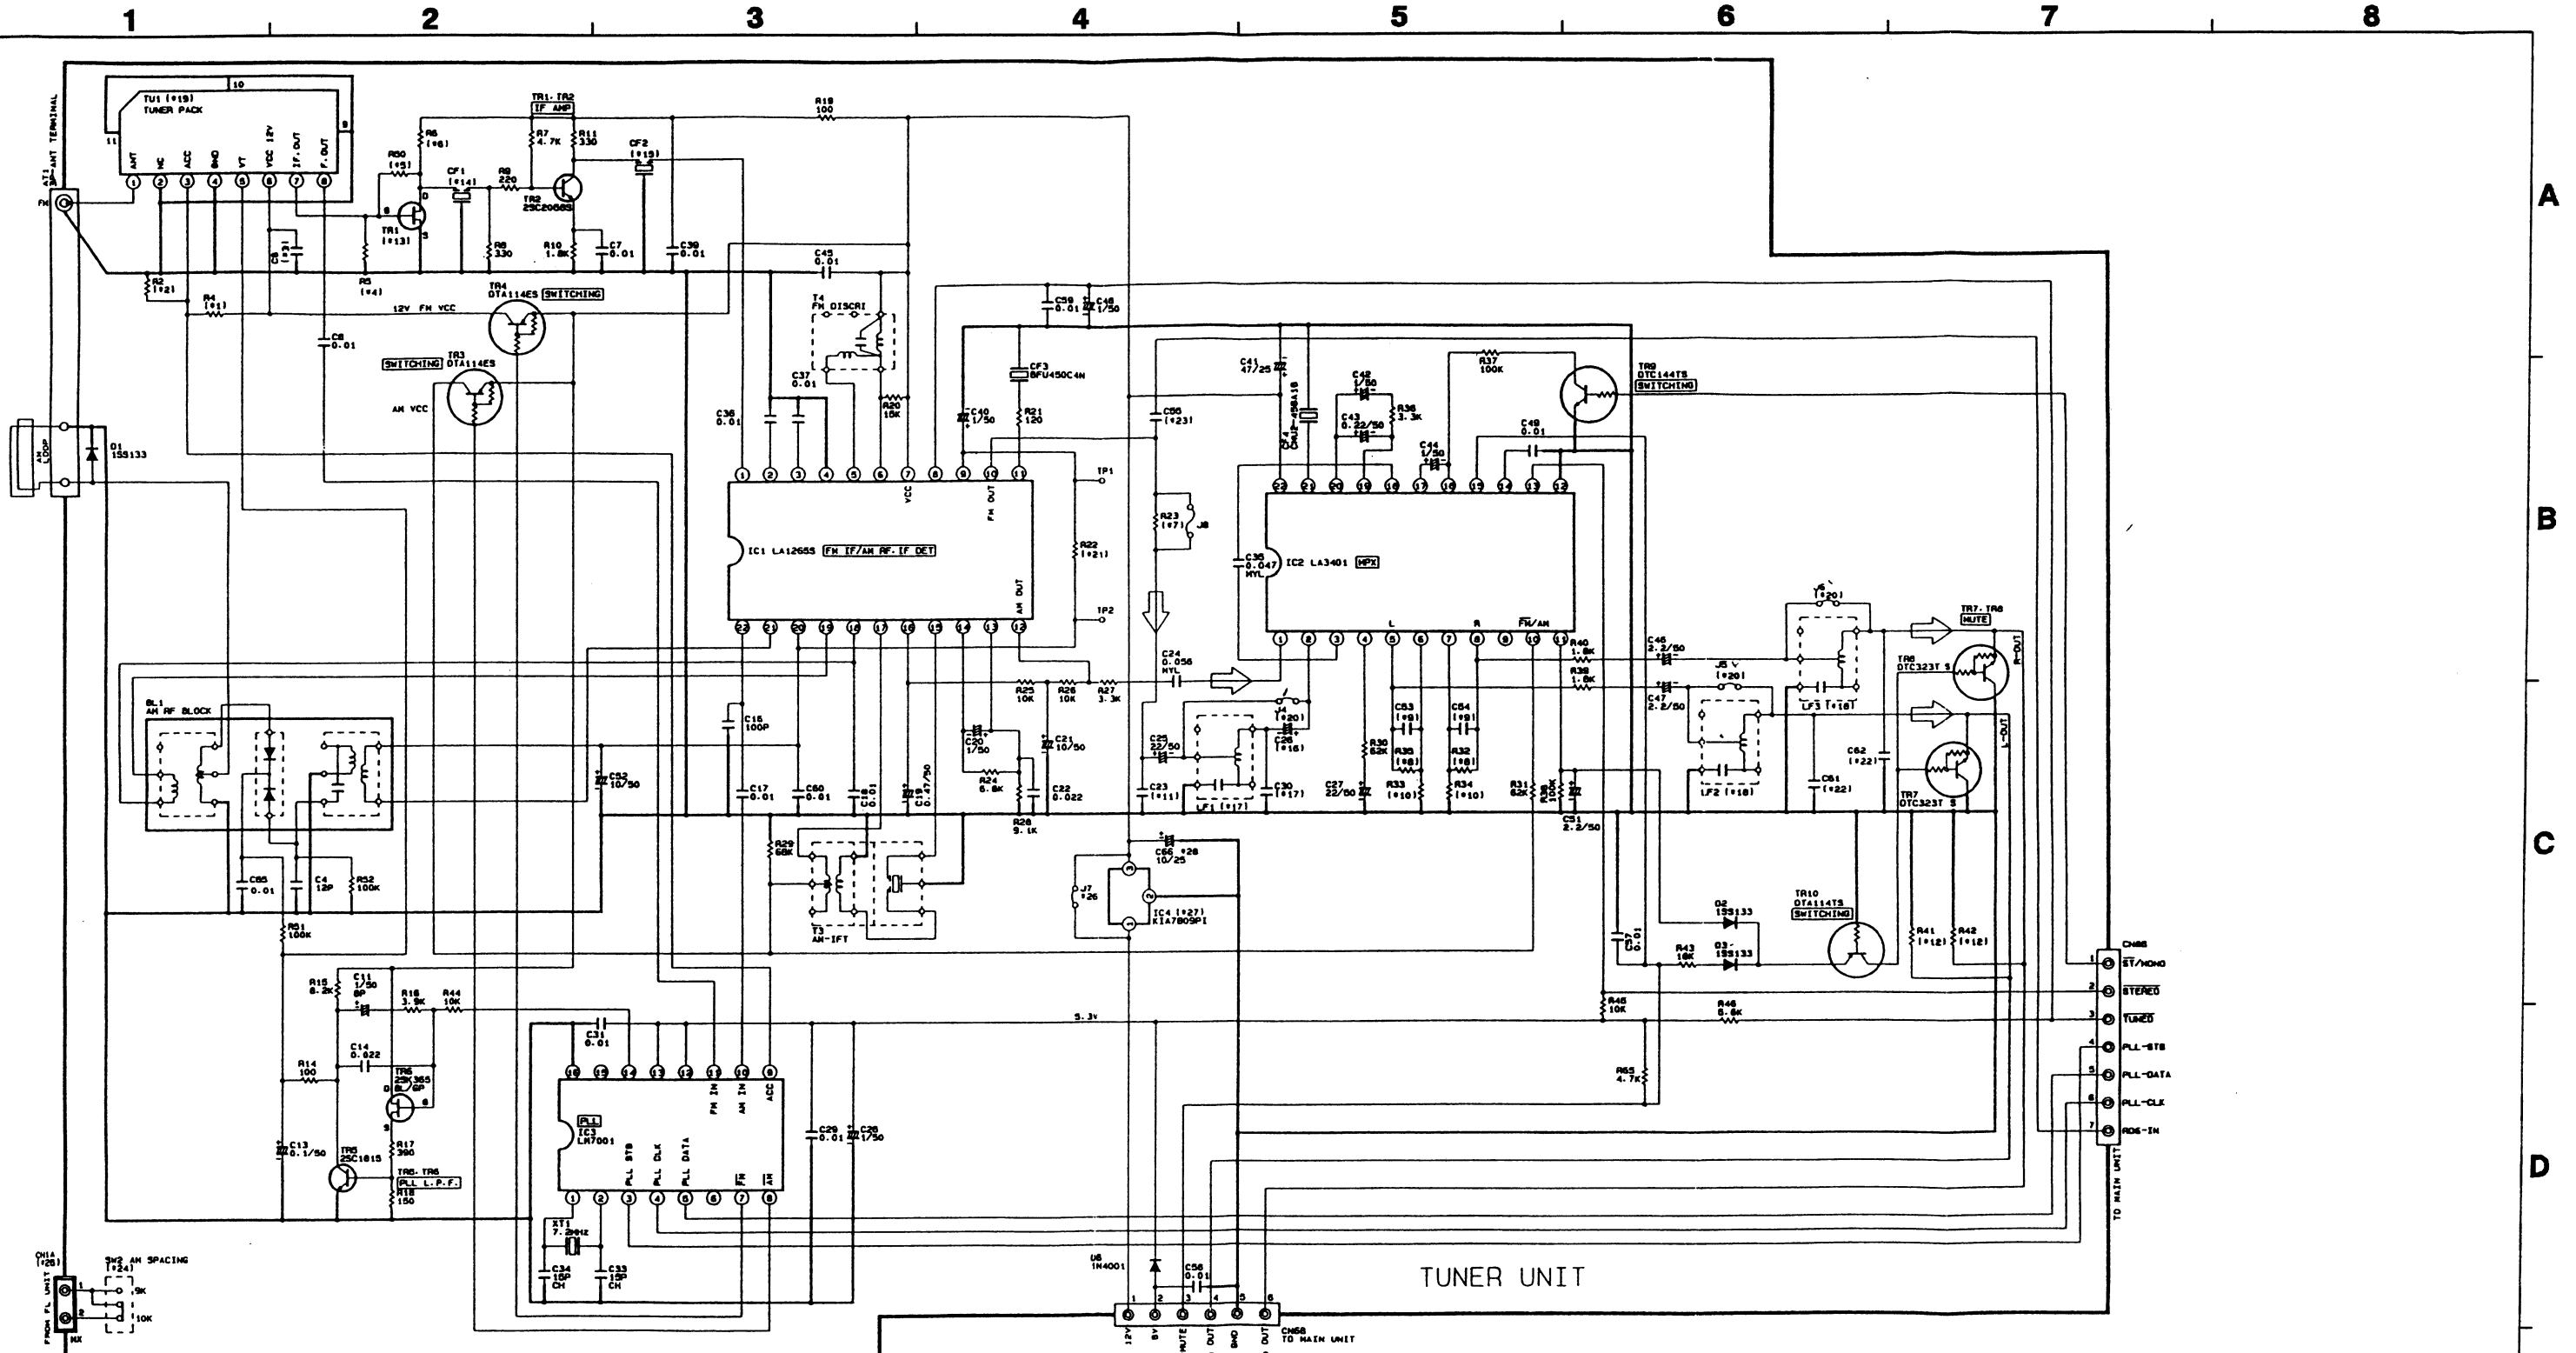

NOTICE

ALL RESISTANCE VALUES IN OHM. K=1,000 OHM M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT
CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR
NOTICE.

WARNING:

Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

CAUTION:

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:

DO NOT return the unit to the customer unit the problem is located and corrected.

| | *1 | *2 | *3 | *4 | *5 | *6 | *7 | *8 | *9 | *10 | *11 | *12 | *13 | *14 | *15 | *16 | *17 | *18 | *19 | *20 | *21 | *22 | *23 | *24 | *25 | *26 | *27 | *28 |
|-----------|-----|------------|-----|----|-----|------|--------|---------|---------|---------|------|---------|------------------|------------------|------------------|-----|----------------|---------|--------|--------|-----|---------|------|-----|------|-----|-----|-----|
| | R4 | R2 | C5 | R5 | R50 | R6 | R23 | R32-R35 | C53-C54 | R33-R34 | C23 | R41-R42 | TR1 | CF1 | CF2 | C26 | LF1-C30(1560P) | LF2-LF3 | TU1 | J4-S-6 | R22 | C61-C62 | C56 | SH2 | CH14 | J7 | IC4 | C66 |
| E2/EK | 10K | 5.6K(0.01) | 390 | — | 330 | 1.2K | 100K | 330P | 180K | — | 4.7K | 25K161 | SFT10.7 HS2-A | SFT10.7 HS2-A | 22/50 | — | — | — | 4-TUNE | — | 39K | 0.0047 | 120P | — | — | — | — | — |
| E3/EU | — | — | — | 1K | 100 | — | JUMPER | 100K | 600P | 120K | 100P | 6.8K | — | SFE10.7 HA-B | SFE10.7 HS2-A | — | — | — | 3-TUNE | JUMPER | 10K | — | — | — | — | — | — | — |
| K1-K11-E1 | — | — | — | 1K | 100 | — | JUMPER | 100K | 600P | 120K | 100P | 6.8K | — | SFE10.7 HA-B | SFE10.7 HS2-A | — | — | — | 3-TUNE | JUMPER | 39K | — | — | — | — | — | — | — |
| E1-C | — | — | — | 1K | 100 | — | JUMPER | 100K | 600P | 120K | 100P | 6.8K | — | SFE10.7 HA-B | SFE10.7 HS2-A | — | — | — | 3-TUNE | JUMPER | 39K | — | — | — | — | — | — | — |
| J | — | — | — | 1K | 100 | — | JUMPER | 150K | 330P | 180K | 100P | 6.8K | — | SFE10.7 HA-B | SFE10.7 HS2-A | — | — | — | 3-TUNE | JUMPER | 10K | — | — | — | — | — | — | — |